

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.																								
OA3	50	37	*70	2	11	3	5	1	ID13	2	40	*70	7	1	2	6	1	IS5	2	40	54	7	1	5	6	1																								
*Normally Shows Short on Position No. 11.									*Normally shows short position 5-11									IT4									2	40	50	7	1	5	6	1																
*Normally Shows Grid Emission.									1 37 *95 3 8 5 10 1									IT5									1	37	54	7	2	12	5	1																
OA3A	50	37	*70	2	11	3	5	1	*No short test.									IUA									2	40	49	7	1	5	6	1																
*Normally shows short on position 11									*Tube good if it reads 20 or more.									IU5									2	40	54	7	1	12	6	1																
*Normally shows grid emission									ID-K1									1	39	*75	4	5	1	10	1	IU2									1	39	99	5	4	12	1	1								
OB3	50	37	*69	2	11	3	5	1	*Insert leads into pins 4 & 5 of socket 40.									IU2									1	24	56																					
*Normally Shows Short on Position No. 11.									*Top cap goes to top lead									2AF4									2	40	*24	4	3	2	6																	
*Normally Shows Grid Emission.									*Tube good if it reads 20 or more.									2AH2									2	40	35																					
OC3	50	37	*85	2	11	3	5	1	IDK29	1	39	*75	4	5	1	10	1	2AS2									2	40	57																					
*Normally Shows Short on Position No. 11.									*Insert leads into pins 4 & 5 of socket 40.									2AV2									2	35	*99	4	5	12	1	1																
*Normally Shows Grid Emission.									Top cap goes to top lead.									*Tube good if it reads 55 or more.									2A22									2	24	35												
OC3A	50	37	*85	2	11	3	5	1	IDN5	2	40	54	7	1	12	6	1	2B3									2	32	30																					
*Normally shows short on position 11									IDY4									1	40	*24	4	3	2	6	1	2BA2									2	39	88	4	5	12	1	1								
*Normally shows grid emission									*Normally Shows Short Position 1-7									2BI2									2	24	52																					
OD3	50	37	*99	2	11	3	5	1	IF1	1	40	58	7	1	5	6	1	2BN4									2	40	*33	4	3	2	7	1																
*Normally Shows Short on Position No. 11.									IF2									1	40	55	7	1	5	6	1	*Normally Shows Short Position 1-6.																								
*Normally Shows Grid Emission.									IF3									1	40	55	7	1	5	6	1	2BU2									2	37	*80	2	7	12	10	1								
*Tube Good If it Reads 60 or More.									IF5									2	37	48	7	2	12	5	1	*Tube good if it reads 30 or more.																								
OD3A	50	37	*99	2	11	3	5	1	IF7	2	37	54	7	2	12	10	1	2C51									6	38	29	9	1	12	3	1																
*Normally shows short on position 11									IFD1									1	40	58	7	1	12	6	1	2CN3A									2	32	30													
*Normally shows grid emission									IFD9									1	40	56	7	1	12	6	1	2CW4									2	41	*87	10	12	12	2	1								
*Tube good if reads 60 or more									IG3									1	32	55	7	2	12	4	1	*For Grid Emission Turn D Switch to Position 4.																								
OZ4	6	31	8					1	IG6	1	37	55	7	2	12	4	1	2CY5									2	1	54																					
IA3									2	40	*70	7	1	2	6	1	2D21									6	40	32	4	3	5	1	1																	
*Normally Shows Short on Position 5 and 11.									IH2									1	24	58	7	2	12	5	1	2DL4									2	38	*85	4	5	7	8	1								
IA5	2	37	53	7	2	12	5	1	IH5									1	37	55	7	2	12	10	1	*Normally shows short position 1-3-6-9.																								
IA7	2	37	54	7	2	12	5	1	IH6									2	37	54	7	2	12	6	1	2DS4									2	41	*87	10	12	12	2	1								
IA86	1	40	54	7	1	12	4	1	IH35									1	40	54	7	1	12	4	1	*For grid emission turn switch D to position 4.																								
IAC6	1	40	48	7	1	12	4	1	IJ3	1	32	88					1	2DX4									2	40	*62	3	4	1	7	1																
IAO2	1	40	93					1	IJ6	2	37	53	7	2	12	4	1	*Normally Shows Short Position 2-6																																
IAF4	1	40	50	7	1	5	6	1	IK3									1	32	90						2DY4									2	40	*24	4	3	2	6	1								
IAH5	1	40	58	7	1	12	6	1	IL4									2	40	52	7	1	5	6	1	*Normally Shows Short Position 1-7																								
IAJ4									1	40	58	7	1	5	6	1	IL6									2	36	53	8	1	12	6	1	2DZ4									2	40	31	3	4	6	2	1
IAN5									1	40	40	7	1	5	6	1	ILA4									2	36	58	8	1	12	4	1	*Normally shows short position 1-7																
IAU2									1	39	*100	5	4	12	1	1	ILA6									2	36	58	8	1	12	4	1	2E26									6	37	*40	7	2	1	5	1
*Tube good if it reads 20 or more.									ILB4									2	36	53	8	1	12	6	1	*Normally Shows Short Position 4-6.																								
IAU3	1	32	95					1	ILC5									1	36	54	8	1	5	6	1	2EA5									2	1	80													
IAX2	1	24	93					1	ILC6									2	36	59	8	1	12	4	1	2EG4									2	41	*72	10	12	12	2	1								
IAY2	1	*38	95	1	9	12	10	1	ILD5									2	36	53	8	1	12	6	1	*For grid emission turn D switch to position 4.																								
*Connect two leads from IAY2 bottom pins to pin holes No. 1 and 9 of Socket No. 38.									ILE3									1	36	55	8	1	12	6	1	2EN5									2	5	62													
IB3	1	32	55					1	ILG5									2	36	50	8	1	5	6	1	2ER5									2	40	33	4	3	1	2	1								
IB7	1	37	55	7	2	12	5	1	ILH4									2	36	52	8	1	12	6	1	2ES5									2	40	33	4	3	1	2	1								
IBC2	1	24	57					1	ILN5									2	36	50	8	1	5	6	1	2EV5									2	1	57													
IBG2	1	39	*75	4	5	1	10	1	IN2-A									1	32	53						2FH5									2	40	33	4	3	1	2	1								
*Insert leads into pins 4 & 5 of socket 40.									IN5									2	37	53	7	2	12	10	1	2FG5									2	40	33	4	3	1	2	1								
Top cap goes to top lead.									IP5									2	37	53	7	2	12	10	1	2FQ5A									2	40	31	4	3	1	2	1								
*Tube good if it reads 20 or more.									IP10									3	40	*48	7	1	5	3	1	2FS5									2	1	99													
*Tube good if it reads 40 or more.									*Normally Shows Short Position 2-6.									2FV6									2	1	54																					
IBH2	1	*38	95	1	9	12	10	1	IP11									3	40	45	7	1	5	6	1	2FY5									2	40	33	4	3	1	2	1								
*Connect two leads from solder lugs of the IBH2 to pin holes No. 1 and 9 of Socket No. 38.									IO5									2	37	40	7	2	12	5	1	2GK5									2	40	25	4	3	1	2	1								
IBK2	1	24	*53					1	IR4									2	36	60	8	1	12	4	1	2GU5									2	40	27	3	4	2	1	1								
*Tube good if it reads 20 or more.									IR5									2	40	53	7	1	5	4	1	2GW5									2	40	29	3	4	6	2	1								
IBQ2	1	24	56					1	IR-K23									1	24	35						2HA5									2	40	27	3	4	2	1	1								
IBX2	1	24	56					1	IR-K41									1	24	*53						2HK5									2	40	27	3	4	12	1	1								
IBY2	1	40	*99	2	7	7	10	1	IS2-A									1	24	35						2HM5									2	40	27	3	4	2	1	1								
*Tube good if it reads 20 or more.									IS4									2	40	*44	7	1	5	3	1	2HQ5									2	40	25	3	4	7	1	1								
IC1	1	40	57	7	1	5	4	1	*Normally shows short position 2-6.									2HR8									2	38	33	4	5	2	9	1																
IC2	1	40	48	7	1	12	4	1	3A2									3	24	35						2T4									2	40	*33	4	3	2	6	1								
IC3	1	40	54	7	1	12	4	1	3A3									3	32	54						*Normally Shows Short Position 1-7.																								
IC5	2	37	48	7	2	12	5	1	3A3A									3	32	54																														
IC7	2	37	54	7	2	12	5	1																																										
ID5GT	2	37	54	7	2	12	10	1																																										
ID8	2	37	53	7	2	12	5	1																																										

OA3-3A3A

$\frac{1}{1}$
 $\frac{2}{1}$
 $\frac{1}{2}$
 $\frac{1}{1}$
 $\frac{2}{1}$
 $\frac{1}{1}$
 $\frac{1}{2}$
 $\frac{1}{1}$
 $\frac{1}{2}$
 $\frac{1}{2}$
 $\frac{1}{2}$
 $\frac{1}{1}$
 $\frac{1}{1}$
 $\frac{1}{1}$
 $\frac{1}{1}$

$\frac{1}{1}$ $\frac{2}{1}$ $\frac{1}{2}$ $\frac{1}{1}$ $\frac{2}{1}$ $\frac{1}{1}$ $\frac{1}{2}$ $\frac{1}{1}$ $\frac{1}{2}$ $\frac{2}{1}$ $\frac{1}{1}$ $\frac{1}{2}$ $\frac{1}{1}$ $\frac{1}{1}$ $\frac{1}{1}$ $\frac{1}{1}$ $\frac{1}{1}$

3A4-4HC7

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
4HG8	4	38	25	4	5	3	2	1	5BK7	5	8	55					1	5HG8	5	38	24	4	5	3	2	1
4HK5	4	40	27	3	4	12	1	1	5BQ5	5	23	68					1	5HZ6	5	1	83	4	5	1	6	1
4HM5	4	40	27	3	4	2	1	1	5BQ7	5	8	54					1	5J6	5	2	60					1
4HM6	4	38	24	4	5	1	2	1				54					2				60					2
4HQ5	4	40	25	3	4	7	1	1	5BR8	5	14	72					1	5JN6	5	1	61					1
4HR8	4	38	33	4	5	2	9	1				55					2	5JL6	5	1	23					1
4HS8	4	21	99					1	5BS8	5	8	54					1	5JW8	5	11	80					1
			99					2				54					2				85					2
4HT6	4	38	28	4	5	1	2	1	5BT8	5	38	33	5	4	12	8	1	5KD8	5	11	68					1
4JC6	3	38	25	4	5	1	2	1				54	5	4	12	1	1				52					2
4JD6	4	38	26	4	5	1	2	1				54	5	4	12	2	1	5KE8	5	38	24	4	5	12	2	1
4JH6	4	1	64					1	5BW8	5	38	33	5	4	2	6	1				24	4	5	12	9	1
4JK6	4	1	61					1				34	5	4	7	1	1	5KZ8	5	38	26	4	5	12	2	1
4JL6	4	1	23					1				34	5	4	7	3	1				26	4	5	12	9	1
4JW8	4	11	80					1	5BZ7	5	8	53					1	5LJ8	5	14	85					1
			85					2				53					2				60					2
4KE8	4	38	24	4	5	12	2	1	5CG8	5	14	73					1	5MB8	5	14	84					1
4KF8	4	21	92					1				57					2				61					2
			92					2	5C18	5	14	69					1	5MF8	5	35	35	1	12	6	7	1
4KN8	4	38	86	4	5	12	1	1				51					2				34	1	12	6	10	1
4KT6	4	9	52					1	5CM6	5	16	64					1	5M-HH3	5	2	56					1
4LJ8	4	14	85					1	5CM8	5	38	33	5	4	12	2	1				56					2
			60					2				38	5	4	12	9	1	5M-K9	5	40	30	3	4	12	5	1
4LU6	4	1	52					1	5CQ8	5	11	72					1	5MQ8	5	11	65					1
4MK8	4	21	98					1				55					2				66					2
4M-P12	4	1	60					1	5CR8	5	38	*32	5	4	12	2	1	5N1039A	6	1	63					1
4M-P26	4	7	81					1				*34	5	4	12	9	1	5P-29	6	29	*62					1
4R-HH2	4	8	53					2	*Normally Shows Short Position 8.								1				53					2
4R-HH8	4	38	86	4	5	12	1	1	5CU4	5	37	28	8	2	12	4	1				22					1
			90	4	5	12	6	1				28	8	2	12	6	1	5R4	5	33	22					2
4RHH15	4	8	53					1	5CZ5	5	16	60					1				22					1
5AF4	5	40	*24	4	3	2	6	1	5DB4	5	33	16					1	5RDDH1	5	38	41	5	4	12	8	1
5AF11	5	35	31	1	12	12	11	1				16					2				35	5	4	12	1	1
			31	1	12	12	6	1	5DH8	5	14	61					1				33	5	4	12	6	1
5AM8	5	38	35	1	12	12	3	1				73					2	5R-HP1	4	11	66					1
5AN8	5	13	30	5	4	12	2	1	5DJ4	5	33	16					1				55					2
			30	5	4	12	8	1				16					2	5R-HR1	5	11	52					1
5AQ5	5	3	77					1	5EA8	5	11	71					1				55					2
5AR4	5	33	10					2				56					2	5R-K16	5	38	27	4	5	12	1	1
5AS4	5	33	17					1	5EH8	5	12	71					1				27	4	5	12	8	1
			17					2				54					2	5T4	5	33	16					1
5AS8	5	38	31	5	4	12	2	1	5ES8	5	8	30					1	5T8	5	17	16					2
5AT8	5	14	77					1				30					2				90					1
5AU4	5	33	55					2	5EUR	5	38	32	5	4	12	7	1				63					2
			16					1				32	5	4	12	2	1	5U4	5	33	16					1
5AV8	5	22	62					1	5FV8	5	14	65					1				16					2
5AW4	5	33	86					1				54					2	5U8	5	11	79					1
			17					2	5GJ7	5	38	24	4	5	3	2	1				55					2
5AZ4	5	36	53	8	2	12	4	1				26	4	5	3	9	1	5U9	5	43	28	5	6	12	3	1
5B8	5	22	62					1	5GH8	5	11	68					1				32	5	6	12	10	1
			86					2				56					2	5V3	5	33	15					1
5BC3	5	42	*33	1	3	6	5	1				56					1	5V4	5	33	12					2
			**33	1	3	8	9	1	5GH8A	5	11	68					1				12					2
								1				56					2	5V6	5	29	79					1
*Normally Shows Short Position 2-3-8-9								1	5GM6	5	1	64					1	5V9	5	43	31	5	6	12	3	1
**Normally Shows Short Position 2-3-5-6								1	5GS7	5	14	80					1				30	5	6	12	8	1
5BE8	5	14	72					1				53					2	5W4	5	33	32					1
			55					2	5GX6	5	1	85					1				32					2
								1	5GX7	5	38	24	4	5	3	2	1	5X4	5	37	47	8	7	12	3	1
								1				24	4	5	3	9	1				47	8	7	12	5	1
								1	5HA7	5	35	35	1	12	5	11	1	5X8	5	12	73					1
								1				35	1	12	5	11	1				61					2
								1	5HB7	5	38	24	4	5	3	2	1	5X9	5	43	30	5	6	12	3	1
								1				24	4	5	3	9	1				30	5	6	12	10	1
								1	5HC7	5	35	*35	1	12	5	9	1	5Y3	5	33	32					1
								1				*35	1	12	5	11	1				32					2
								1									1	5Y4	5	37	52	8	7	12	3	1
								1									1				52	8	7	12	5	1

*Normal Shorts Refer to Position of "D" Switch.

4HG8-5Y4

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.
5Z4	5	33	12					1	6AL9	6	35	28	1	12	12	5	1	6AX8	6	11	73					1
			12					2																		2
5Z10	5	33	16					1	6AL11	6	35	31	1	12	12	3	1	6AY3	6	42	27	5	4	7	2	1
			16					2				27	1	12	12	8	1	6AY3B	6	42	27	5	4	7	2	1
6A8	6	37	45	7	2	1	5	1	6AM4	6	38	*96	8	7	1	5	1	6AY11	6	35	30	1	12	12	5	1
6AB4	6	40	30	4	3	12	6	1	*Normally Shows Short Position 3-4-6-9.												30	1	12	12	8	1
6AB7	6	30	74					1	6AM5	6	40	34	4	3	12	1	1				30	1	12	12	3	1
6AB8	6	38	37	5	4	12	9	1	6AM6	6	40	30	4	3	12	1	1				30	1	12	12	10	1
			44	5	4	12	2	1	6AM8	6	38	30	5	4	12	2	1	6AZ8	6	38	32	5	4	12	6	1
6AB9	6	43	79	5	6	10	2	1				30	5	4	12	8	1				36	5	4	12	9	1
			79	5	6	4	8	1	6AN4	6	40	*30	4	3	2	6	1	6B4	6	37	35	7	2	12	5	1
6AC5	6	37	40	7	2	12	5	1	*May Show Short Position 1-7.									6B6	6	37	37	7	2	12	10	1
6AC7	6	30	60					1	6AN5	6	1	26					1				58	7	2	12	4	1
6AC9	6	35	28	1	12	3	9	1	6AN6	6	40	52	7	1	12	2	1				58	7	2	12	5	1
			45	1	12	3	2	1				52	7	1	12	3	1	6B8	6	37	55	7	2	12	10	1
			35	1	12	2	3	1				52	7	1	12	4	1				65	7	2	12	4	1
6AC10	6	35	35	1	12	2	3	1	6AN8	6	13	52	7	1	12	5	1	6B10	6	35	65	7	2	12	5	1
			32	1	12	12	7	1				62					1				34	1	12	12	3	1
			32	1	12	12	9	1				61					2				34	1	12	12	5	1
			32	1	12	12	11	1	6AQ4	6	40	*29	4	3	6	1	1				34	1	12	12	8	1
6AD7	6	37	54	7	2	12	5	1	*Normally Shows Short Position 2-5.									6B31	6	5	62					1
6AD10	6	35	62	7	2	12	1	1	6AQ5	6	3	77					1				62					2
6AF3	6	15	33	1	12	12	8	1	6AQ6	6	6	89					2				62					1
6AF4	6	40	12					1	6AQ7	6	37	45	8	7	12	4	1				62					2
6AF9	6	43	27	5	6	7	1	1				58	8	7	12	1	1	6BA3	6	42	33	4	5	7	2	1
6AF11	6	35	27	5	6	2	8	1	6AQ8	6	8	70	8	7	12	3	1	6BA6	6	1	78					1
			31	1	12	12	11	1	6AR5	6	3	91					1	6BA7	6	38	33	5	4	12	2	1
			31	1	12	12	6	1	6AR6	6	37	33	8	6	12	7	1	6BA8	6	12	53					1
6AG5	6	1	35	1	12	12	3	1	6AR8	6	38	30	5	4	12	6	1				59					2
6AG7	6	30	30	1	12	12	5	1	6AR11	6	35	28	1	12	12	5	1	6BA11	6	35	29	1	12	12	4	1
6AG9	6	35	30	1	12	12	5	1	6AS5	6	4	55					1	6B-B14	6	42	*33	4	5	1	2	1
			28	1	12	12	11	1	6AS6	6	1	77					1	*Normally shows short position 3-6-7-8.								
6AG11	6	35	28	1	12	12	8	1	6AS7	6	37	35	8	7	12	1	1	6BC4	6	39	30	5	4	3	7	1
			28	1	12	12	5	1	6AS8	6	38	31	5	4	12	2	1	6BC5	6	1	74					1
			33	1	12	12	10	1				32	5	4	12	6	1	6BC7	6	38	32	5	4	12	6	1
			33	1	12	12	3	1	6AS11	6	35	32	1	12	12	11	1	6BC8	6	8	53					1
6AH4	6	37	33	7	2	12	1	1	6AT6	6	6	85					1				53					2
6AH6	6	1	58					1	6AT8	6	14	77					1	6BC32	6	6	91					1
6AH7	6	37	48	8	7	12	1	1	6AU4	6	34	10					1				78					2
6AH9	6	35	48	8	7	12	5	1	6AU5	6	28	71					1	6BD5	6	37	29	7	2	12	1	1
			37	1	12	5	2	1	6AU6	6	1	82					1	6BD6	6	1	85					1
6AJ4	6	38	30	1	12	5	6	1	6AU7	6	8	75					1	6BD11	6	35	26	1	12	12	11	1
6AJ5	6	40	36	4	3	2	1	1	6AU8	6	12	75					1				31	1	12	12	3	1
6AJ7	6	30	60					1	6AV5	6	28	72					1				31	1	12	12	6	1
6AJ8	6	38	85	5	4	12	1	1	6AV6	6	6	91					1	6BE3	6	35	26	1	12	4	10	1
6AJ9	6	43	38	5	4	12	9	1	6AV11	6	35	30	1	12	12	7	1	6BE6	6	1	91					1
6AJ9	6	43	33	5	6	12	10	1				30	1	12	12	9	1	6BE7	6	38	33	5	4	3	7	1
6AK5	6	1	63					1	6AW8	6	12	44					1	6BE8	6	14	72					1
6AK6	6	1	82					1	6AX2	6	24	88					1				55					2
6AK7	6	30	38					1	6AX3	6	35	30	1	12	10	4	1	6BF5	6	3	40					1
6AK8	6	17	90					1	6AX4	6	34	13					1	6BF6	6	6	85					1
6AK9	6	35	63					2	6AX5	6	37	44	7	2	1	5	1	6BF8	6	38	80					2
			33	1	12	6	10	1	6AX7	6	8	*85	7	2	1	3	1				25	4	5	12	1	1
6AK10	6	35	31	1	12	6	8	1	*Tube Good if it Reads 72 or More.												25	4	5	12	2	1
			32	1	12	12	7	1				30	1	12	12	11	1	6BH3	6	42	27	5	4	7	2	1
			32	1	12	12	9	1				30	1	12	12	9	1	6BH3A	6	42	27	5	4	7	2	1
6AL3*	6	39	30	5	4	7	3	1				30	1	12	12	11	1	6BH6	6	1	89					1
6AL3	6	39	30	5	4	3	7	1				30	1	12	12	11	1	6BH8	6	12	59					1
6AL5	6	5	62					1				30	1	12	12	11	1				54					2
			62					2				30	1	12	12	11	1									

Use TC-80 Adapter.

Use TC-75 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

5Z4-6BH8

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
6BH11	6	35	27	1	12	12	4	1	6BW8	6	38	33	5	4	2	6	1	6CK3	6	42	25	4	5	7	2	1	
			27	1	12	12	6	1				34	5	4	7	1	1	6CK4	6	37	34	7	2	1	3	1	
			27	1	12	12	8	1				34	5	4	7	3	1	6CK6	6	38	30	5	4	12	2	1	
6BJ3	6	35	26	1	12	4	10	1	6BW11	6	35	30	1	12	12	3	1	1	6CL3	6	42	27	4	5	2	7	1
6BJ6	6	1	81					1				30	1	12	12	11	1	1	6CL5	6	26	54					1
6BJ7	6	38	33	5	4	12	2	1	6BX6	6	38	33	5	4	1	2	1	1	6CL6	6	38	*32	5	4	2	9	1
			33	5	4	12	6	1	6BX7	6	25	55					1	1	*Normally Shows Short Position 3-8.								
			33	5	4	12	8	1				55					2	2	6CL8	6	14	69					1
6BJ8	6	38	33	5	4	12	8	1	6BX8	6	38	33	5	4	12	2	1	1				51					2
			34	5	4	12	1	1				33	5	4	12	7	1	1	6CM3	6	42	30	4	5	2	7	1
6BK4▲			34	5	4	12	6	1	6BY5	5	37	38	7	2	12	4	1	1	6CM4	6	39	29	4	5	3	6	1
6BK4A▲	6	37	78	7	2	6	5	1				38	7	2	12	5	1	1	6CM5	6	27	58					1
6BK4B▲	6	37	78	7	2	6	5	1	6BY6	6	1	93					1	1	6CM6	6	16	64					1
6BK5	6	10	53					1	6BY7	6	38	33	5	4	1	2	1	1	6CM7	6	19	80					1
								1	6BY8	6	38	34	5	4	12	1	1	1				94					2
6BK6	6	6	86					1				34	5	4	12	6	1	1	6CM8	6	38	33	5	4	12	2	1
			70					2	6BY11	6	35	32	1	12	12	3	1	1				38	5	4	12	9	1
6BK7	6	8	55					1				32	1	12	12	8	1	1	6CN6	6	29	*62					1
6BK11	6	35	35	1	12	12	7	1	6BZ3	6	35	30	1	12	4	10	1	1	*For Plate Cap Use Jack Next to Socket 26.								
			35	1	12	12	9	1	6BZ6	6	1	61					1	1	6CN7	6	18	94					1
			35	1	12	12	11	1	6BZ7	6	8	53					1	1				60					2
6BL4	6	34	10					1				53					2	2	6CQ4	6	34	11					1
6BL7	6	25	57					1	6BZ8	6	8	55					1	1	6CQ6	6	40	35	4	3	12	1	1
			57					2				55					2	2	6CQ8	6	11	72					1
6BL8	6	11	66					1	6C4	6	40	41	4	3	1	6	1	1				55					2
			55					2	6C5	6	29	99					1	1	6CR6	6	40	39	4	3	12	7	1
6BM8	6	38	33	5	4	12	3	1	6C8	6	37	48	7	2	12	10	1	1				61	4	3	12	2	1
			39	5	4	12	1	1	6C9	6	38	28	5	4	6	1	1	1	6CR8	6	38	*32	5	4	12	2	1
6BN4	6	40	*33	4	3	2	7	1				28	5	4	10	7	1	1	*34 5 4 12 9 1								
*Normally Shows Short Position 1-6.									6C10	6	35	42	1	12	12	7	1	1	*Normally Shows Short Position 8								
6BN5	6	38	*39	5	4	1	2	1	6C16	6	11	66					1	1	6CS6	6	1	94					1
*Normally Shows Short Position 6-8.												55					2	2	6CS7	6	20	96					1
6BN6	6	7	75					1				42	1	12	12	9	1	1				95				2	
6BN8	6	38	35	5	4	12	8	1				42	1	12	12	11	1	1	6CT3	6	38	32	4	5	6	2	1
			35	5	4	12	1	1	6C18	6	38	30	4	5	8	7	1	1	6CU5	6	4	47					1
6BN11	6	35	35	5	4	12	6	1				33	4	5	8	9	1	1	6CU6	6	27	69					1
			29	1	12	12	3	1	6C31	6	40	*80	4	3	1	7	1	1	6CU8	6	38	32	5	4	1	7	1
6BQ5	6	23	68					1	*Normally Shows Short Position 5-6.									1	6CW4	6	41	*87	10	12	12	2	1
6BQ6	6	27	69					1	6CA4	6	38	34	5	4	12	1	1	1	*For Grid Emission Turn D Switch to Position 4.								
6BQ7	6	8	54					1				34	5	4	12	7	1	1	6CW5	6	23	58					1
			54					2	6CA5	6	4	55					1	1	6CW7	6	38	33	5	4	7	2	1
6BR3	6	15	10					1	6CA7	6	29	53					1	1				33	5	4	7	6	1
6BR8	6	14	72					1	6CA11	6	35	35	1	12	8	3	1	1	6CX8	6	12	45					1
			55					2				33	1	12	8	6	1	1				67					2
6BS3	6	42	27	4	5	2	7	1				33	1	12	7	8	1	1	6CY5	6	1	54					1
6BS3A	6	42	27	4	5	2	7	1	6CB5	6	26	43					1	1	6CY7	6	38	31	5	4	2	3	1
6BS8	6	8	54					1	6CB6	6	1	64					1	1				45	5	4	2	7	1
			54					2	6CC31	6	2	60					1	1	6CZ5	6	16	60					1
6BT6	6	6	85					1				60					1	1	6D1	6	40	43	4	3	1	6	1
			78					2	6CCY2	6	38	29	9	1	12	3	1	1	6D2	6	5	62					1
6BT8	6	38	33	5	4	12	8	1				29	9	1	12	7	1	1				62					2
			54	5	4	12	1	1	6CD3	6	35	*27	1	12	4	10	1	1	6D4	6	40	43	4	3	12	1	1
			54	5	4	12	2	1	*Some tubes may show short position 5-6-8-9.									1	6D8	6	37	43	7	2	12	5	1
6BU6	6	6	85					1	6CD6	6	26	53					1	1	6D10	6	35	32	1	12	12	7	1
			80					2				76					1	1				32	1	12	12	9	1
6BU8	6	21	92					1	6CE3	6	35	25	1	12	4	10	1	1				32	1	12	12	11	1
			92					2	6CE5	6	1	62					1	1	6DA4	6	34	11					1
6BV8	6	38	31	5	4	12	2	1	6CF6	6	1	60					1	1	6DA6	6	38	34	5	4	1	2	1
			33	5	4	12	6	1	6CG3	6	35	30	1	12	4	10	1	1	6DB5	6	16	30					1
6BV11	6	35	30	1	12	12	6	1	6CG7	6	8	76					2	2				60	5	4	12	2	1
			30	1	12	12	7	1				76					1	1	6DB6	6	1	87					1
6BW3	6	35	28	1	12	4	10	1	6CG8	6	14	73					2	2	6DC6	6	1	67					1
6BW4	6	38	50	5	4	12	1	1				57					1	1	6DC8	6	38	33	5	4	12	2	1
			50	5	4	12	7	1	6CH3	6	42	29	4	5	7	2	1	1				60	5	4	12	7	1
6BW6	6	38	42	4	5	1	2	1	6CH6	6	38	28	5	4	12	2	1	1				60	5	4	12	8	1
6BW7	6	9	76					1	6CH8	6	38	33	5	4	12	7	1	1	6DE4	6	34	13					1
								1				36	5	4	12	8	1	1	6DE6	6	1	61					1
								1	6CJ3	6	42	25	4	5	7	2	1	1	6DE7	6	20	81					1

▲Use TC-75 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

6BH11-6DG6

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.								
6DJ8	6	38	31	5	4	12	2	1	6EF4*	6	35	76	1	12	6	4	1	6FG7	6	14	68					1								
			31	5	4	12	7	1	*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 36, remove resistor after test is completed.									6FH5	6	40	33	4	3	1	2	1								
6DK3	6	42	31	4	5	2	7	1	*Normally shows short position 2-9.									6FH8	6	38	32	5	4	12	6	1								
6DK6	6	1	61					1	6EH4*	6	35	80	1	12	6	4	1	6FJ7	6	35	36	1	12	12	3	1								
6DL3	6	42	29	4	5	7	2	1	*Insert a 2.7K, 1w., 5% resistor from pin hole #4 to #6 of socket #37. Remove resistor after test is completed.									6FM7	6	35	25	1	12	3	8	1								
6DL4	6	38	*85	4	5	7	8	1	*Normally shows short position 2-5-9-11.									6FM8	6	38	47	5	4	12	8	1								
*Normally Shows Short Position 1-3-6-9.									6EH5	6	4	57					1	6FQ5	6	40	34	5	4	12	2	1								
6DL5	6	3	88					1	6EH7	6	38	30	5	4	3	2	1	6FQ5A	6	40	33	4	3	1	2	1								
6DM4	6	34	11					1	6EH8	6	12	71					1	6FQ7	6	8	68					1								
6DN3	6	42	31	4	5	2	7	1	6EJ4*	Use 6EF4 settings.								6FR7	6	38	68					2								
6DN6	6	26	47					1	*May show short position 2-9-11.									6FS5	6	1	99					1								
6DN7	6	25	56					1	6EJ7	6	38	29	5	4	3	2	1	6FV6	6	1	54					1								
6DQ3	6	35	30	1	12	4	10	1	6EL4▲	6	37	78	7	2	6	5	1	6FV8	6	14	65					1								
6DQ4	6	34	11					1	6EM5	6	16	53					1	6FW5	6	28	57					1								
6DQ5	6	26	55					1	6EM7	6	37	32	8	7	12	1	1	6FW8	6	8	30					1								
6DQ6	6	27	65					1	45 8 7 12 4 1									6FY5	6	40	33	4	3	1	2	1								
6DQ6B	6	27	62					1	6EN4	6	37	*40	7	2	6	5	1	6FY7	6	35	25	1	12	12	3	1								
6DR4	6	40	43	4	3	1	6	1	*Normally shows short position 1-3-4-8.									6FY8	6	38	30	4	5	12	3	1								
6DR7	6	38	*32	4	5	2	3	1	*Tube good if it reads 40 or more.									6G6	6	29	94					1								
*40 4 5 2 7 1									6EQ7	6	38	34	5	4	12	2	1	6G11	6	35	33	1	12	12	3	1								
*Normally Shows Short Position 4-10.									6ER5	6	40	33	4	3	1	2	1	31 1 12 12 8 1																
6DR8	6	38	31	5	4	12	2	1	6ES5	6	40	33	4	3	1	2	1	6G-B3A	6	27	65					1								
			62	5	4	12	7	1	6ES8	6	8	30					1	6GB5◆	6	42	*25	4	5	2	1	1								
			62	5	4	12	8	1	71 5 4 12 8 1									*Normally shows short position 3-6-7-8.																
6DS4	6	41	*87	10	12	12	2	1	6ET7	6	38	30	5	4	12	7	1	6G-B6	6	27	64					1								
*For Grid Emission Turn D Switch Position 4.									6EU7	6	38	35	2	1	12	5	1	6G-B7	6	27	58					1								
6DS5	6	3	76					1	6EU8	6	38	32	5	4	12	7	1	6GB9	6	27	64					1								
6DS8	6	38	30	5	4	12	2	1	6EV5	6	1	57					1	6GC5	6	16	26					1								
			34	5	4	12	9	1	6EV7	6	8	78					1	6GC6	6	26	52					1								
6DT3	6	35	31	1	12	4	10	1	78 2 1 12 8 1									6GD7	6	14	74					1								
6DT4	6	34	11					1	6EW6	6	1	77					1	6GE5	6	35	*24	1	12	11	3	1								
6DT5	6	16	45					1	6EW7	6	20	87					1	*Normally Shows Short Position 4-10.																
6DT6	6	1	91					1	6EX6	6	26	42					1	6GE8	6	38	33	5	4	12	8	1								
6DT8	6	8	71					1	6EY6	6	29	65					1	6GF5	6	35	*24	1	12	11	3	1								
			71					2	6EZ5	6	29	65					1	6GF7	6	42	27	4	5	12	2	1								
6DU3	6	35	30	1	12	4	10	1	6EZ8	6	38	33	5	4	12	2	1	*Normally Shows Short Position 4-10.																
6DU4	6	42	27	4	5	2	7	1	6F5	6	37	40	7	2	1	10	1	6GH8	6	11	68					1								
6DW5	6	16	30					1	6F6	6	29	91					1	6GH8A	6	11	68					1								
6DX4	6	40	*62	3	4	1	7	1	6F8	6	37	45	7	2	12	5	1	6GJ5	6	42	*30	4	5	6	2	1								
*Normally Shows Short Position 2-6									6F10	6	30	60					1	6GJ7	6	38	24	4	5	3	2	1								
6DX8	6	38	26	4	5	12	8	1	6F21	6	40	35	4	3	12	1	1	*Normally shows short position 1-7.																
6DY5	6	23	68					1	6F22	6	38	40	5	4	2	9	1	6GJ8	6	11	70					1								
6DZ4	6	40	*31	3	4	6	2	1	6F29	6	9	40					1	6JA5	6	35	*33	1	12	9	2	1								
*Normally shows short position 1-7									6F31	6	1	78					1	*Normally shows short position 3-4-10-11.																
6DZ7	6	37	40	7	2	12	1	1	6F33	6	1	77					1	6GK5	6	40	25	4	3	1	2	1								
6DZ8	6	38	27	4	5	8	3	1	6F36	6	1	58					1	6GK6	6	38	33	5	4	3	2	1								
*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 36. Remove resistor after test is completed.									6F40	6	38	39	5	4	2	9	1	6G-K17	6	34	12					1								
6E8	6	37	45	7	2	1	5	1	6FA7	6	38	33	5	4	12	7	1	6GL7	6	25	54					1								
6EA4*	6	35	80	1	12	6	4	1	6FC7	6	38	29	4	5	7	2	1	98																
*Normally shows short position 2-5-9-11.									6FD6	6	40	26	3	4	2	1	1	*Normally shows short position 2-3-6-7-9.																
6EA5	6	1	80					1	6FD7	6	38	25	4	5	2	3	1	*Normally shows short position 2-3-6-7-9.																
6EA7	6	37	35	8	7	12	1	1	6FE5	6	29	37					1	*Normally shows short position 2-3-6-7-9.																
6EA8	6	11	71					1	6FG5	6	40	31	4	3	2	1	1	*Normally shows short position 2-3-6-7-9.																
6EB5	6	5	71					2																										
6EB8	6	12	35					1																										
6EC4■	6	37	32	7	8	2	5	1																										
6ED4◆	6	42	*52	4	5	12	8	1																										

■ Use TC-62B Adapter

▲ Use TC-75 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

◆ Use TC-80 Adapter.

6DJ8 - 6GL7

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
6GM5	6 38	*26	4 5 2 6	1					6HG8	6 38	25	4 5 3 2 1						6JE6B	6 42	*26	4 5 6 2 1						
*May Show Short Position 3-8.									6HJ5	6 35	*27	1 12 3 11 1						6JE6C	6 42	*26	4 5 6 2 1						
6GM6	6 1	64							*Normally shows short position 4-5-9-10									6JE8	6 12	56							
6GM8	6 38	33	5 4 12 2 1						6HJ7	6 38	*78	4 5 1 7 1									78						
		33	5 4 12 7 1								30	4 5 1 9 1						6JF6	6 42	*26	4 5 2 6 1						
6GN7	6 9	21							*For grid emission turn D switch to position 2.									*Normally shows short position 1-7.									
6GN8	6 12	36							6HJ8	6 38	29	5 4 12 2 1						6JG5	6 12	29							
		98									31	5 4 12 8 1						6JG6	6 42	24	4 5 1 2 1						
6GQ7	6 38	24	4 5 3 2 1						6HK5	6 40	27	3 4 12 1 1						6JG6A	6 42	24	4 5 1 2 1						
		24	4 5 3 6 1						6HL5	6 38	30	4 5 1 2 1						6JH5	6 35	*32	1 12 11 2 1						
6GS7	6 14	80							6HL8	6 11	60							*Normally shows short position 3-7-8-10									
		53							6HM5	6 40	27	3 4 2 1 1						6JH6	6 1	64							
6GS8	6 21	95							6HM6	6 38	24	4 5 1 2 1						6JH8	6 38	30	4 5 12 6 1						
		95									60																
6GT5	6 42	*30	4 5 6 2 1						6HQ5	6 40	25	3 4 / 1 1						6JK5	6 35	*32	1 12 11 2 1						
*Normally Shows Short Position 1-7.									6HR5	6 3	77							*Normally shows short position 3-7-8-10									
6GT5A	6 42	*30	4 5 6 2 1						6HR6	6 1	71							6JK6	6 1	61							
*Normally shows short position 1-7.									6HS5	6 35	*30	1 12 11 2 1						6JK8	6 8	54							
6GU5	6 40	27	3 4 2 1 1						*Normally shows short position 3-10.												55						
6GU7	6 8	56							6HS6	6 1	66							6JL6	6 1	23							
		56							6HS8	6 21	99							6JL8	6 12	40							
6GV5	6 35	*26	1 12 5 9 1								99										70						
*Normally Shows Short Position 3-4-7-10-11.									6HT5	6 35	*52	1 12 2 6 1						6JM6	6 35	26	1 12 4 5 1						
6GV7	6 38	30	4 5 8 7 1						*May show short position 4-7-9-11.									6JN6	6 35	27	1 12 4 11 1						
		33	4 5 8 9 1						6HT6	6 38	28	4 5 1 2 1						6JN8	6 14	67							
6GV8	6 38	25	4 5 12 9 1						6HU6	6 38	52	4 5 2 1 1						6JQ6	6 38	*34	4 5 8 7 1						
		25	4 5 12 2 1						6HU8	6 38	29	4 5 12 2 1									57	4 5 8 6 1					
6GW5	6 40	29	3 4 6 2 1								29	4 5 12 6 1															
6GW6	6 27	62							6HV5	6 35	*33	1 12 2 11 1															
6GW8	6 38	25	4 5 2 8 1						*Normally shows short position 3-10.									6JR6	6 42	34	4 5 1 2 1						
		35	4 5 7 1 1						6HW8	6 38	32	4 5 12 6 1						6JS6	6 35	*29	1 12 9 5 1						
6GX6	6 1	85							6HZ5	6 35	*30	1 12 2 11 1						*Normally shows short position 3-4-10-11									
6GX7	6 38	24	4 5 3 2 1						*Normally shows short position 3-10									6JT6	6 42	27	4 5 1 2 1						
		24	4 5 3 9 1						6HZ6	6 1	83							6JT6A	6 42	27	4 5 1 2 1						
6GY5	6 35	*25	1 12 5 9 1						6HZ8	6 12	28							6JT8	6 12	20							
*Normally shows short position 3-4-7-10-11.											75										99						
6GY6	6 1	82							6J4	6 40	*85	4 3 1 7 1						*Tube good if it reads 60 or more.									
6GY8	6 38	*32	5 4 12 1 1						*Normally Shows Short Position 5-6.									6JU6	6 42	*30	4 5 2 6 1						
		*32	5 4 12 3 1						6J5	6 29	93							*Normally shows short position 1-7.									
		*94	5 4 12 6 1						6J6	6 2	60							6JU8	6 38	*32	4 5 2 1 1						
*Normally Shows Short Position 4.											60										*32	4 5 8 7 1					
6GZ5	6 40	30	3 4 2 5 1						6J7	6 37	50	7 2 1 10 1						*Normally Shows Short Position 8.									
6H6	6 37	48	7 2 1 3 1						6J9	6 38	26	4 5 12 2 1						**Normally Shows Short Position 2.									
		48	7 2 1 5 1								26	4 5 12 9 1						6JU8A	6 38	*32	4 5 2 1 1						
6H31	6 1	91									26	4 5 12 7 1									*32	4 5 8 7 1					
6HA5	6 40	27	3 4 2 1 1						6J10	6 35	96	1 12 12 6 1						*Normally shows short position 8.									
6HA6	6 9	23							6J11	6 35	28	1 12 12 11 1						**Normally shows short position 2.									
6HB5	6 35	*25	1 12 11 3 1								22	1 12 12 5 1						6JV8	6 12	55							
*Normally Shows Short Position 4-10.											22	1 12 12 11 1									85						
6HB6	6 38	*24	4 5 6 2 1						6JA8	6 38	25	4 5 12 7 1						6JW8	6 11	80							
*Normally Shows Short Position 3-9.											95	4 5 12 3 1									85						
6HB7	6 38	24	4 5 3 2 1						6JB5	6 35	*35	1 12 9 2 1						6JX8	6 38	23	4 5 12 2 1						
		24	4 5 3 9 1						*Normally shows short position 3-4-10-11.												26	4 5 12 9 1					
6HC8	6 38	36	5 4 12 3 1						6JB6	6 42	*29	4 5 6 2 1						6JY8	6 12	40							
		38	5 4 12 1 1						*Normally Shows Short Position 1-7.												55						
6HD5	6 35	*27	1 12 3 11 1						6JB6A	6 42	*29	4 5 6 2 1						6JZ6	6 35	*31	1 12 9 5 1						
*Normally shows short position 4-5-9-10									*Normally shows short position 1-7.									*Some tubes may show short position 3-4-10-11.									
6HD7	6 38	30	4 5 1 2 1						6JC5	6 35	*32	1 12 9 2 1						6JZ8	6 35	29	1 12 6 7 1						
		30	4 5 1 9 1						*Normally shows short position 3-4-10-11												40	1 12 6 10 1					
6HE5	6 35	*32	1 12 9 2 1						6JC6	6 38	25	4 5 1 2 1						6K6	6 29	92							
*Normally Shows Short Position 3-4-10-11									6JC6A	6 9	59							6K7	6 37	52	7 2 1 10 1						
6HE7	6 35	27	1 12 10 2 1						6JC8	6 38	24	4 5 1 2 1						6K8	6 37	35	7 2 1 5 1						
		27	1 12 10 9 1								24	4 5 1 8 1						6K11	6 35	38	1 12 12 7 1						
6HF5	6 35	*25	1 12 9 5 1						6JD5	6 35	*30	1 12 2 11 1									38	1 12 12 9 1					
*Normally Shows Short Position 3-4-6-8-10-11.									*Normally shows short position 3-10																		
6HF8	6 12	27							6JD6	6 38	26	4 5 1 2 1						6KA8	6 38	26	4 5 12 6 1						
		80							6JE6	6 42	*26	4 5 6 2 1									33	4 5 12 2 1					
6HG5	6 3	85							*Normally shows short position 1-7									6KD6	6 35	*26	1 12 9 5 1						

◆Use TC-80 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

6GM5 - 6KD6

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
6KD8	6	11	68					1	6LJ8	6	14	85					1	6ML8	6	38	34	4	5	12	6	1	
			52					2				60					2									1	
6KE8	6	38	24	4	5	12	2	1	6LM8	6	11	68					1									1	
			24					1				58					2									1	
6KF8	6	21	92					1	6LN8	6	11	66					1	6MN8	6	35	33	1	12	7	8	1	
								2				55					2									1	
6KG6♦	6	42	*26	4	5	1	8	1	6LP12	6	39	33	5	4	12	3	1									1	
*Normally shows short position 2-3-6-7.												39	5	4	12	1	1	6M-P17	6	3	33	1	12	7	10	1	
6KL8	6	38	31	4	5	12	2	1	6LQ6	6	42	*26	4	5	6	2	1		6M-P18	6	40	34	3	4	7	1	1
			70					1	*Normally shows short position 1-7.									6MP20	6	1	43					1	
6KM6	6	42	*29	4	5	6	2	1	6LQ8	6	12	31					1	6MQ8	6	11	65					1	
*Normally shows short position 1-7												50				2									2		
6KM8	6	38	31	4	5	12	7	1	6LR6	6	35	*32	1	12	9	5	1	6MU8	6	11	42					1	
			75					1	*May show short position 3-4-7-10-11.																	2	
6KN6	6	35	*30	1	12	9	5	1	6LR8	6	42	31	4	5	12	2	1	6MV8	6	12	63					1	
*Normally shows short position 3-4-10-11.												31	4	5	12	9	1	6MX8	6	42	27	4	5	12	2	1	
6KN8	6	38	86	4	5	12	1	1	6LT8	6	38	27	4	5	7	9	1									1	
			90					1				32	4	5	1	6	1	6MY8	6	35	27	1	12	6	7	1	
6KR8	6	12	22					1				32	4	5	1	8	1									1	
								2	6LU6	6	1	52					1	6N3	6	38	29	4	5	6	9	1	
6KR8A	6	12	59					1	6LU8	6	35	27	1	12	6	7	1	6N7	6	37	47	7	2	1	4	1	
			59					2				35	27	1	12	6	10	1								1	
6KS6	6	7	83					1	6LV6	6	35	*31	1	12	5	9	1	6N8	6	38	37	5	4	12	2	1	
6KS8	6	12	33					1	*May show short position 3-4-7-10-11																	1	
								2	6LW6	6	37	*31	7	8	1	5	1									1	
6KT6	6	9	84					1	*Normally shows short position 2-6.									6NK7GT	6	30	84					1	
6KT8	6	12	67					1	6LX8	6	11	80					1	6P5	6	29	93					1	
			91					2				85				2		6P15	6	23	68					1	
6KU8	6	38	22	4	5	12	7	1	6LY8	6	12	21				1		6PL12	6	39	33	5	4	12	3	1	
								1				*99				2										1	
								2	*Tube good if it reads 28 or more									6Q7	6	37	40	7	2	1	10	1	
6KV6	6	42	60	4	5	12	2	1	6LZ6	6	42	*31	4	5	6	2	1									1	
6KV8	6	12	60	4	5	1	2	1	*Normally shows short position 1-7																	1	
			82					2	6M11	6	35	25	1	12	12	2	1		6Q8	6	37	45	7	2	1	5	1
6KW6♦	6	42	30	4	5	1	8	1				25	1	12	12	8	1	6Q11	6	35	38	1	12	12	7	1	
6KY6	6	9	20					1				25	1	12	12	5	1									1	
6KY8	6	42	27	4	5	12	2	1	6MA6	6	37	*58	3	8	2	6	1									1	
			39					1	*Tube good if it reads 40 or more.									6R3	6	38	33	5	4	2	9	1	
6KY8A	6	42	27	4	5	12	2	1	*No Short test.									6R4	6	38	30	4	5	12	1	1	
6KZ8	6	38	26	4	5	12	2	1	6MB6	6	35	*32	1	12	9	5	1	6R7	6	37	52	7	2	1	10	1	
			26					1	*Normally shows short position 3-4-10-11.																		1
6L5	6	37	53	7	2	6	5	1	6MB8	6	14	84					1									1	
6L6	6	29	63					1				61				2		6R8	6	17	86					1	
6L7	6	37	44	7	2	1	10	1	6MC6	6	42	*29	4	5	6	2	1									2	
								1	*Normally shows short position 1-7									6RA6	6	39	34	4	5	9	7	1	
6L10	6	30	38					1	6MD8	6	42	35	4	5	12	6	1	6R-A9	6	38	30	4	5	7	2	1	
6L12	6	8	70					2				35	4	5	12	8	1	6R-B11	6	38	32	4	5	6	3	1	
			70					1				35	4	5	12	9	1	6R-HH2	6	8	53					1	
6L41	6	38	33	5	4	8	9	1	6ME6	6	42	*29	4	5	6	2	1									2	
6L43	6	38	*32	5	4	2	9	1	*Normally shows short position 1-7.									6R-HH8	4	38	86	4	5	12	1	1	
*Normally Shows Short Position 3-8.									6ME8	6	38	30	4	5	12	6	1									1	
6LB6	6	35	*30	1	12	9	5	1	6MF8	6	35	35	1	12	6	7	1	6R-K19	6	15	10					1	
*Normally shows short position 3-4-10-11.												34	1	12	6	10	1	6R-P15	6	38	35	4	5	1	2	1	
6LB8	6	12	21					1	6MG8	6	11	80					1	6R-P22	6	38	*32	4	5	2	9	1	
			71					2				59				2	*Normally shows short position 3-8.										
6LC6▲	6	37	78	7	2	12	5	1	6M-H1	6	40	*85	4	3	1	7	1	6S2	6	24	35					1	
6LC8	6	38	24	4	5	3	6	1	*Normally shows short position 5-6									6S4	6	16	58					1	
			24					1	6MH6	6	35	*31	1	12	5	9	1	6S7	6	37	47	7	2	1	10	1	
6LD6	6	9	51					1	*May show short position 3-4-7-10-11									6S8	6	37	45	8	7	5	10	1	
6LD12	6	16	90					1	6M-HH3	6	2	56					1									1	
								2				56				2										1	
6LE8	6	38	29	4	5	12	9	1	6MJ6	6	42	*26	4	5	6	2	1									1	
6LF6	6	35	*31	1	12	5	9	1	*Normally shows short position 1-7									6SA7	6	37	37	7	2	1	5	1	
*May show short position 3-4-7-10-11.									6MJ8	6	35	35	1	12	7	8	1		6SB7Y	6	37	34	7	2	1	5	1
6LF8	6	12	55					1				35	1	12	7	10	1		6SC7	6	37	48	8	7	1	3	1
								2				35	1	12	7	11	1									1	
6LG6	6	35	*32	1	12	9	5	1	6MK8	6	21	98					1	6SD7	6	30	69					1	
*May show short position 2-3-4-7-10-11.												98				2		6SF5	6	37	41	8	7	1	3	1	
6LH6▲	6	37	78	7	2	12	5	1	6M-L4	6	40	*24	4	3	2	6	1		6SF7	6	37	46	8	7	1	2	1
6LJ6▲	6	37	78	2	7	12	5	1	*Normally shows short position 1-7.																	1	

♦Use TC-80 Adapter

♦Use TC-80 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6SG7	6	30	77					1	6Y10	6	35	29	1	12	4	3	1	7KZ6	7	9	17					1
6SH7	6	30	77					1				29	1	12	4	8	1				65	8	1	12	5	1
6SJ7	6	30	83					1	6Z10	6	35	30	1	12	12	11	1				65	8	1	12	6	1
6SK7	6	30	84					1				95	1	12	12	6	1	7L7	6	36	36	8	1	12	6	1
6SL7	6	25	*85					1										7M-P18	7	40	34	3	4	7	1	1
			*85					2	6Z31	6	40	44	4	3	12	1	1	7N7	6	36	42	8	1	12	4	1
			*Tube Good If It Reads 22 or More.					1				44	4	3	12	6	1				42	8	1	12	5	1
6SN7	6	25	78					2	6ZY5	6	33	17					1	7Q7	6	36	35	8	1	12	4	1
			78					1	7A4	6	36	41	8	1	12	6	1	7R7	6	36	35	8	1	12	6	1
6SQ7	6	37	42	8	7	1	2	1	7A5	6	36	34	8	1	12	6	1				72	8	1	12	3	1
			71	8	7	1	4	1	7A6	6	36	48	8	1	12	3	1				72	8	1	12	4	1
6SR7	6	37	46	8	7	1	2	1				48	8	1	12	6	1	7S7	6	36	38	8	1	12	6	1
			68	8	7	1	4	1	7A7	6	36	45	8	1	12	6	1				52	8	1	12	4	1
			68	8	7	1	5	1	7A8	6	36	40	8	1	12	4	1	7V7	6	36	32	8	1	12	6	1
6SS7	6	37	46	7	2	1	4	1	7AD7	6	36	35	8	1	12	6	1	7W7	6	36	31	8	1	4	6	1
6ST7	6	37	52	8	7	1	2	1	7AF7	6	36	41	8	1	12	4	1	7X6	6	36	35	8	1	12	3	1
			72	8	7	1	4	1				41	8	1	12	5	1				35	8	1	12	6	1
			72	8	7	1	5	1	7AG7	6	36	32	8	1	12	6	1	7X7	6	36	43	8	1	12	3	1
6SU7	6	37	43	8	7	2	1	1	7AH7	6	36	32	8	1	12	6	1				36	8	1	12	5	1
			43	8	7	12	4	1	7AK7	6	36	33	8	1	12	6	1				35	8	1	12	6	1
6SZ7	6	37	44	8	7	1	2	1	7AN7	7	38	33	5	4	7	2	1	7Y4	6	36	45	8	1	12	3	1
			72	8	7	1	4	1				33	5	4	7	6	1	7Z4	6	36	45	8	1	12	6	1
			72	8	7	1	5	1	7AU7	7	8	75				1				50	8	1	12	3	1	
6T4	6	40	*33	4	3	2	6	1	7B4	6	36	40	8	1	12	6	1				50	8	1	12	6	1
			*Normally Shows Short Position 1-7.					1				75				2		8A8	8	11	66					1
6T8	6	17	90					1	7B5	6	36	52	8	1	12	6	1	8AC9	8	35	28	1	12	3	9	1
			63					2	7B6	6	36	40	8	1	4	3	1				45	1	12	3	2	1
6T8A	6	17	90					1				68	8	1	4	5	1	8AC10	8	35	35	1	12	2	3	1
			63					2	7B7	6	36	45	8	1	12	6	1				32	1	12	12	7	1
6T9	6	35	27	1	12	12	8	1				68	8	1	4	5	1				32	1	12	12	11	1
			27	1	12	12	4	1	7B8	6	36	42	8	1	12	4	1	8AL9	8	35	28	1	12	12	5	1
6T10	6	35	28	1	12	12	3	1	7C4	6	36	53	8	1	12	4	1				28	1	12	12	11	1
			25	1	12	12	8	1	7C5	6	36	38	8	1	12	6	1	8AR11	8	35	28	1	12	12	5	1
6U4	6	34	11					1	7C6	6	36	50	8	1	4	3	1				28	1	12	12	10	1
6U6	6	29	54					1				68	8	1	4	6	1	8AU8	8	12	56					1
6U7	6	37	35	7	2	12	10	1	7C7	6	36	37	8	1	12	6	1				72					2
6U8	6	11	79					1	7D10	6	9	55				1		8AV11	8	35	30	1	12	12	7	1
			55					2	7DJ8	7	38	31	5	4	12	2	1				30	1	12	12	9	1
6U9	6	43	28	5	6	12	3	1				31	5	4	12	7	1				30	1	12	12	11	1
			32	5	6	12	10	1	7E5	6	36	*33	8	2	1	5	1	8AW8	8	12	44					1
6U10	6	35	32	1	12	12	7	1				*Normally Shows Short Position 3-4-6-7.								78					2	
			32	1	12	12	9	1	7E6	6	36	40	8	1	4	3	1	8B8	8	38	33	4	5	12	3	1
			32	1	12	12	11	1				69	8	1	4	5	1				39	4	5	12	1	1
6V3	6	15	10					1				69	8	1	4	6	1	8B10	8	35	34	1	12	12	3	1
6V4	6	38	40	5	4	12	1	1	7E7	6	36	47	8	1	12	6	1				34	1	12	12	5	1
			40	5	4	12	7	1				68	8	1	12	3	1				34	1	12	12	8	1
6V6	6	29	79					1				68	8	1	12	4	1				34	1	12	12	10	1
6V8	6	38	40	5	4	12	6	1	7ES8	7	8	30				1		8BA8	8	12	53					1
			32	5	4	12	2	1				30				2				59						2
			32	5	4	12	7	1	7EY6	7	29	65				1		8BA11	8	35	29	1	12	12	4	1
6V9	6	43	31	5	6	12	3	1	7F7	6	36	45	8	1	12	4	1				37	1	12	12	9	1
			30	5	6	12	8	1				45	8	1	12	5	1	8BH8	8	12	59					1
6W4	6	34	11					1	7F8	6	36	30	7	2	12	1	1				54					2
6W6	6	29	51					1				30	7	2	12	8	1	8BM11	8	35	30	1	12	12	6	1
6W7	6	37	50	7	2	12	10	1	7FC7	7	38	29	4	5	7	2	1				30	1	12	12	11	1
6X4	6	40	44	4	3	12	1	1				29	4	5	7	6	1	8BN8	8	38	35	5	4	12	8	1
			44	4	3	12	6	1	7G7	6	36	36	8	1	12	6	1				35	5	4	12	1	1
6X5	6	33	15					1	7GS7	7	14	80				1		8BN11	8	35	29	1	12	12	3	1
			15					2				53				2					29	1	12	12	7	1
6X6	6	37	48	7	2	12	3	1	7GV7	7	38	30	4	5	8	7	1	8BQ5	8	23	68					1
			48	7	2	12	5	1				33	4	5	8	9	1	8BQ7	8	8	54					1
6X8	6	12	73					1	7H7	6	36	35	8	1	12	6	1				54					2
			61					2	7HG8	7	38	25	4	5	3	2	1	8BQ11	8	35	28	1	12	12	5	1
6X9	6	43	30	5	6	12	3	1				25	4	5	1	6	1				28	1	12	12	10	1
			30	5	6	12	10	1	7J7	6	36	35	8	1	12	6	1	8BU11	8	35	28	1	12	12	8	1
6Y6	6	29	40					1				50	8	1	12	4	1				28	1	12	12		

*Normal Shorts Refer to Position of "D" Switch.

6SG7-8CB11

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv- ity	A	B	C	D	Test Pos.
8CG7	8	8	76					1	8KT8	8	12	67					1	9KG6♦	9	42	*26	4	5	1	8	1
8CH8	8	38	33	5	4	12	7	1	8LC8	6	38	24	4	5	3	6	1	9KV8	9	12	22					1
8CL8	8	14	69	5	4	12	8	1	8LE8	8	38	24	4	5	6	2	1	9KX6	9	9	82					2
								1				29	4	5	12	9	1				16					1
8CM7	8	19	51					2	8LS6	8	9	44					1	9KZ8	9	38	26	4	5	12	2	1
8CN7	8	18	80					1	8LT8	8	38	27	4	5	7	9	1				26	4	5	12	9	1
			94					2				32	4	5	1	6	1	9LA6	9	9	21					1
8CS7	8	20	96					1	8MD8	8	42	32	4	5	1	8	1	9M-HH3	9	2	56					1
8CU8	8	38	32	5	4	1	7	1				35	4	5	12	8	1				56					2
8CW5	8	23	33	5	4	6	8	1	8M-P12	8	1	60					1	9ML8	9	38	34	4	5	12	6	1
8CX8	8	12	45					1	8MU8	8	11	42					2				33	1	12	7	8	1
8CY5	8	1	67					2	8R-HP1	8	38	33	4	5	12	3	1				33	1	12	7	11	1
8CY7	8	38	54	4	5	12	1	1	8RLP1	8	38	35	4	5	12	1	1	9M-P12	9	40	38	3	4	2	1	1
			26	4	5	12	3	1				32	4	5	12	3	1	9R-A6	9	39	34	4	5	9	7	1
8D8	8	38	45	5	4	2	7	1	8SN7	8	25	78					1	9R-AL1	9	38	33	4	5	2	3	1
8DE7	8	20	81					2				78					2	9R-HR2	9	11	68					1
8DX8	8	38	90					1	8U9	8	43	28	5	6	12	3	1				56					2
8EB8	8	12	35					1	8X9	8	43	32	5	6	12	10	1	9U8	9	11	79					1
8EM5	8	16	99					2				30	5	6	12	3	1				55					2
8ET7	8	38	53	5	4	12	7	1	9A8	9	11	66					1	9V9	9	43	31	5	6	12	3	1
			30	5	4	12	2	1				55					2				30	5	6	12	8	1
			70					1	9AB4	9	40	30	4	3	12	6	1	9X8	9	12	73					1
8FQ7	8	8	70	5	4	12	3	1	9AH9	9	35	37	1	12	5	2	1				61					2
8GJ7	8	38	68					2				30	1	12	5	6	1	10AF11	10	35	31	1	12	12	11	1
8GM6	8	1	64					1	9AK8	9	16	90					1				31	1	12	12	6	1
8GN8	8	12	36					1	9AK10	9	35	32	1	12	12	7	1				35	1	12	12	3	1
8GU7	8	8	24	4	5	3	9	1				32	1	12	12	9	1	10AL11	10	35	27	1	12	12	8	1
			56					1	9AM10	9	35	34	1	12	12	7	1	10BQ5	10	23	68					1
8GX7	8	38	24	4	5	3	2	1				34	1	12	12	9	1	10C8	10	13	59					1
8HA6	8	9	95					2	9AQ8	9	8	70					1				73					2
8HG8	8	38	23					1				70					2	10CW5	10	23	58					1
			25	4	5	1	6	2	9AU7	9	8	75					1	10D2	19	5	62					1
8JE8	8	12	56					1	9BJ11	9	35	28	1	12	12	6	1	10DE7	10	20	81					1
8JK8	8	8	78					2	9BR7	9	38	32	5	4	9	2	1				90					2
8JL8	8	12	55					1				37	5	4	9	6	1	10DR7	10	38	32	5	4	2	3	1
			40					1	9BR8	9	14	72	5	4	9	7	1				41	5	4	2	7	1
8JT8	8	12	70					2	9CG8A	9	14	73					1	10DX8	10	38	26	4	5	12	8	1
			20					1				57					2				26	4	5	12	1	1
8JU8A	8	38	*99					2				51					1	10E/312	25	29	47					1
			*32	4	5	8	7	1	9DZ8	9	38	27	4	5	8	3	1	10E/349	6	29	79					1
			**32	4	5	8	7	1				30	4	5	2	1	1	10E/558	6	37	52	7	2	12	10	1
8JV8	8	12	55					1	9EA8	9	11	71					2	10E/11448	6	29	93					1
			85					2	9ED4♦	9	42	*52	4	5	12	8	1	10E/11533	6	29	63					1
8K11	8	35	38	1	12	12	7	1	9GH8A	9	11	68					1	10E/11581	6	37	40	7	2	12	10	1
8KA8	8	38	38	1	12	12	11	1				56					2	10EB8	10	12	35					1
			26	4	5	12	6	1	9GV8	9	38	25	4	5	12	9	1				99					2
8KR8	8	12	33	4	5	12	2	1	9HS6	9	1	66					1	10EG7	10	37	32	8	7	12	1	1
			22					1	9J6	9	2	60					1	10EM7	10	37	32	8	7	12	1	1
8KS8	8	12	59					2				80					2	10EW7	10	20	45	8	7	12	4	1
			33					1	9JW8	9	11	85					2	10FD7	10	38	25	4	5	2	3	1
			84					2	9KC6	9	38	25	4	5	12	2	1				32	4	5	2	7	1
								1				83	4	5	12	9	1	10FR7	10	38	24	4	5	2	3	1
								1									1	10GF7	10	42	32	4	5	2	7	1
								1									1				38	4	5	12	9	1
								1									1	10GH8	10	11	68					1
								1									1				56					2
								1									1	10GK6	10	38	33	5	4	3	2	1
								1									1	10GM8	10	38	33	5	4	12	2	1
								1									1				33	5	4	12	7	1

♦Use TC-80 Adapter

*Normal Shorts Refer to Position of "D" Switch.

8CG7 - 10GM8

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
10GN8	10	12	36					1	11JE8	10	12	56					1	12AW8	12	12	44					1
			98					2				78					2				78					2
10GV8	10	38	25	4	5	12	9	1	11KV8	10	12	22					1	12AX3	12	35	30	1	12	10	4	1
			25	4	5	12	2	1				82					2	12AX4	12	34	13					1
10HA6	10	9	23					1	11LQ8	12	12	31					1	12AX7	12	8	*85					1
10HF8	10	12	27					1				50					2				*85					2
			80					2	11LT8	12	38	27	4	5	7	9	1	*Tube Good if it Reads 22 or More.								
10JA5	10	35	*33	1	12	9	2	1				32	4	5	1	6	1	12AY3	12	42	27	5	4	7	2	1
*Normally shows short position 3-4-10-11												32	4	5	1	8	1	12AY3A	12	42	27	5	4	7	2	1
10JA8	10	38	25	4	5	12	7	1	11LY6	10	9	46					1	12AY7	12	8	93					1
			95	4	5	12	3	1	11MS8	10	38	25	4	5	12	9	1				93					2
10JT8	10	12	20					1				25	4	5	12	2	1	12AZ7	12	8	73					1
			*99					2	11R3	10	38	33	5	4	2	9	1				73					2
*Tube good if reads 60 or more.									11Y9	12	43	27	5	6	12	1	1	12B4	12	39	35	5	4	3	7	1
10JY8	10	12	36					1				27	5	6	12	8	1	12B7	12	36	45	8	1	12	6	1
			61					2	12A4	12	39	32	5	4	3	7	1	12BA6	12	1	78					1
10KR8	10	12	22					1	12A6	12	29	92					1	12BA7	12	38	33	5	4	12	2	1
			59					2	12A8	12	37	45	7	2	12	5	1	12BA11	12	35	28	1	12	12	4	1
10KU8	10	38	22	4	5	12	7	1	12AB5	12	16	67					1				36	1	12	12	9	1
			60	4	5	12	2	1	12AC6	12	40	42	4	3	12	1	1	12B-B14	12	42	*33	4	5	1	2	1
			60	4	5	12	3	1	12AC10	12	35	32	1	12	12	7	1	*Normally shows short position 3-6-7-8.								
10LB8	10	12	21					1				32	1	12	12	9	1	12BC32	12	6	91					1
			71					2				32	1	12	12	11	1				78					2
10LD6	10	9	51					1	12AD6	12	40	35	4	3	12	1	1	12BD6	12	1	85					1
10LD12	10	17	90					1	12AD7	12	8	85					1	12BE3	12	35	26	1	12	4	10	1
			63					2				85					2	12BE6	12	1	91					1
10LE8	10	38	29	4	5	12	9	1	12AE6	12	40	52	4	3	12	1	1	12BF6	12	6	85					1
10LW8	10	12	25					1				66	4	3	12	5	1				80					2
			92					2				66	4	3	12	6	1	12BF11	12	35	25	1	12	12	3	1
10LY8	10	12	21					1	12AE7	12	38	32	5	4	9	2	1				25	1	12	12	8	1
			*99					2				32	5	4	9	7	1	12BH7	12	8	56					1
*Tube good if it reads 28 or more.									12AE10	12	35	30	1	12	12	8	1				56					2
10LZ8	10	12	54					1				31	1	12	12	3	1	12BK5	12	10	53					1
			*99					2	12AF3	12	15	12					1	12BK6	12	6	86					1
*Tube good if it reads 40 or more									12AF6	12	40	37	4	3	12	1	1				70					2
10T10	10	35	28	1	12	12	3	1	12AF11	12	35	31	1	12	12	11	1	12BL6	12	40	35	4	3	12	1	1
			25	1	12	12	8	1				31	1	12	12	6	1	12BN6	12	7	75					1
10Z10	10	35	30	1	12	12	11	1	12AG6	12	40	35	4	3	12	1	1	12BQ6	12	27	69					1
			95	1	12	12	6	1	12AH7	12	37	48	8	7	12	1	1	12BR3	12	15	10					1
11AF9	10	43	27	5	6	7	1	1				48	8	7	12	5	1	12BR7	12	38	32	5	4	9	2	1
			27	5	6	2	8	1	12AJ6	12	40	40	4	3	12	1	1				36	5	4	9	6	1
11AR11	12	35	28	1	12	12	5	1				66	4	3	12	5	1				36	5	4	9	7	1
			28	1	12	12	10	1	12AJ7	12	38	32	5	4	12	2	1	12BS3	12	42	27	4	5	2	7	1
11BM8	12	38	33	5	4	12	3	1				35	5	4	12	9	1	12BT3	12	35	27	1	12	4	10	1
			39	5	4	12	1	1				55					1	12BT6	12	6	85					1
11BN11	10	35	29	1	12	12	3	1	12AL5	12	5	62					1				78					2
			29	1	12	12	7	1				62					2	12BU6	12	6	85					1
11BQ11	10	35	28	1	12	12	5	1	12AL8	12	38	34	5	4	12	3	1				80					2
			28	1	12	12	10	1				52	5	4	12	8	1	12BV7	12	9	39					1
11BT11	10	35	27	1	12	6	11	1	12AL11	12	35	31	1	12	12	3	1	12BV11	12	35	30	1	12	12	6	1
			30	1	12	8	5	1				27	1	12	12	8	1				30	1	12	12	7	1
			26	1	12	8	3	1	12AQ5	12	3	77					1	12BW4	12	38	50	5	4	12	1	1
11C5	12	4	54					1	12AS5	12	4	55					1				50	5	4	12	7	1
11CA11	10	35	35	1	12	8	3	1	12AT6	12	6	85					1	12BX6	12	38	33	5	4	1	2	1
			33	1	12	8	6	1				78					2	12BX7	12	25	55					1
			33	1	12	7	8	1	12AT7	12	8	74					1				55					2
11CF11	10	35	34	1	12	7	9	1				74					2	12BY7	12	9	42					1
			34	1	12	8	11	1	12AU5	12	28	71					1	12BZ6	12	1	61					1
			32	1	12	8	5	1	12AU6	12	1	82					1	12BZ7	12	8	95					1
11CH11	10	35	31	1	12	6	11	1	12AU7	12	8	75					1				95					2
			34	1	12	8	5	1				75					2	12C5	12	4	44					1
			30	1	12	8	3	1	12AU8	12	12	56					1	12C8	12	37	55	7	2	12	10	1
11CY7	12	38	31	5	4	2	3	1				72					2				65	7	2	12	4	1
			45	5	4	2	7	1	12AV5	12	28	62					1				65	7	2	12	5	1
11DS5	10	3	76					1	12AV6	12	6	91					1	12C8Y	12	37	55	7	2	12	10	1
								1				78					2				65	7	2	12	4	1
11FY7	12	35	25	1	12	12	3	1	12AV7	12	8	55					1	12CA5	12	4	55					1
			42	1	12	12	10	1				55					2	12CK3	12	42	25	4	5	7	2	1
11HM7	10	38	*29	4	5	6	2	1	12AW6	12	1	78					1	12CL3	12	42	27	4	5	2		

◆Use TC-80 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

10GN8 - 12CL3

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.			
12CM6	12	16	64					1	12E13	6	29	52					1	12H6	12	37	48	7	2	12	3	1			
12CN5	12	40	33	4	3	2	5	1	12EA6	12	40	32	4	3	12	1	1	12H31	12	1	91					1			
12CR6	12	40	39	4	3	12	7	1	12EC8	12	38	30	5	4	12	9	1	12HB25	12	42	*33	4	5	1	2	1			
			61	4	3	12	2	1				32	5	4	12	1	1	*Normally shows short position 3-6-7-8.											
12CS6	12	1	94					1	12ED5	12	4	57					1	12HE7	12	35	27	1	12	10	2	1			
12CT3	12	38	32	4	5	6	2	1	12EG6	12	40	36	4	3	12	1	1				27	1	12	10	9	1			
12CT8	12	13	57					1	12EH5	12	4	57					1	12HG7	12	9	28					1			
			63					2	12EK6	12	40	31	4	3	12	1	1	12HL5	12	38	30	4	5	1	2	1			
12CU5	12	4	47					1	12EL6	12	40	38	4	3	12	1	1	12HL7	12	38	*33	4	5	6	2	1			
12CU6	12	27	69					1				68	4	3	12	5	1	*Normally shows short position 3-9.											
12CX6	12	40	30	4	3	12	1	1	12EM6	12	38	34	5	4	12	1	1	12HU8	12	38	29	4	5	12	2	1			
12D4	12	34	11					1				90	5	4	12	9	1				29	4	5	12	6	1			
12DA6	12	9	80					1	12EN6	12	29	36					1	12J5	12	29	93					1			
12DB5	12	16	30					1	12EQ7	12	38	34	5	4	12	2	1	12J7	12	37	50	7	2	12	10	1			
12DE8	12	38	36	5	4	12	1	1				71	5	4	12	8	1	12J8	12	38	30	5	4	12	1	1			
			34	5	4	12	3	1	12EZ6	12	40	32	4	3	12	1	1				35	5	4	12	8	1			
12DF5	12	38	52	5	4	9	1	1	12F5	12	37	40	7	2	12	10	1	12JB6	12	42	*29	4	5	6	2	1			
			52	5	4	9	6	1	12F8	12	38	40	5	4	12	8	1	*Normally Shows Short Position 1-7.											
12DF7	12	8	*85					1				62	5	4	12	1	1	12JB6A	12	42	*29	4	5	6	2	1			
			*85					2				62	5	4	12	6	1	*Normally shows short position 1-7.											
*Tube Good if it Reads 22 or More.									12F31	12	1	78					1	12JF5	12	35	*32	1	12	11	3	1			
12DJ8	12	38	31	5	4	12	2	1	12FK6	12	40	40	4	3	12	1	1	*Normally shows short position 4-10											
			31	5	4	12	7	1				65	4	3	12	5	1	12JM6	12	35	26	1	12	4	5	1			
12DK6	12	1	61					1				65	4	3	12	6	1	12JN6	12	35	27	1	12	4	11	1			
12DK7	12	38	33	5	4	8	1	1	12FM6	12	40	35	4	3	12	1	1	12JN8	12	14	67					1			
			80	5	4	8	6	1				68	4	3	12	5	1				53					2			
12DL8	12	38	35	5	4	12	3	1	12FQ7	12	8	68	4	3	12	6	1	12JQ6	12	38	*34	4	5	8	7	1			
			65	5	4	12	9	1				68					2				57	4	5	8	6	1			
			65	5	4	12	1	1	12FQ8	12	38	39	5	4	12	2	1	*May show short position 2-3.											
12DM4	12	34	11					1	12FR8	12	38	39	5	4	12	7	1	12JS6	12	35	*29	1	12	9	5	1			
12DN6	12	26	47					1				*37	4	5	12	3	1	*Normally shows short position 3-4-10-11.											
12DQ4	12	34	11					1				*62	4	5	12	8	1	12JT6	12	42	27	4	5	1	2	1			
12DQ6	12	27	65					1									1	12JT6A	12	42	27	4	5	1	2	1			
12DQ6B	12	27	62					1	*Normally Shows Short on Position No. 5.									12JZ8	12	35	29	1	12	6	7	1			
12DQ7	12	9	36					1	12FS5	12	1	99					1				40	1	12	6	10	1			
12DS7	12	38	34	5	4	12	3	1	12FT6	12	40	52	4	3	12	1	1	12K5	12	40	35	4	3	5	6	1			
			*85	5	4	12	1	1				66	4	3	12	5	1	12K7	12	37	52	7	2	12	10	1			
			*85	5	4	12	9	1				66	4	3	12	6	1	12K8	12	37	35	7	2	12	5	1			
*Tube good if it reads 20 or more.									12FV7	12	8	42					1	12KA8	12	38	26	4	5	12	6	1			
12DT5	12	16	45					1				42					2				33	4	5	12	2	1			
12DT6	12	1	91					1	12FX5	12	4	68					1	12KL8	12	38	31	4	5	12	2	1			
12DT7	12	8	*85					1	12FX8	12	38	32	5	4	12	2	1				70	4	5	12	8	1			
			*85					2				28	5	4	12	6	1	12L6	12	29	47					1			
*Tube Good if It Reads 22 or More.									12FY8	12	38	30	4	5	12	3	1	12MD8	12	42	35	4	5	12	6	1			
12DT8	12	8	71					1				39	4	5	12	1	1				35	4	5	12	8	1			
			71					2	12G4	12	40	41	4	3	1	6	1				35	4	5	12	9	1			
12DU7	12	38	31	5	4	12	1	1	12G11	12	35	33	1	12	12	3	1	12MX8	12	42	27	4	5	15	2	1			
			77	5	4	12	7	1				31	1	12	12	8	1				39	4	5	12	9	1			
			77	5	4	12	9	1	12GA6	12	40	36	4	3	12	1	1	12Q7	12	37	40	7	2	12	10	1			
12DV7	12	38	49	5	4	9	7	1	12G-B3A	12	27	65					1				63	7	2	12	4	1			
			78	5	4	9	2	1	12G-B7	12	27	61					1				63	7	2	12	5	1			
			78	5	4	9	3	1	12GC5	12	16	26					1	12R5	12	40	39	4	3	2	5	1			
12DV8	12	38	35	5	4	12	3	1	12GC6	12	26	52					1	12R-K19	12	15	10					1			
			58	5	4	12	9	1	12GE5	12	35	*24	1	12	11	3	1				55					1			
			58	5	4	12	1	1	*Normally Shows Short Positions 4-10.									12R-LL3	12	8	55					2			
12DW4A	12	42	27	4	5	2	7	1	12GJ5	12	42	*30	4	5	6	2	1				55					1			
12DW5	12	16	30					1	*Normally Shows Short Position 1-7.									12R-LL5	12	8	68					1			
12DW7	12	8	75					1	12G-K17	12	34	12					1				68					2			
			*90					2										12S8	12	37	45	8	7	5	10	1			
*Tube Good if it Reads 22 or More									12GN7	12	9	21					1				62	8	7	5	1	1			
12DW8	12	38	32	5	4	12	2	1	12GT5	12	42	*30	4	5	6	2	1				62	8	7	5	4	1			
			32	5	4	12	7	1	*Normally Shows Short Position 1-7.												63	8	7	2	3	1			
			44	5	4	12	9	1	12GT5A	12	42	*30	4	5	6	2	1				37	7	2	12	5	1			
12DY8	12	38	30	5	4	12	1	1	*Normally shows short position 1-7.									12SA7	12	37	37	7	2	12	5	1			
			35	5	4	12	9	1				12GV5	12	35	*26	1	12	5	9	1	12SC7	12	37	48	8	7	12	3	1
12DZ6	12	40	33	4	3	12	1	1	*Normally shows short position 3-7-10-11.												48	8	7	12	4	1			
12DZ8	12	38	27	4	5	8	3	1	12GW6	12	27	62					1	12SF5	12	37	41	8	7	12	3	1			
			30	4	5	2	1	1	12H4	12	40	44	4	3	2	6	1	12SF7	12	37	46	8	7	12	2	1			
12E5	12	25	93					1									1	12SG7	12	30	77					1			

◆Use TC-80 Adapter

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
12SH7	12	30	77					1	14A5	12	36	34	8	1	12	6	1	15CW5	15	23	58					1
12SJ7	12	30	83					1	14A7	12	36	45	8	1	12	6	1	15DQ8	15	38	26	4	5	12	8	1
12SK7	12	30	84					1	14AF7	12	36	41	8	1	12	4	1				26	4	5	12	1	1
12SL7	12	25	*85					1				41	8	1	12	5	1	15EA7	15	37	35	8	7	12	1	1
			*85					2	14B6	12	36	40	8	1	4	3	1				39	8	7	12	4	1
*Tube Good if it Reads 22 or More.												68	8	1	4	5	1	15EW6	15	1	77					1
12SN7	12	25	78					1				68	8	1	4	6	1	15EW7	15	20	87					1
			78					2	14B8	12	36	42	8	1	12	4	1				92					2
12SQ7	12	37	42	8	7	12	2	1	14BF11	14	35	25	1	12	12	3	1	15FM7	15	35	25	1	12	3	8	
			71	8	7	12	4	1				25	1	12	12	8	1				36	1	12	3	10	
			71	8	7	12	5	1	14BL11	14	35	29	1	12	12	3	1	15FY7	15	35	25	1	12	12	3	1
12SR7	12	37	46	8	7	12	2	1				31	1	12	12	5	1				42	1	12	12	10	
			68	8	7	12	4	1				29	1	12	12	11	1	15HA6	15	9	23					1
			68	8	7	12	5	1	14BQ11	14	35	28	1	12	12	5	1	15HB6	15	38	*24	4	5	6	2	1
12SS7	12	30	97					1				28	1	12	12	10	1	*Normally Shows Short Position 3-9.								
12SW7	12	37	52	8	7	12	2	1	14BR11	14	35	30	1	12	12	2	1	15KY8	15	42	27	4	5	12	2	1
			70	8	7	12	4	1				31	1	12	12	8	1				39	4	5	12	9	1
			70	8	7	12	5	1				33	1	12	12	10	1	15LE8	15	38	29	4	5	12	9	1
12SX7	12	25	78					1	14C5	12	36	38	8	1	12	6	1	15MF8	15	35	35	1	12	6	7	1
			78					2	14C7	12	36	37	8	1	12	6	1				34	1	12	6	10	1
12SY7	12	37	39	7	2	12	5	1	14E6	12	36	40	8	1	4	3	1	15MX8	15	42	27	4	5	12	2	1
12T10	12	35	28	1	12	12	3	1				69	8	1	4	5	1				39	4	5	12	9	1
			25	1	12	12	8	1				69	8	1	4	6	1	16A5	16	23	68					1
12U7	12	38	40	5	4	9	2	1	14E7	12	36	47	8	1	12	6	1	16A8	16	38	33	5	4	12	3	1
			40	5	4	9	7	1				68	8	1	12	3	1				39	5	4	12	1	1
12V6	12	29	79					1				68	8	1	12	4	1	16AK9	7	35	33	6	12	6	10	1
12W6	12	29	51					1	14F7	12	36	45	8	1	12	4	1				35	6	12	6	3	1
12X4	12	40	44	4	3	12	1	1				45	8	1	12	5	1				31	6	12	6	8	1
			44	4	3	12	6	1	14F8	12	36	30	7	2	12	1	1	16AQ3*	16	39	30	5	4	7	3	1
13CM5	12	27	57					1				30	7	2	12	8	1	*If no test, use alternate settings.								
13CW4	14	41	*87	10	12	12	2	1	14GT8	14	38	52	5	4	12	8	1	16AQ3	16	39	30	5	4	3	7	1
*For Grid Emission Turn D Switch to Position 4.												35	5	4	12	2	1	16BQ11	16	35	28	1	12	12	5	
13D1	25	25	78					1				35	5	4	12	6	1				28	1	12	12	10	1
			78					2	14GW8	14	38	25	4	5	2	8	1	16BX11	16	35	32	1	12	12	2	1
13DE7	12	20	81					1				35	4	5	7	1	1				31	1	12	12	5	1
			90					2	14H7	12	36	35	8	1	12	6	1				31	1	12	12	8	1
13DF7	12	8	*85					1	14J7	12	36	35	8	1	12	6	1	16C-B28	16	35	*28	1	12	5	9	1
			*85					2				50	8	1	12	4	1	*Normally shows short position 3-4-10-11.								
*Tube Good if it Reads 22 or More.									14JG8	14	38	32	4	5	12	8	1	16CL8	16	14	69					1
13DR7	12	38	32	5	4	2	3	1				27	4	5	12	2	1				51					2
			41	5	4	2	7	1				27	4	5	12	6	1	16GK6	16	38	33	5	4	3	2	1
13EM7	12	37	32	8	7	12	1	1	14N7	12	36	42	8	1	12	4	1	16GY5	16	35	*25	1	12	5	9	1
			45	8	7	12	4	1				42	8	1	12	5	1	*Normally Shows Short Position 1-3-4-7-10								
13FD7	12	38	25	4	5	2	3	1	14Q7	12	36	35	8	1	12	4	1	16HB5	16	35	*25	1	12	11	3	1
			32	4	5	2	7	1	14R7	12	36	35	8	1	12	6	1	*Normally shows short position 4-10.								
13FG7	12	14	68					1				72	8	1	12	3	1	16K11	16	35	38	1	12	12	7	1
			56					2				72	8	1	12	4	1				38	1	12	12	9	1
13FM7	14	35	25	1	12	3	8	1	14S7	12	36	38	8	1	12	6	1	16KA6			38	1	12	12	11	1
			36	1	12	3	10	1				52	8	1	12	4	1				30	1	12	9	5	1
13FR7	12	38	24	4	5	2	3	1	14V7	12	36	32	8	1	12	6	1	*May show short position 3-4-7-11.								
			32	4	5	2	7	1	14W7	12	36	31	8	1	4	6	1	16LD6	16	9	51					1
13GB5♦	12	42	*25	4	5	2	1	1	14X7	12	36	43	8	1	12	3	1	16LU8	16	35	27	1	12	6	7	1
*Normally shows short position 3-6-7-8.												36	8	1	12	5	1				27	1	12	6	10	1
13GF7	12	42	27	4	5	12	2	1				35	8	1	12	6	1	16MY8	16	35	27	1	12	6	7	1
			38	4	5	12	9	1	14Y4	12	36	45	8	1	12	3	1				27	1	12	6	10	1
13GF7A	12	42	27	4	5	12	2	1				45	8	1	12	6	1	16Y9	16	43	27	5	6	12	1	1
			38	4	5	12	9	1	15A6	15	38	30	5	4	12	2	1				27	5	6	12	8	1
13J10	12	35	96	1	12	12	6	1	15A8	15	37	36	7	2	12	4	1	17A8	17	11	66					1
			28	1	12	12	11	1				40	7	2	12	3	1				55					2
13J78	12	12	20					1	15AB9	15	43	79	5	6	10	2	1	17AB9	17	43	79	5	6	10	2	1
			*99					2				79	5	6	4	8	1				79	5	6	4	8	1
*Tube good if it reads 60 or more.									15AF11	15	35	31	1	12	12	11	1	17AB10	17	35	29	1	12	12	11	1
13JZ8	12	35	29	1	12	6	7	1				31	1	12	12	6	1				95	1	12	12	6	1
			40	1	12	6	10	1				35	1	12	12	3	1	17AF3	17	15	12					1
13SJ7	12	30	83					1	15BD11	15	35	26	1	12	12	11	1	17AV5	17	28	62					1
13V10	12	35	33	1	12	12	3	1				31	1	12	12	3	1	17AX3	17	35	30	1	12	10	4	1
			33	1	12	12	8	1				31	1	12	12	6	1	17AX4	17	34	13					1
13Z10	12	35	30	1	12	12	11	1	15BD11A	15	35	26	1	12	12	11	1	17AY3	17	42	27	5	4	7	2	1
			95	1	12	12	6	1				31	1	12	12	3	1	17AY3B	17	42	27	5	4	7	2	1
14A4	12	36	41	8	1	12	6	1				31	1	12	12	6	1									

◆Use TC-80 Adapter

△Use TC-70 Adapter

*Normal Shorts Refer to Position of "D" Switch.

12SH7 – 17AY3B

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
17B-B14♦	17	42	*33	4	5	1	2	1	17JG6A	17	42	24	4	5	1	2	1	19CL8-A	19	14	74					1
*Normally shows short position 3-6-7-8.									17JK8	17	8	54					1				53					2
17BD11	17	35	26	1	12	12	11	1				55					2	19D8	19	38	32	5	4	12	2	1
			31	1	12	12	3	1	17JM6	17	35	26	1	12	4	5	1				35	5	4	12	9	1
			31	1	12	12	6	1	17JN6	17	35	27	1	12	4	11	1				81					1
17BE3	17	35	26	1	12	4	10	1	17JQ6	17	38	*34	4	5	8	7	1				90					2
17BF11	17	35	25	1	12	12	3	1				57	4	5	8	6	1	19DK3	19	42	31	4	5	2	7	1
			25	1	12	12	8	1	*May show short position 2-3.								1	19DKQ3	19	35	30	1	12	4	10	1
17BF11A	17	35	25	1	12	12	3	1	17JR6	17	42	34	4	5	1	2	1	19DN6	19	26	47					1
			25	1	12	12	8	1	17JS6	17	35	*29	1	12	9	5	1	19EA8	19	11	71					1
17BH3	17	42	27	5	4	7	2	1	*Normally shows short position 3-4-10-11.												56					2
17BH3A	17	42	27	5	4	7	2	1	17JT6	17	42	27	4	5	1	2	1	19EW7	19	20	87					1
17BJ6	17	1	81					1	17JT6A	17	42	27	4	5	1	2	1				92					2
17BQ6	17	27	69					1	17JZ8	17	35	29	1	12	6	7	1	19EZ8	19	38	33	5	4	12	2	1
17BR3	17	15	10					1				40	1	12	6	10	1				33	5	4	12	7	1
17BS3	17	42	27	4	5	2	7	1	17KV6	17	42	30	4	5	1	2	1				33	5	4	12	9	1
17BW3	17	35	28	1	12	4	10	1	17KW6♦	17	42	30	4	5	1	8	1	19FX5	19	4	68					1
17BZ3	17	35	30	1	12	4	10	1	17L6	17	29	47					1	19GQ7	19	38	24	4	5	3	2	1
17C5	17	4	44					1	17LD8	17	42	25	4	5	12	2	1				24	4	5	3	6	1
17C8	17	38	33	5	4	12	2	1				33	4	5	12	9	1				24	4	5	3	8	1
			65	5	4	12	7	1	17R5	17	4	50					1	19GY5	19	35	*25	1	12	5	9	1
			65	5	4	12	8	1	17R-HH2	17	8	65					1	*Normally shows short position 3-4-7-10-11.								
17C9	17	38	28	5	4	6	1	1				65					2	19HR6	19	1	71					1
			28	5	4	10	7	1	17R-K19	17	15	10					1	19HS6	19	1	66					1
17CA5	17	4	55					1	17W6	17	29	52					1	19HV8	19	14	64					1
17CK3	17	42	25	4	5	7	2	1	17X10	17	35	98	1	12	12	6	1				*99					2
17CL3	17	42	27					1				28	1	12	12	11	1	*Tube Good if it Reads 40 or More.								
17CQ4	17	34	11					1	17Y9	17	43	27	5	6	12	1	1	19J6	19	2	60					1
17CT3	17	38	32	4	5	6	2	1				27	5	6	12	8	1				60					2
17CU5	17	4	47					1	17Z3*	17	38	33	4	5	2	9	1	19JC6	19	9	65					1
17D4	17	34	11					1	*If no test use alternate setting below.								19JN8	19	14	67					1	
17DE4	17	34	13					1				17	39	33	4	5	2	3	1						2	
17DM4	17	34	11					1	18A5	18	28	69					1	19KF6♦	19	42	33	4	5	7	1	1
17DQ4	17	34	11					1	18AJ10	18	35	32	1	12	4	3	1	19KG8	19	38	21	4	5	12	9	1
17DQ6	17	27	65					1				33	1	12	4	8	1				21	4	5	12	2	1
17DQ6B	17	27	62					1	18AK5	18	1	63					1	19MR9	19	1	73					1
17DW4A	17	42	27	4	5	2	7	1	18AQ5	18	3	77					1	19Q9	19	38	25	4	5	12	1	1
17EW8	17	8	65					1	18C51	18	38	29	9	1	12	3	1				25	4	5	12	8	1
			65					2				29	9	1	12	7	1	19T8	19	17	90					1
17FY7	17	35	25	1	12	12	3	1	18DZ8	18	38	27	4	5	8	3	1				63					2
			42	1	12	12	10	1				30	4	5	2	1	1	19U3	19	38	29	5	4	12	9	1
17GE5	17	35	*24	1	12	11	3	1	18FW6	18	1	79					1	19V8	19	38	40	5	4	12	6	1
*Normally Shows Short Position 4-10.									18FX6	18	1	92					1				32	5	4	12	2	1
17GJ5	17	42	*30	4	5	6	2	1	18FY6	18	6	84					1				32	5	4	12	7	1
*Normally Shows Short Position 1-7.												81					2				61	5	4	12	9	1
17GJ5A	17	42	*30	4	5	6	2	1	18GB5♦	18	42	*25	4	5	2	1	1	19W3	19	38	29	5	4	12	9	1
*Normally shows short position 1-7.									*Normally shows short position 3-6-7-8.								1	19X3	19	38	29	5	4	12	9	1
17GT5	17	42	*30	4	5	6	2	1	18GD6	18	1	80					1	19X8	19	12	73					1
*Normally Shows Short Position 1-7.									18GE6	18	6	78					1				61					2
17GTA	17	42	*30	4	5	6	2	1				85					2	19Y3	19	38	29	4	5	12	9	1
*Normally shows short position 1-7.									18GV5	18	35	*26	1	12	5	9	1	20AQ3*	19	39	30	5	4	7	3	1
17GV5	17	35	*26	1	12	9	5	1	*Normally shows short position 3-4-7-10-11.								1	*If no test, use alternate settings.								
*Normally Shows Short Position 3-4-7-10-11.									18GV8	18	38	25	4	5	12	9	1	20AQ3	19	39	30	5	4	3	7	1
17GW6	17	27	62					1				25	4	5	12	2	1	20D1	9	5	62					1
17GY5	17	35	*25	1	12	5	9	1	18HRR	18	38	36	5	4	12	9	1				62					2
*Normally shows short position 3-4-7-10-11.												33	5	4	12	1	1	20EQ7	19	38	34	5	4	12	2	1
17H3	17	15	13					1	18J6	18	2	60					1				71	5	4	12	8	1
17H-B25♦	17	42	*33	4	5	1	2	1				60					2	20EW7	19	20	87					1
*Normally shows short position 3-6-7-8.									18R-AL1	18	38	33	4	5	2	3	1				92					2
17HC8	17	38	36	5	4	12	3	1	19A3	19	40	32	3	4	6	5	1	20F77	19	38	35	2	1	3	5	1
			38	5	4	12	1	1	19AJ8	19	38	85	5	4	12	1	1				35	2	1	3	8	1
17HG8	17	38	25	4	5	3	2	1				38	5	4	12	9	1	20LF6	20	35	*31	1	12	5	9	1
			25	4	5	1	6	1	19AQ5	19	3	77					1	*May show short position 3-4-7-10-11.								1
17JB6	17	42	*29	4	5	6	2	1	19AU4																	

△Use TC-70 Adapter ♦Use TC-80 Adapter

*Normal Shorts Refer to Position of "D" Switch

17B-B14 - 21GY5

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitivity	A	B	C	D	Test Pos.
21HB5	22	35	*25	1	12	11	3	1	25C5	25	4	44					1	28EC4	30	37	32	7	8	2	5	1
*Normally Shows Short Position 4-10									25C6	25	29	45					1	28GB5	30	42	*25	4	5	2	1	1
21HD5	22	35	*27	1	12	3	11	1	25CA5	25	4	55					1	*Normally shows short position 3-6-7-8.								
*Normally shows short position 4-5-9-10									25CD6	25	26	53					1	28HA6	30	9	23					1
21HJ5	22	35	*27	1	12	3	11	1	25CG3	25	35	30	1	12	4	10	1	28HD5	30	35	*27	1	12	3	11	1
*Normally Shows Short Position 4-5-9-10									25CK3	25	42	30	4	5	7	2	1	*Normally shows short position 4-5-9-10								
21JS6	22	35	*29	1	12	9	5	1	25CM3	25	42	30	4	5	2	7	1	29GK6	30	38	33	5	4	3	2	1
*Normally shows short position 3-4-10-11.									25CT3	25	38	32	4	5	6	2	1	29KQ6	30	42	*29	4	5	1	8	1
21JV6	22	35	28	1	12	4	11	1	25CU6	25	27	69					1	*Normally shows short position 2-3-6-7.								
21JZ6	22	35	*31	1	12	9	5	1	25D4	25	34	11					1	29LE6	30	42	*30	4	5	8	1	
*Some tubes may show short position 3-4-10-11.									25DK3	25	42	31	4	5	2	7	1	*Normally shows short position 2-3-6-7.								
21KA6	22	35	*30	1	12	9	5	1	25DK4	25	40	26	3	4	6	5	1	30A5	30	40	27	3	4	5	2	1
May show short position 3-4-7-11.									25DL3	25	42	29	4	5	7	2	1	30AE3	30	39	30	5	4	7	3	1
21KQ6	22	42	*29	4	5	1	8	1	25DN6	25	26	47					1	*If no test, use alternate settings.								
*Normally shows short position 2-3-6-7.									25DQ6	25	27	65					1	30AE3	30	39	30	5	4	3	7	1
21LG6	22	35	*32	1	12	9	5	1	25DT5	25	16	45					1	30AG11	30	35	28	1	12	12	8	1
*May show short position 2-3-4-7-10-11.									25E5	25	27	58					1									
21LR8	22	42	31	4	5	12	2	1	25EC6	25	26	53					1									
			31	4	5	12	9	1	25EH5	25	4	57					1									
21LU8	22	35	27	1	12	6	7	1	25F5	25	4	54					1	30C1	9	11	66					1
		35	27	1	12	6	10	1	25FAA	25	4	54					1	30CW5	30	23	58					1
21MY8	22	35	27	1	12	6	7	1	25FY8	25	38	30	4	5	12	3	1	30HD5	30	35	*27	1	12	3	11	1
			27	1	12	6	10	1				39	4	5	12	1	1	*Normally shows short position 4-5-9-10								
22AL3*	22	39	30	5	4	7	3	1	25G-B6	25	27	64					1	30HJ5	30	35	*27	1	12	3	11	1
*If no test, use alternate settings.									25GE5	25	35	*24	1	12	11	3	1	*Normally shows short position 4-5-9-10								
22AL3	22	39	30	5	4	3	7	1	*Normally shows short position 4-10.									30JZ6	30	35	*31	1	12	9	5	1
22BH3	22	42	27	5	4	7	2	1	25HX5	25	42	*30	4	5	7	1	1	*Some tubes may show short position 3-4-10-11.								
22BH3A	22	42	27	5	4	7	2	1	*Normally shows short position 2-3.									30KD6	30	35	*26	1	12	9	5	1
22BW3	22	35	28	1	12	4	10	1	25JQ6	25	38	*34	4	5	8	7	1	*Normally shows short position 3-4-10-11.								
22DE4	22	34	13					1				57	4	5	8	6	1	30KG6	30	42	*26	4	5	1	8	1
22JF6	22	42	*26	4	5	2	6	1	*May show short position 2-3.									*Normally shows short position 2-3-6-7.								
*Normally shows short position 1-7.									25JZ8	25	35	29	1	12	6	7	1	30L1	7	38	33	5	4	7	2	1
22JG6	22	42	24	4	5	1	2	1				40	1	12	6	10	1									
22JG6A	22	42	24	4	5	1	2	1	25L6	25	29	47					1									
22JR6	22	42	34	4	5	1	2	1	25M-P20	25	1	43					1	30MB6	30	35	*32	1	12	9	5	1
22JU6	22	42	*30	4	5	2	6	1	25R-K19	25	15	10					1	*Normally shows short position 3-4-10-11.								
*Normally shows short position 1-7									25SN7	25	25	78					1	30M-P23	30	40	30	3	4	5	2	1
22KM6	22	42	*29	4	5	6	2	1				78					2	30M-P27	30	40	30	3	4	5	2	1
*Normally shows short position 1-7.									25U4	25	34	11					1	30P16	16	23	68					1
22KV6	22	42	30	4	5	1	2	1	25W4	25	34	11					1	30PL12	16	38	33	5	4	12	3	1
23JS6	22	35	*29	1	12	9	5	1	25W6	25	29	51					1									
*Normally shows short position 3-4-10-11.									25Z6	25	37	34	7	2	12	3	1	31AL10	30	35	51	1	12	6	3	1
23JS6A	22	35	*29	1	12	9	5	1				34	7	2	12	5	1									
*Normally shows short position 3-4-10-11.									26A6	25	1	77					1	31JS6A	30	35	*29	1	12	9	5	1
23MB6	22	35	*32	1	12	9	5	1	26A7	25	37	29	7	6	12	1	1	*Normally shows short position 3-4-10-11								
*Normally shows short position 3-4-10-11.												29	7	6	12	3	1	31LQ6	30	42	*26	4	5	6	2	1
23Z9	22	35	30	1	12	6	10	1	26AQ8	25	8	70					1	*Normally shows short position 1-7.								
			39	1	12	6	3	1				70					2	31LR8	30	42	31	4	5	12	2	1
			28	1	12	6	8	1	26BK6	25	6	86					1									
24AX4	25	34	13					1				70					2	31LZ6	30	42	*31	4	5	6	2	1
24BF11	25	35	25	1	12	12	3	1	26C6	25	6	85					1	*Normally shows short position 1-7.								
			25	1	12	12	8	1				82					2	32A8	30	38	33	5	4	12	3	1
24JE6A	25	42	*26	4	5	6	2	1	26D6	25	1	93					1									
*Normally shows short position 1-7.									26DQ5	25	26	55					1	32ET5	30	4	60					1
24JZ8	25	35	29	1	12	6	7	1	26E6	25	29	40					1	32HQ7	35	35	34	1	12	7	2	1
			40	1	12	6	10	1	26HU5	25	37	*28	7	8	1	5	1									
24LQ6	25	42	*26	4	5	6	2	1	*Normally shows short position 2-6.									33G7	30	35	*55	1	12	7	10	1
*Normally shows short position 1-7.									26JG6	25	42	56					1									
24LZ6	24	42	*31	4	5	6	2	1	26LW6	25	37	*31	7	8	1	5	1	*Normally Shows Short Position 9-11.								
*Normally shows short position 1-7.									*Normally shows short position 2-6.									33GY7	30	35	*56	1	12	7	11	1
25A6	25	29	74					1	26Z5	25	38	36	5	4	9	1	1	*26 1 12 7 2 1								
25AU4	25	34	10					1				36	5	4	9	6	1	*Normally Shows Short Position 9-10.								
25AV5	25	28	62					1	27GB5	25	42	*25	4	5	2	1	1	33GY7A	30	35	*56	1	12	7	11	1
25AX4	25	34	13					1	*Normally shows short position 3-6-7-8.									*26 1 12 7 2 1								
25B6	25	29	48					1	27KG6	25	42	*26	4	5	1	8	1	*Normally shows short position 9-10.								
*Normally shows short position 2-3-6-7.									27LF6	25	35	*31	1	12	5	9	1	33HE7	30	35	27	1	12	10	2	1
25BK5	25	10	53					1	*May show short position 3-4-7-10-11																	
25BQ6	25	27	69					1	28D7	30	36	40	8	1	12	2	1	33JR6	30	42	34	4	5	1	2	1
25BR3	25	15	10					1				40	8	1	12	7	1	33JV6	30	35	28	1	12	4	11	1

◆Use TC-80 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

21HB5 – 33JV6

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
34CD3	35	35	*27	1	12	4	10	1	50HN5	50	38	30	4	5	1	2	1	5663	6	40	25	3	4	12	1	1
*Some tubes may show short position 5-6-8-9.									50JY6	50	27	55					1	5670	6	38	29	9	1	12	3	1
34CE3	35	35	25	1	12	4	10	1	50L6	50	29	47					1				29	9	1	12	7	1
34CM3	35	42	30	4	5	2	7	1	50X6	50	36	35	8	1	12	3	1	5679	6	36	48	8	1	12	3	1
34DK3	35	42	31	4	5	2	7	1				35	8	1	12	6	1				48	8	1	12	3	1
34GD5	35	4	57					1	50Y6	50	37	35	7	2	12	3	1	5686	6	23	87					1
34R3	35	38	33	5	4	2	9	1				35	7	2	12	5	1	5687	12	38	37	5	4	8	2	1
35A5	35	36	34	8	1	12	6	1	50Y7	50	37	35	7	2	6	3	1				37	5	4	8	7	1
35B5	35	3	55					1				35	7	2	6	5	1	5691	6	25	*85					1
35C5	35	4	54					1	53HK7	50	35	29	1	12	10	9	1				*85					2
35CD6	35	26	53					1				29	1	12	10	2	1	*Tube Good if it Reads 22 or More.								
35D28	35	38	27	4	5	8	3	1	53KU	5	33	10					1	5692	6	25	78					1
			30	4	5	2	1	1				10					2				78					2
35EH5	35	4	57					1	55N3	50	38	29	4	5	6	9	1	5693	6	30	83					1
35GL6	35	40	39	4	3	6	2	1	58HE7	50	35	27	1	12	10	2	1	5696	6	40	34	4	3	5	6	1
35HB8	35	38	36	5	4	12	9	1				27	1	12	10	9	1	5725	6	1	77					1
			33	5	4	12	1	1	60EH5	50	4	57					1	5726	6	5	62					1
35L6	35	29	54					1	60FX5	50	4	68					1				62					2
35LR6	35	35	*32	1	12	9	5	1	60HL5	50	38	30	4	5	1	2	1	5727	6	40	32	4	3	5	1	1
*May show short position 3-4-7-10-11.									64SPT	6	38	33	5	4	1	2	1	5749	6	1	78					1
35W4	35	40	33	4	3	6	5	1	150C3	50	37	*99	2	11	3	5	1	5750	6	1	91					1
35Y4	35	36	31	8	1	4	2	1	*Tube Good if it Reads 60 or More.									5751	12	8	*85				1	
35Z3	35	36	31	8	1	12	2	1	*Normally Shows Short Position 11.												*85				2	
35Z4	35	37	33	7	2	12	5	1	*Normally Shows Grid Emission.									*Tube Good if it Reads 22 or More.								
35Z5	35	37	33	7	2	3	5	1	213PEN	19	38	*32	5	4	7	2	1	5755	16	38	38	4	5	9	3	1
36AM3	35	40	35	4	3	6	5	1	*Normally Shows Short Position 1-6-9												38	4	5	9	6	1
36KD6	35	35	*26	1	12	9	5	1	396-A	6	38	29	9	1	12	3	1	5763	6	38	33	5	4	8	9	1
*Normally shows short 3-4-10-11.												29	9	1	12	1	1	5814-A	12	8	75					1
36MC6	35	42	*29	4	5	6	2	1	403B	6	1	63					1				75					2
*Normally shows short position 1-7									407A	40	38	29	1	9	5	3	1	5823	1	40	*85	5	6	5	4	1
38A3	35	39	30	4	5	1	6	1				29	1	9	5	7	1	*Ignore short lamp indication.								
38HE7	40	35	27	1	12	10	2	1	408A	19	1	65					1	*Normally shows grid emission.								
			27	1	12	10	9	1	507A	6	37	26	2	7	12	5	1	5824	25	29	48					1
38HK7	40	35	29	1	12	10	9	1	884	6	37	35	2	7	12	5	1	5845	4	40	*100	3	4	7	1	1
			29	1	12	10	2	1	1003	6	31	8					1				*100	3	4	7	5	1
40FR5	40	4	54					1				8					2	*Tube good if it reads 10 or more								
40KD6	40	35	*26	1	12	9	5	1	1201	6	36	*33	8	2	1	5	1	5871	6	29	79					1
*Normally shows short position 3-4-10-11.									*Normally Shows Short Position 3-4-6-7.									5879	6	38	52	5	4	12	1	1
40KG6	40	42	*26	4	5	1	8	1	1203	6	36	53	8	1	12	4	1	5881	6	29	63					1
*Normally shows short position 2-3-6-7.									1222A	6	37	25	1	6	12	4	1	5915	6	1	92					1
40Z5	50	37	31	7	2	3	5	1	1223	6	37	50	7	2	12	10	1	5920	6	2	49					1
42EC4	40	37	32	7	8	2	5	1	1232	6	36	36	8	1	12	6	1				49					2
42KN6	22	35	*30	7	12	9	5	1	1273	6	36	37	8	1	12	6	1	5931	5	33	16					1
*DO NOT turn D switch to position 1 and 12.									1274	6	36	45	8	1	12	3	1				16					2
*Normally shows short position 3-4-10-11.												45	8	1	12	6	1	5932	6	29	63					1
45B5	50	23	68					1	1280	12	36	37	8	1	12	6	1	5961	6	37	37	7	2	12	5	1
45Z3	50	40	32	7	1	6	2	1	1294	2	36	60	8	1	12	4	1	5963	12	8	76					1
45Z5	50	37	31	7	2	3	5	1	1611	6	29	91					1				76					?
50A5	50	36	35	8	1	12	6	1	1612	6	37	44	7	2	1	10	1				67					?
50B5	50	3	38					1	1614	6	29	67					1	5965	12	8	54					1
50BK5	50	10	53					1	1619	3	37	39	7	2	12	5	1				54					2
50BM8	50	38	33	5	4	12	3	1	1620	6	37	50	7	2	12	10	1	5964	6	2	67					1
			39	5	4	12	1	1	1621	6	29	91					1	5992	6	29	79					1
50C5	50	4	44					1	1622	6	29	63					1	6005	6	3	77					1
50C6	50	29	45					1	1626	12	29	82					1	6006	6	30	77					1
50CA5	50	4	55					1	1631	6	29	63					1	6028	19	1	63					1
50CD6	50	26	53					1	1632	12	29	47					1	6042	6	25	78					1
50DC4	50	40	33	4	3	6	5	1	1634	12	37	48	8	7	12	3	1				78					2
50E5	50	27	58					1				48	8	7	12	4	1	6046	25	29	47					1
50EH5	50	4	57					1	1665	6	40	32	4	3	5	1	1	6057	12	8	*85					1
50FA5	50	4	54					1	1667	6	40	32	4	3	5	1	1	*85								
50FE5	50	29	37					1	1852	6	30	60					1	*Tube Good if it Reads 22 or More.								
50FK5	50	4	88					1	1853	6	30	74					1	6058	6	5	62					1
50FY8	50	38	30	4	5	12	3	1	2050	6	37	34	7	2	12	5	1				62					2
			39	4	5	12	1	1	3003	3	32	13					1	6060	12	8	74					1
50GY7	50	35	*55	1	12	7	11	1	5591	6	1	63					1				74					2
			*30	1	12	7	2	1	5649	12	29	92					1	6062	6	38	33	5	4	8	9	1
*Normally shows short position 9-10.									5654	6	1	63					1	6066	6	6	85					1
50HC6	50	40	26	3	4	6	2	1	5659	12	29	92					1				78					2
50HK6	50	40	27	3	4	6	2	1	5661	12	30	84					1									2

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
6067	12	8	75					1	6463	12	38	28	4	5	9	3	1	7105	12	37	35	8	7	12	1	1	
			75					2				28	4	5	9	8	1				35	8	7	12	4	1	
6069	6	1	63					1	6485	6	1	58					1	7119	12	38	30	4	5	8	2	1	
6072	12	8	93					1	6516	6	40	34	4	3	12	1	1				30	4	5	8	7	1	
			93					2	6520	6	37	35	8	7	12	1	1	7167	12	1	54					1	
6080	6	37	35	8	7	12	1	1				35	8	7	12	4	1	7189	6	38	*33	5	4	1	2	1	
			35	8	7	12	4	1	6550	6	29	52					1	*Normally Shows Short Position 1-3-6-9.									
6082	25	37	35	8	7	12	1	1	6660	6	1	78					1	7199	6	38	30	5	4	12	7	1	
			35	8	7	12	4	1	6661	6	1	89					1				32	5	4	12	9	1	
6084	6	38	39	4	5	7	9	1	6662	6	1	81					1	7233	6	38	*33	5	4	2	7	1	
6085	12	8	74					1	6663	6	5	62					1	*Normally Shows Short Position 1-3-6-9.									
			74					2				62					2	7247	12	8	75					1	
6087	5	33	23					1	6664	6	40	30	4	3	12	6	1	*90							2		
			23					2	6669	6	3	77					1	*Tube Good If It Reads 22 or More.									
6096	6	1	63					1	6676	6	1	64					1										
6097	6	5	62					1	6677	6	38	*32	5	4	2	9	1	7258	12	13	62					1	
			62					2	*Normally Shows Short Position 3-8.										61								2
6100	6	40	41	4	3	1	6	1	6678	6	11	79					1	7308	6	8	23					1	
6101	6	2	60					1				55					2				24					2	
			60					2	6679	12	8	79					1	7320	6	23	68					1	
6113	6	25	*85					1				79					2	7355	6	37	37	7	2	12	6	1	
			*85					2	6680	12	8	75					1	7360	6	38	29	4	5	12	3	1	
*Tube Good If It Reads 22 or More.												75					2	7370	40	38	24	4	5	8	2	1	
6134	6	30	60					1	6681	12	8	*85					1				24	4	5	8	7	1	
6135	6	40	41	4	3	1	6	1				*85					2	7408	6	29	80					1	
6136	6	1	82					1	*Tube Good If It Reads 22 or More.								7543	6	1	85						1	
6137	6	30	84					1	6686	6	38	24	4	5	1	2	1	7551	15	38	*33	4	5	9	2	1	
6146	6	37	*38	7	2	1	5	1	6687	6	1	89					1	*Normally Shows Short Position 3-8.									
*Normally Shows Short Position 4-6.									6688	6	38	25	4	5	1	2	1	7558	6	38	*26	4	5	3	2	1	
6147	6	29	63					1	6689	6	38	25	4	5	12	2	1	*Normally Shows Short Position 1-9.									
6159	25	37	*38	7	2	1	5	1	6829	12	8	54					1	7581	6	29	64					1	
*Normally Shows Short Position 4-6.												54					2	7586	6	41	*65	10	12	12	2	1	
6180	6	25	78					1	6883	12	37	*38	7	2	1	5	1	*For Grid Emission Turn D Switch to Position 4.									
			78					2	*Normally Shows Short Position 4-6.								7587	6	41	*67	10	12	12	2	1		
6186	6	1	80					1	6887	6	40	33	4	3	12	2	1	*For Grid Emission Turn D Switch to Position 4.									
6187	6	1	87					1				33	4	3	12	7	1	7591	6	37	34	7	2	4	6	1	
6188	6	25	*81					1	6888	6	30	62					1	7607	6	37	*32	7	2	1	5	1	
			*81					2	6919	6	5	62					1	*Normally Shows Short Position 4-6.									
*Tube Good If It Reads 22 or More.												62					2	7643	6	11	72					1	
6189	12	8	75					1	6922	6	8	24					1				55					2	
			75					2				24					2	7687	6	11	77					1	
6197	6	38	*32	5	4	2	9	1	6939	12	38	34	4	5	9	1	1				67					2	
*Normally shows short position 3-8.												34	4	5	9	3	1	7693	6	1	93					1	
6198	12	8	75					1	6968	6	1	63					1	7694	6	1	84					1	
			75					2	6973	6	16	62					1	7695	50	38	34	5	4	12	6	1	
6201	12	8	74					1	7000	6	37	50	7	2	12	10	1	7701	12	38	*38	5	4	1	2	1	
			74					2	7025	12	8	*85					1	*Normally Shows Short Position 3-7-8-9.									
6202	6	40	44	4	3	12	1	1				*85					2	7716	12	12	53					1	
			44	4	3	12	6	1	*Tube Good If It Reads 22 or More.											*97						2	
6203	6	38	41	4	5	12	1	1	7027	6	37	*36	7	2	5	6	1	*Tube Good If It Reads 20 or More.									
			41	4	5	12	9	1	*Normally Shows Short Position 1-4.								7719	12	39	29	4	5	1	7	1		
6211	12	8	54					1	7036	6	1	92					1	7722	6	23	80					1	
			54					2	7044	12	38	30	4	5	8	2	1	7724	14	38	52	5	4	12	8	1	
6216	6	38	*29	4	5	3	2	1				30	4	5	8	7	1				35	5	4	12	2	1	
*Normally shows short position 1-6.									7054	12	9	42					1				35	5	4	12	6	1	
6218	6	38	72	4	5	12	2	1	7055	12	5	62					1	7728	12	8	74					1	
6227	6	38	25	4	5	1	2	1				62					2				74					2	
6265	6	1	89					1	7056	12	1	64					1	7729	12	8	*85					1	
6267	6	38	40	5	4	2	9	1	7057	12	8	53					1	*85							2		
6293	6	37	*38	7	2	1	5	1				53					2	*Tube Good If It Reads 22 or More.									
*Normally shows short position 4-6									7058	12	8	*85					1	7730	12	8	75					1	
6336	6	37	29	8	7	12	1	1				*85					2				75					2	
*Tube Good If It Reads 22 or More.									7059	12	11	79					1	7731	6	11	79					1	
6350	12	38	31	4	5	9	3	1				55					2				55					2	
			31	4	5	9	8	1	7060	12	13	55					1	7732	6	1	64					1	
6360	12	38	30	4	5	9	1	1				75					2	7733	12	9	42					1	
			30	4	5	9	3	1				75					1	7738	6	40	*33	4	3	2	6	1	
6384	6	37	33	8	6	12	7	1	7061	12	16	67					1	*Normally Shows Short Position 1-7.									
6417	12	38	33	5	4	8	9	1	7062	12	8	54					1	7751	6	37	30	2	7	4	5	1	
												54					2	7754	6	38	34	5	4	12	6	1	

◆Use TC-80 Adapter

△Use TC-70 Adapter

*Normal Shorts Refer to Position of "D" Switch.

6067 - 7754

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
7788	6 38	*29	4 5 3 2	1				1	B152	12 8	74						1	CV580	6 37	45	7 2 12 5	1				1	
	*Normally shows short position 6-9.										74						2	CV581	6 29	99						1	
7867	6 26	53						1	B309	12 8	74						1	CV582	6 29	99						1	
7868	6 42	*27	4 5 2 6	1				1			74						2	CV583	6 29	99						1	
	*Normally Shows Short Position 1-7.								B319	7 38	33	5 4 7 2	1				1	CV586	6 29	63						1	
7895	6 41	*85	10 12 12 2	1				1			33	5 4 7 6	1				1	CV587	6 37	40	7 2 12 10	1				1	
	*For Grid Emission Turn D Switch to Position 4.								B329	12 8	75						1			63	7 2 12 4	1				1	
7898	14 8	73						1			75						2			63	7 2 12 5	1				1	
		73						2	B339	12 8	*85						1	CV588	6 37	40	7 2 12 10	1				1	
7984	12 35	*59	1 12 7 11	1				1			*85						2			63	7 2 12 4	1				1	
	*Normally shows short position 2-3-4-5-6-8-9.								*Tube Good if it Reads 22 or More.											63	7 2 12 5	1				1	
8016	1 32	55						1	B719	6 8	70						1	CV589	6 37	40	7 2 12 10	1				1	
8032	12 37	*38	7 2 1 5	1				1			70						2			63	7 2 12 4	1				1	
	*Normally shows short position 4-6.								BPM04	6 3	77						1			63	7 2 12 5	1				1	
8056	6 41	*63	10 12 12 2	1				1	CV131	6 40	35	4 3 12 1	1				1	CV590	6 30	83						1	
	*For grid emission turn D switch to position 4.								CV133	6 40	41	4 3 1 6	1				1	CV591	6 30	83						1	
8102	12 38	28	4 5 12 3	1				1	CV136	6 40	34	4 3 12 1	1				1	CV592	6 30	83						1	
		27	4 5 12 9	1				1	CV138	6 40	30	4 3 12 1	1				1	CV593	5 33	12						1	
8106	12 38	*24	4 5 3 7	1				1	CV140	6 5	62						1			12						2	
	*Normally Shows Short Position 2-6-9.										62						2	CV594	6 30	77						1	
8113	6 1	58						1	CV216	50 37	*99	2 11 3 5	1				1	CV595	6 30	77						1	
8136	6 1	65						1		*Normally Shows Short Position No. 11.								CV657	6 37	50	7 2 12 10	1				1	
8156	13 35	*32	1 12 9 10	1				1		*Normally Shows Grid Emission.								CV660	6 30	60						1	
	*Normally Shows Short Position 2-3-4-5-6-7-8-11.									*Tube Good if it Reads 60 or More.								CV661	6 30	74						1	
8233	6 42	*25	4 5 7 8	1				1	CV283	6 5	62						1	CV664	6 40	*46	4 3 1 6	1				1	
	*Normally shows short position 2-6.										62						2	*Normally Shows Short Position 2-7.									
	*May show short on position 3.								CV450	6 29	*62						1	CV665	6 1	*73						1	
8255	6 38	*85	4 5 7 8	1				1		*For Plate Cap Use Jack Next to Socket 26.								CV686	50 37	*85	2 11 3 5	1				1	
	*Normal short position 1-3-6-9								CV452	6 6	85						1	*Normally Shows Short Position 11.									
8278	6 42	*31	4 5 3 7	1				1			78						2		*Normally Shows Grid Emission.								
	*Normally shows short position 1-2-6-8.								CV453	6 1	91						1	CV692	6 31	8						1	
8327	6 23	65						1	CV454	6 1	78						1			8						2	
8417	6 29	54						1	CV455	12 8	74						1	CV694	12 30	77						1	
8425	6 1	87						1			74						2	CV697	12 30	83						1	
8458	12 42	32	4 5 9 1	1				1	CV491	12 8	75						1									1	
		32	4 5 9 3	1				1			75						2	CV698	12 30	83						1	
8552	12 37	*38	7 2 1 5	1				1	CV492	12 8	*85						1	CV700	12 37	46	8 7 12 2	1				1	
	*Normally shows short position 4-6.										*85						2			68	8 7 12 4	1				1	
8908	6 37	*30	7 8 1 5	1				1		*Tube Good if it Reads 22 or More.										68	8 7 12 5	1				1	
	*Normally shows short position 2-6.								CV493	6 40	44	4 3 12 1	1				1	CV703	6 37	35	7 2 12 5	1				1	
9001	6 1	93						1			44	4 3 12 6	1				1	CV706	6 37	48	7 2 12 10	1				1	
9002	6 40	*46	4 3 1 6	1				1	CV511	6 29	79						1	CV717	5 33	22						1	
	*Normally Shows Short 2-7.								CV538	12 37	37	7 2 12 5	1				1			22						2	
9003	6 1	*73						1	CV544	12 30	84						1	CV723	3 37	39	7 2 12 5	1				1	
	*Tube Good if it Reads 23 or More.								CV547	12 37	42	8 7 12 2	1				1	CV726	35 36	31	8 1 12 2	1				1	
9006	6 40	*55	4 3 1 5	1				1			71	8 7 12 4	1				1	CV728	2 37	53	7 2 12 10	1				1	
	*Normally Shows Short Position 2-7.								CV551	25 29	45						1	CV729	5 33	12						1	
A863	6 37	50	7 2 12 10	1				1			45						1			12						2	
A1834	6 37	35	8 7 12 1	1				1	CV552	25 29	47						1	CV731	6 29	91						1	
		35	8 7 12 4	1				1	CV553	25 29	47						1	CV732	6 34	11						1	
AR18	6 37	40	7 2 12 10	1				1	CV554	6 37	48	7 2 12 3	1				1	CV747	6 30	60						1	
		63	7 2 12 4	1				1			48	7 2 12 5	1				1	CV753	2 40	*70	7 1 2 6	1				1	
ARDD3	6 37	48	7 2 12 3	1				1	CV559	25 37	34	7 2 12 3	1				1	*Normally Shows Short Position 5-11.									
		48	7 2 12 5	1				1			34	7 2 12 5	1				1	CV755	1 37	55	7 2 12 5	1				1	
ARH1	6 37	44	7 2 12 10	1				1	CV561	35 29	54						1	CV756	1 37	55	7 2 12 5	1				1	
ARP15	6 37	52	7 2 12 10	1				1	CV562	35 29	54						1	CV760	1 37	55	7 2 12 5	1				1	
ARP16	6 37	50	7 2 12 10	1				1	CV565	35 36	31	8 1 12 2	1				1	CV764	2 37	54	7 2 12 10	1				1	
ARP17	6 29	91						1	CV567	35 37	33	7 2 3 5	1				1	CV768	2 37	48	7 2 12 5	1				1	
ARP32	6 29	79						1	CV568	35 37	33	7 2 3 5	1				1	CV770	2 37	54	7 2 12 10	1				1	
		79						1	CV571	50 29	47						1			64	7 2 12 4	1				1	
ARP33	6 29	79						1	CV572	6 33	15						1			67	7 2 12 5	1				1	
ARTH-1	6 37	35	7 2 12 5	1				1			15						2	CV772	1 37	55	7 2 12 4	1				1	
AU13	5 33	32						1	CV573	6 33	15						1			55	7 2 12 5	1				1	
		32						2			15						2	CV773	1 37	55	7 2 12 4	1				1	
AZ32	4 33	32						1	CV574	6 33	15						1			55	7 2 12 5	1				1	
		32						2			15						2	CV775	1 36	62	8 1 12 4	1				1	
B36	12 25	78						1	CV575	5 33	16						1	CV776	1 36	55	8 1 12 6	1				1	
		78						2			16						2	CV777	1 36	54	8 1 5 6	1				1	
B65	6 25	78						1	CV578	6 37	45	7 2 12 5	1				1	CV778	1 36	68	8 1 12 4	1				1	
		78						2	CV579	6 37	45	7 2 12 5	1				1									1	

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
CV779	2	36	53	8	1	12	6	1	CV892	6	36	47	8	1	12	6	1	CV1790	6	36	50	8	1	12	3	1
			63	8	1	12	4	1				68	8	1	12	3	1				50	8	1	12	6	1
CV780	2	36	52	8	1	12	6	1	CV893	6	36	45	8	1	12	4	1	CV1800	1	37	57	7	2	12	5	1
			60	8	1	12	4	1				45	8	1	12	4	1	CV1802	1	37	57	7	2	12	5	1
CV781	1	36	53	8	1	5	6	1				45	8	1	12	5	1	CV1803	1	37	54	7	2	12	5	1
CV782	1	40	57	7	1	5	4	1	CV894	6	36	36	8	1	12	6	1	CV1805	1	37	54	7	2	12	5	1
CV783	1	40	*55	7	1	5	3	1	CV895	6	36	35	8	1	12	6	1	CV1811	1	37	58	7	2	12	5	1
			*Normally Shows Short Position 2-6.						CV896	6	36	45	8	1	12	4	1				86	7	2	12	10	1
CV784	1	40	56	7	1	12	6	1				65	8	1	12	5	1				*99	7	2	12	8	1
			95	7	1	12	3	1				65	8	1	12	6	1				*Tube Good If It Reads 30 or More.					
CV785	1	40	55	7	1	5	6	1	CV897	6	36	35	8	1	12	6	1	CV1818	1	37	55	7	2	12	10	1
CV786	1	37	54	7	2	12	5	1				50	8	1	12	4	1				96	7	2	12	5	1
CV797	6	40	32	4	3	5	1	1	CV898	6	36	42	8	1	12	4	1	CV1819	6	29	93					1
CV805	50	37	35	7	2	12	3	1				42	8	1	12	5	1	CV1820	1	37	55	7	2	12	10	1
			35	7	2	12	5	1	CV899	6	36	35	8	1	12	4	1				96	7	2	12	5	1
CV807	3	40	*36	7	1	5	4	1	CV900	6	36	35	8	1	12	6	1	CV1821	2	37	53	7	2	12	10	1
			*Normally Shows Short Position 2-6.									72	8	1	12	3	1	CV1823	2	37	53	7	2	12	10	1
CV808	3	40	45	7	1	4	3	1				72	8	1	12	4	1	CV1824	1	37	48	7	2	12	5	1
			45	7	1	4	5	1	CV901	6	36	45	8	1	12	3	1	CV1826	1	37	48	7	2	12	5	1
CV815	2	36	43	8	1	7	6	1				45	8	1	12	6	1	CV1829	1	37	54	7	2	12	5	1
CV818	3	40	*42	7	1	5	3	1	CV910	12	37	45	7	2	12	5	1	CV1846	5	33	22					1
			*Normally Shows Short Position 2-6.						CV916	12	37	48	7	2	12	3	1				22				2	
CV819	3	37	45	7	2	8	5	1				48	7	2	12	5	1	CV1849	5	33	32					1
CV820	3	40	*48	7	1	5	3	1	CV917	12	37	50	7	2	12	10	1				32				2	
			*Normally Shows Short Position 2-6.						CV918	12	37	52	7	2	12	10	1	CV1851	5	37	47	8	7	12	3	1
CV841	5	33	16					1	CV919	12	37	41	8	7	12	3	1				47	8	7	12	5	1
			16					2	CV920	12	37	41	8	7	12	3	1	CV1852	5	37	47	8	7	12	3	1
CV842	5	33	32					1	CV921	12	37	46	8	7	12	2	1				47	8	7	12	5	1
			32					2				69	8	7	12	5	1	CV1854	5	33	32					1
CV844	6	37	40	7	2	12	5	1	CV922	12	30	77					1				32				2	
CV845	6	37	40	7	2	12	5	1	CV924	12	25	*85					1	CV1856	5	33	32					1
CV846	6	30	60					1				*85					2	CV1857	5	37	52	8	7	12	3	1
CV848	6	1	80					1	*Tube Good If It Reads 22 or More.							1				52	8	7	12	5	1	
CV849	6	30	60					1	CV925	12	25	78					2	CV1862	6	3	77					1
CV850	6	1	63					1				78						CV1863	5	33	12					1
CV851	6	37	35	7	2	12	5	1	CV930	12	36	45	8	1	12	4	1				12				2	
CV852	6	40	41	4	3	1	6	1				45	8	1	12	5	1	CV1864	5	33	12					1
CV858	6	2	60					1	CV939	25	37	40	7	2	12	5	1				12				2	
			60					2	CV945	30	36	40	8	1	12	2	1	CV1873	6	30	74					1
CV862	6	37	53	7	2	12	5	1				40	8	1	12	7	1									
CV865	6	30	69					1	CV946	30	36	40	8	1	12	2	1	CV1876	6	30	60					1
CV866	6	30	83					1				40	8	1	12	7	1	CV1878	6	37	54	7	2	12	5	1
CV867	6	37	46	8	7	12	2	1	CV995	6	40	36	4	3	2	1	1				62	7	2	12	1	1
			68	8	7	12	4	1	CV1067	6	29	93					1	CV1882	6	30	38					1
			68	8	7	12	5	1	CV1071	5	33	16					1	CV1893	6	37	55	7	2	12	10	1
CV873	6	33	17					1				16					2				65	7	2	12	4	1
			17					2	CV1074	6	37	50	7	2	12	10	1				65	7	2	12	5	1
CV876	6	36	48	8	1	12	3	1	CV1268	5	33	32					1	CV1894	6	37	55	7	2	12	10	1
			48	8	1	12	6	1				32					2				65	7	2	12	4	1
CV877	6	36	45	8	1	12	6	1	CV1280	6	37	44	7	2	12	10	1				65	7	2	12	5	1
CV878	6	36	40	8	1	12	4	1	CV1285	6	37	47	7	2	12	4	1	CV1895	50	37	*70	2	11	3	5	1
CV879	6	36	40	8	1	12	6	1				47	7	2	12	5	1				*Normally Shows Short Position 11.					
CV880	6	36	52	8	1	12	6	1	CV1301	6	37	48	7	2	12	3	1				*Normally Shows Grid Emission.					
CV881	6	36	52	8	1	12	6	1				48	7	2	12	5	1	CV1902	6	37	45	7	2	12	5	1
CV882	6	36	40	8	1	4	3	1	CV1375	6	38	33	5	4	1	2	1	CV1908	6	37	40	7	2	12	10	1
																		CV1909	6	37	40	7	2	12	10	1
			68	8	1	4	5	1	CV1377	5	33	10					1	CV1910	6	37	40	7	2	12	10	1
			68	8	1	4	6	1				10					2	CV1911	6	29	91					1
CV883	6	36	42	8	1	12	4	1	CV1633	12	8	74					1	CV1912	6	29	91					1
CV885	6	36	38	8	1	12	6	1				74					2	CV1926	6	26	52					1
CV886	6	36	38	8	1	12	6	1	CV1649	6	29	99					1	CV1928	12	1	78					1
CV887	6	36	50	8	1	4	3	1	CV1741	6	29	53					1	CV1929	6	37	48	7	2	12	3	1
			68	8	1	4	5	1	CV1753	35	36	34	8	1	12	6	1				48	7	2	12	5	1
			68	8	1	4	6	1	CV1757	6	1	93					1				48	7	2	12	3	1
CV890	6	36	*33	8	2	1	5	1	CV1758	1	40	55	7	1	5	6										

△Use TC-70 Adapter.

*Normal Shorts refer to position of "D" Switch.

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
CV1935	6	37	50	7	2	12	10	1	CV2390	3	40	*36	7	1	5	4	1	DF91	1	40	55	7	1	5	6	1	
CV1936	6	37	50	7	2	12	10	1	*Normally Shows Short Position 2-6.									DF92	1	40	55	7	1	5	6	1	
CV1937	6	37	50	7	2	12	10	1	CV2500	35	37	33	7	2	12	5	1	DF96	1	40	58	7	1	5	6	1	
CV1938	6	29	92						CV2507	1	40	52	7	1	5	6	1	DF97	1	40	40	7	1	5	6	1	
CV1940	6	29	92						CV2522	6	1	77						DF904	1	40	52	7	1	5	6	1	
CV1941	6	37	52	7	2	12	10	1	CV2524	6	1	82						DH63	6	37	40	7	2	12	10	1	
CV1942	6	37	52	7	2	12	10	1	CV2526	6	6	91									63	7	2	12	4	1	
CV1943	6	37	52	7	2	12	10	1				78									63	7	2	12	5	1	
CV1944	6	37	35	7	2	12	5	1	CV2534	50	29	47						DH74	12	37	40	7	2	12	10	1	
CV1945	6	37	35	7	2	12	5	1	CV2704	6	36	*33	8	2	1	5	1				63	7	2	12	4	1	
CV1946	6	37	35	7	2	12	5	1	*Normally Shows Short Position 3-4-6-7.									DH76	12	37	63	7	2	12	5	1	
CV1947	6	29	63						CV2706	6	36	53	8	1	12	4	1				40	7	2	12	10	1	
CV1948	6	29	63						CV2714	6	29	67									63	7	2	12	4	1	
CV1949	6	40	43	4	3	12	1	1	CV2716	6	37	48	8	7	12	3	1				63	7	2	12	5	1	
CV1950	6	37	44	7	2	12	10	1				48	8	7	12	4	1	DH77	6	6	85					1	
CV1951	6	37	44	7	2	12	10	1	CV2721	6	38	*32	5	4	7	2	1				78					2	
CV1956	6	37	47	7	2	12	4	1	*Normally Shows Short Position 1-6-9.									DH107	19	6	85					1	
			47	7	2	12	5	1	CV2748	5	33	12									78					2	
CV1957	6	37	47	7	2	12	4	1				12									50	8	1	4	3	1	
			47	7	2	12	5	1	CV2769	6	40	*55	4	3	1	5	1				68	8	1	4	5	1	
CV1958	6	37	47	7	2	12	4	1	*Normally Shows Short Position 2-7.									DH710	6	17	90					1	
			47	7	2	12	5	1	CV2901	6	38	40	4	5	2	9	1				63					2	
CV1959	50	4	44						CV2938	6	29	53									63					1	
CV1961	12	1	82						CV2975	6	38	33	5	4	1	2	1				90					1	
CV1962	6	37	52	7	2	12	10	1	CV2983	3	40	45	7	1	5	6	1	DH719	6	17	90					2	
			63	7	2	12	4	1	CV2984	6	37	35	8	7	12	1	1	DK91	1	40	57	7	1	5	4	1	
CV1963	6	37	52	7	2	12	10	1				35	8	7	12	4	1	DK92	1	40	48	7	1	12	4	1	
			63	7	2	12	4	1	CV3512	6	40	34	4	3	5	6	1	DK96	1	40	54	7	1	12	4	1	
			63	7	2	12	5	1	CV3523	6	37	*38	7	2	1	5	1	DL33	3	37	45	7	2	8	5	1	
CV1964	6	37	52	7	2	12	10	1	*Normally Shows Short Position 4-6.									DL35	1	37	54	7	2	12	5	1	
			63	7	2	12	4	1	*Normally Shows Grid Emission.									DL36	1	37	48	7	2	12	5	1	
			63	7	2	12	5	1	CV3798	50	37	*70	2	11	3	5	1	DL91	1	40	*55	7	1	5	3	1	
CV1966	6	37	37	7	2	12	5	1	*Normally Shows Short Position 11.									*Normally Shows Short Position 2-6.									
CV1967	6	37	37	7	2	12	5	1	*Normally Shows Grid Emission.									DL92	3	40	*48	7	1	5	3	1	
CV1969	6	37	48	8	7	12	3	1	CV3799	50	37	*69	2	11	3	5	1	*Normally Shows Short Position 2-6.									
			48	8	7	12	4	1	*Normally Shows Short Position 11.									DL93	3	40	*36	7	1	5	4	1	
CV1970	6	37	48	8	7	12	3	1	*Normally Shows Grid Emission.									*Normally Shows Short Position 2-6.									
			48	8	7	12	4	1	CV4007	6	5	62						DL94	3	40	45	7	1	5	6	1	
CV1972	6	37	41	8	7	12	3	1				62						DL95	3	40	*42	7	1	5	3	1	
CV1973	6	37	41	8	7	12	3	1	CV4010	6	1	63						*Normally Shows Short Position 2-6.									
CV1974	6	37	47	7	2	12	10	1	CV4018	6	40	32	4	3	5	1	1	DL96	3	40	45	7	1	5	6	1	
CV1975	6	37	47	7	2	12	10	1	CV4024	12	8	74						DP61	6	1	63					1	
CV1976	6	37	37	7	2	12	5	1				74						DY30	1	32	55					1	
CV1978	6	30	77						D2M9	6	5	62						DY80	1	24	85					1	
												62						DY86	1	24	35					1	
CV1981	6	30	84						D63	6	37	48	7	2	12	3	1	DY87	1	24	35					1	
CV1982	6	30	84									48	7	2	12	5	1	DY802	1	24	56					1	
CV1985	6	25	*85						D77	6	5	62						E55L	6	42	*25	4	5	7	8	1	
*Tube Good If it Reads 22 or More.												62						*Normally shows short position 2-6.									
			*85						D152	6	5	62						E80CC	12	8	74					1	
CV1988	6	25	78									62									74					2	
			78						D193	3	40	*36	7	1	5	4	1	E80CF	6	11	72					1	
CV1990	6	37	42	8	7	12	2	1	*Normally Shows Short Position 2-6.												55						2
			71	8	7	12	4	1	DA90	2	40	*70	7	1	2	6	1	E80F	6	38	34	4	5	7	9	1	
			71	8	7	12	5	1	*Normally Shows Short Position 5-11.									E80L	6	38	25	4	5	1	2	1	
CV1991	6	37	42	8	7	12	2	1	DAC32	1	37	55	7	2	12	10	1	E80T	6	38	72	4	5	12	2	1	
			71	8	7	12	4	1				96	7	2	12	5	1	E81CC	12	8	74					1	
			71	8	7	12	5	1	DAF91	1	40	56	7	1	12	6	1				74					2	
CV1993	6	30	92									95	7	1	12	3	1	E81L	6	38	24	4	5	1	2	1	
CV1995	6	37	52	8	7	12	2	1	DAF92	2	40	55	7	1	12	6	1	E81OF	6	38	*29	4	5	3	2	1	
			72	8	7	12	4	1				70	7	1	12	4	1	*Normally shows short position 6-9.									
			72	8	7	12	5	1	DAF96	1	40	58	7	1	12	6	1	E83F	6	38	25	4	5	12	2	1	
CV1996	6	37	52	8	7	12	2	1				70	7	1	12	3	1	E88CC	6	8	24					1	
			72	8	7	12	4	1	DC90	1	40	*70	7	1	5	6	1				24					2	
			72	8	7	12	5	1	*Normally Shows Short Position 2-3.									E90CC	6	2	49					1	
CV2128	6	38	85	5	4	12	1	1	DCC90	3	40	45	7	1	4	3	1				49					2	
			38	5	4	12	9	1				45	7	1	4	5	1	E90F	6	1	82					1	
CV2129	6	38	33	5	4	8	9	1	DD6	6	5	62						E91AA	6	5	62					1	
CV2370	3	40	*48	7	1	5	3	1				62									62					2	
*Normally Shows Short Position 2-6.												62						E91H	6	1	89					1	
									DF33	2	37	53	7	2	12	10	1										

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
E91N	6	40	32	4	3	5	1	1	ECC801S	12	8	74					1	EFL200	6	43	27	5	6	12	1	1
E92CC	6	2	61					1	ECC802S	12	8	75					2	EH90	6	1	94					1
E99F	6	1	84					1				75					2	EH-900S	6	1	91					1
E180F	6	38	25	4	5	1	2	1	ECC808	6	38	36	4	5	12	1	1	EK90	6	1	91					1
E182CC	6	38	30	4	5	8	2	1				36	4	5	12	9	1	EL34	6	29	53					1
E188CC	6	8	23					1	ECC808	6	38	41	4	5	6	1	1	EL36	6	27	58					1
E235L	6	37	30	2	7	4	5	1	ECC960	6	2	49	4	5	6	9	1	EL37	6	29	63					1
E280F	6	23	80					1				41	4	5	6	9	1	EL38	6	29	*62					1
EA91	6	5	62					1	ECF80	6	11	66					1	*For Plate Cap Use Jack Next to Socket 26.								
EABC80	6	17	90					1	ECF82	6	11	79					1	EL81	6	38	*32	5	4	7	2	1
			63					2	ECF86	6	38	25	4	5	3	2	1	*Normally Shows Short Position 1-6-9.								
EAF801	6	38	34	4	5	7	2	1				25	4	5	1	6	1	EL82	6	23	68					1
EB34	6	37	48	7	2	1	3	1	ECF200	6	43	30	5	6	12	3	1	EL83	6	38	30	5	4	12	2	1
EB91	6	5	62					1	ECF201	6	43	28	5	6	12	3	1	EL84	6	23	68					1
			62					1				32	5	6	12	10	1	EL85	6	38	*39	5	4	1	2	1
EBC90	6	6	85					2	ECF801	6	38	24	4	5	3	2	1	*Normally Shows Short Position 6-8.								
EBC91	6	6	78					1	ECF802	6	11	80					1	EL86	6	23	58					1
			91					2				85					2	EL90	6	3	77					1
EBF80	6	38	37	5	4	12	2	1	ECF805	6	38	30	4	5	8	7	1	EL91	6	40	34	4	3	12	1	1
			64	5	4	12	7	1				33	4	5	8	9	1	EL95	6	3	88					1
EBF83	6	38	64	5	4	12	8	1	ECH81	6	38	85	5	4	12	1	1	EL500♦	6	42	*25	4	5	2	1	1
			31	5	4	12	2	1	ECH83	6	38	38	5	4	12	9	1	*Normally shows short position 3-6-7-8.								
			62	5	4	12	7	1				30	5	4	12	2	1	EL503♦	6	42	*31	4	5	3	7	1
EBF89	6	38	62	5	4	12	8	1	ECH84	6	38	23	4	5	12	2	1	*Normally shows short position 1-2-6-8.								
EC81	6	38	30	4	5	12	1	1	ECH200	6	43	26	4	5	12	9	1	EL505♦	6	42	*26	4	5	1	8	1
EC86	6	39	29	4	5	3	6	1				26	4	5	12	9	1	*Normally shows short position 2-3-6-7.								
EC88	6	38	*85	4	5	7	8	1	ECL80	6	38	37	5	4	12	9	1	EL508♦	6	42	30	4	5	1	8	1
*Normally Shows Short Position 1-3-6-9.									ECL82	6	38	33	5	4	12	3	1	EL509♦	6	42	*26	4	5	1	8	1
EC9C	6	40	41	4	3	1	6	1				39	5	4	12	1	1	*Normally shows short position 2-3-6-7.								
EC91	6	40	*29	4	3	6	1	1	ECL84	6	38	26	4	5	12	8	1	EL802	6	9	51					1
*Normally Shows Short Position 2-5.												26	4	5	12	1	1	EL803	6	38	30	5	4	12	2	1
EC92	6	40	30	4	3	12	6	1	ECL85	6	38	25	4	5	12	9	1	EL820	6	38	*32	5	4	7	2	1
EC95	6	40	32	4	3	1	2	1				25	4	5	12	2	1	*Normally Shows Short Position 1-6-9.								
EC97	6	40	33	4	3	1	2	1	ECL86	6	38	25	4	5	2	8	1	EL821	6	38	28	5	4	12	2	1
EC806S	6	39	29	4	5	3	6	1				35	4	5	7	1	1	ELL80	6	38	29	4	5	12	2	1
EC900	6	40	27	3	4	2	1	1	ECLL800	6	38	*99	4	5	12	1	1				29	4	5	12	6	1
ECC35	6	25	*85					1				36	4	5	12	2	1	EM-87	6	38	52	4	5	2	1	1
*Tube Good If It Reads 22 Or More.												36	4	5	12	6	1	EN93	6	40	43	4	3	12	1	1
ECC81	12	8	74					1	ED2	6	5	62					1	EQ80	6	38	33	5	4	3	7	1
			74					2	*Tube good if it reads 25 or more.								2	EY81	6	38	33	5	4	2	9	1
ECC82	12	8	75					1	ED500♦	6	42	*52	4	5	12	8	1	EY82	6	38	29	4	5	6	9	1
ECC83	12	8	*85					1				62					1	EY86	6	39	*95	5	4	1	10	1
			*85					2	EF22	6	36	36	8	1	12	6	1	*Normally Shows Short Position 6-11.								
*Tube Good if it Reads 22 or More.									EF37-A	6	37	37	2	7	1	10	1	EY87	6	39	*95	5	4	1	10	1
ECC84	6	38	33	5	4	7	2	1	EF80	6	38	33	5	4	1	2	1	EY88*	6	39	30	5	4	7	3	1
ECC85	6	8	70					1	EF85	6	38	33	5	4	1	2	1	*If no test, use alternate settings.								
			70					2	EF86	6	38	40	5	4	2	9	1	EY88	6	39	30	5	4	3	7	1
ECC86	6	38	33	5	4	12	2	1	EF89	6	38	34	5	4	1	2	1	EY500■	6	37	32	7	8	2	5	1
ECC88	6	38	31	5	4	12	2	1	EF91	6	40	30	4	3	12	1	1	EZ35	6	33	15					1
ECC89	6	38	29	4	5	7	2	1	EF92	6	40	35	4	3	12	1	1				15					2
			29	4	5	7	6	1	EF93	6	1	78					1	EZ80	6	38	40	5	4	12	1	1
ECC91	6	2	60					1	EF94	6	1	82					1	EZ81	6	38	34	5	4	12	1	1
ECC189	6	8	60					2	EF95	6	1	63					1	EZ90	6	40	44	4	3	12	1	1
			30					1	EF96	6	1	80					1				44	4	3	12	6	1
			30					2	EF98	6	40	30	4	3	12	1	1	G180/ZM	50	37	*99	2	11	3	5	1
								1	EF183	6	38	30	5	4	3	2	1	*Tube Good If It Reads 60 or More.								
								2	EF184	6	38	29	5	4	3	2	1	*Normally Shows Short Position 11.								
								2	EF804	6	38	39	5	4	2	9	1	*Normally Shows Grid Emission.								
								2	EF-806S	6	38	40	4	5	2	9	1	*No short test								
								2										GY501♦	3	42	*94	4	5	4	10	1
								2										GZ-30	5	33	12					1
								2												12						2
								2										GZ-32	5	33	12					1
								2												12						2
								2										GZ34	5	33	10					1
								2												10						2

■Use TC-62B Adapter. ♦Use TC-80 Adapter △Use TC-70 Adapter *Normal Shorts Refer to Position of "D" Switch.

E91N - GZ34

1

[illegible]

H63 - QE03/10

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.		
QE05/40	6	37	*38	7	2	1	5	1	V177	6	40	35	4	3	12	1	1	X73 (M)	6	37	45	7	2	12	5	1		
*Normally Shows Short Position 4-6.									V741	6	40	41	4	3	1	6	1	X107	19	1	91					1		
QS150/40	50	37	*99	2	11	3	5	1	v884	6	40	35	4	3	12	1	1	X155	6	8	55					1		
*Tube Good if it Reads 60 or More.									V886	6	40	34	4	3	12	1	1				55					2		
*Normally Shows Short Position 11.									VP6	6	40	35	4	3	12	1	1	X727	6	1	91					1		
*Normally Shows Grid Emission.									VP1321	12	40	*55	4	3	1	5	1	XB767A	6	37	34	7	2	12	5	1		
QV03/12	6	38	33	5	4	8	9	1	*Normally Shows Short Position 2-7.									XC95	2	40	33	4	3	1	2	1		
QV06/20	6	37	*38	7	2	1	5	1	VR75	50	37	*70	2	11	3	5	1	XC97	2	40	33	4	3	1	2	1		
*Normally Shows Short Position 4-6.									*Normally Shows Short Position 11.									XC900	2	40	27	3	4	2	1	1		
R52	5	33	12					1	*Normally Shows Grid Emission.									XCC189	4	8	30					1		
SN7	1	32	55					2	VR90	50	37	*69	2	11	3	5	1				30					2		
SP6	6	40	30	4	3	12	1	1	*Normally Shows Short Position 11.									*Normally shows short position 4-6										
TJ880	12	9	35					1	*Normally Shows Grid Emission.									XCF80	4	11	66					1		
T2M05	6	40	34	4	3	12	5	1	VR105	50	37	*85	2	11	3	5	1	XCF86	5	38	24	4	5	3	2	1		
TM12	6	40	*85	4	3	12	6	1	*Normally Shows Short on Position 11.												25	4	5	1	6	1		
*Normally Shows Short Position 5-6.									VR150/30	50	37	*99	2	11	3	5	1	XCF801	4	38	24	4	5	3	2	1		
TS51	6	1	63					1	*Tube Good if it Reads 60 or More.												26	4	5	3	9	1		
TS52	6	2	60					1	*Normally Shows Short on Position 11.									XCH81	3	38	85	5	4	12	1	1		
									*Normally Shows Grid Emission.												38	5	4	12	9	1		
TS-876C	6	9	28					2	VT52	6	29	92					1	XCL82	8	38	33	5	4	12	3	1		
U5Q	5	33	32					1	VT65	7	29	99					1				39	5	4	12	1	1		
			32					2	VT66	6	29	91					1	XCL84	8	38	26	4	5	12	8	1		
U52	5	33	16					1	VT74	5	33	12					2	XCL85	18	38	26	4	5	12	1	1		
												12									25	4	5	12	2	1		
U54	5	33	10					2	VT86	6	37	52	7	2	12	10	1	XF80	3	38	33	5	4	1	2	1		
			10					2	VT87	6	37	44	7	2	12	10	1	XF85	3	38	33	5	4	1	2	1		
U78	6	40	44	4	3	12	1	1	VT88	6	37	52	7	2	12	10	1	XF183	3	38	30	5	4	3	2	1		
			44	4	3	12	6	1				63	7	2	12	4	1	XF184	3	38	29	5	4	3	2	1		
U147	6	33	15					1				63	7	2	12	5	1											
U149	6	36	45	8	1	12	3	1	VT90	6	37	48	7	2	12	3	1	XL36	12	27	57					1		
			45	8	1	12	6	1	VT91	6	37	50	7	2	12	5	1	XL84	8	23	68					1		
U153	17	38	33	4	5	2	9	1	VT93	6	37	55	7	2	12	10	1	XL86	8	23	58					1		
U154	19	38	29	4	5	6	9	1				65	7	2	12	4	1	XL500♦	12	42	*25	4	5	2	1	1		
U192	19	38	29	4	5	6	9	1	VT94	6	29	93					1	*Normally shows short position 3-6-7-8.										
U709	6	38	34	5	4	12	1	1	VT96	6	37	47	7	2	12	4	1	XXD	12	36	41	8	1	12	4	1		
			34	5	4	12	7	1				47	7	2	12	5	1				41	8	1	12	5	1		
UAA91	19	5	62					1	VT97	5	33	32					2	XXFM	6	36	43	8	1	12	3	1		
												32									36	8	1	12	5	1		
UABC80	25	17	62					2	VT99	6	37	45	7	2	12	5	1				35	8	1	12	6	1		
			90					1				45	7	2	12	10	1	XXL	6	36	41	8	1	12	6	1		
UBF80	17	38	33	5	4	12	2	1	VT102	6	29	92					1	XY88*	16	39	30	5	4	7	3	1		
			65	5	4	12	7	1	VT103	6	37	42	8	7	12	2	1	*If no test, use alternate settings.										
												71	8	7	12	4	1	XY88	16	39	30	5	4	3	7	1		
UC92	9	40	30	4	3	12	6	1				71	8	7	12	5	1	YF183	4	38	30	5	4	3	2	1		
UCC84	22	38	33	5	4	7	2	1	VT104	12	37	42	8	7	12	2	1				4	38	29	5	4	3	2	1
			33	5	4	7	6	1				71	8	7	12	4	1	YL1371	12	37	*38	7	2	1	5	1		
UCC85	25	8	70					1				71	8	7	12	5	1	Z14	2	37	53	7	2	12	10	1		
									VT105	6	37	48	8	7	12	3	1	Z63	6	37	50	7	2	12	10	1		
UCF80	25	11	70					2				48	8	7	12	4	1	Z719	6	38	33	5	4	1	2	1		
			55					2	VT107	6	29	79					1	Z729	6	38	40	5	4	2	9	1		
UCH81	19	38	32	5	4	12	2	1	VT112	6	30	60					1	ZD17	1	40	*55	7	1	5	3	1		
			35	5	4	12	9	1	VT114	5	33	16					2	*Normally Shows Short Position 2-6.										
UCL82	50	38	33	5	4	12	3	1				16						ZD25	1	40	58	7	1	12	6	1		
UF80	19	9	76					1	VT115	6	29	63					1				70	7	1	12	3	1		
UF85	19	9	62					1	VT116	6	30	83					1	ZD151	6	38	37	5	4	12	2	1		
UF86	12	38	40	5	4	2	9	1	VT117	6	30	84					1				64	5	4	12	7	1		
UF89	12	38	34	4	5	1	2	1	VT124	1	37	55	7	2	12	5	1	ZD152	6	38	37	5	4	12	2	1		
UL84	50	23	58					1	VT125	1	37	54	7	2	12	5	1				64	5	4	12	7	1		
UU12	6	38	34	5	4	12	1	1	VT126	6	33	15					1											
UY82	50	38	29	4	5	6	9	1				15					2											
UY85	35	39	30	4	5	1	6	1	W17	1	40	55	7	1	5	6	1											
V2M70	6	40	44	4	3	12	1	1	W77	6	40	35	4	3	12	1	1											
			44	4	3	12	6	1	W149	6	36	45	8	1	12	6	1											
									W719	6	38	33	5	4	1	2	1											
									W727	6	1	78					1											
									X63 (M)	6	37	45	7	2	12	5	1											
									X64	6	37	44	7	2	1	10	1											

♦Use TC-80 Adapter.