

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.		
0A3	50	38	*70	2	11	3	5	1	107G	2	38	54	7	2	12	5	1	1P11	3	41	45	7	1	5	6	1		
	*Normally shows short on position 11.								108	2	38	53	7	2	12	5	1	1Q5	2	38	40	7	2	12	5	1		
	*Normally shows grid emission.											55	7	2	12	10	1	1R-K23	1	24	35					1		
0A3A	50	38	*70	2	11	3	5	1				75	7	2	12	8	1	1R-K41	1	24	*53					1		
	*Normally shows short on position 11.								1013	2	41	*70	7	1	2	6	1	*Tube good if it reads 40 or more.										
	*Normally shows grid emission.											*Normally shows short position 5-11								1R4	2	37	60	8	1	12	4	1
0B3	50	38	*69	2	11	3	5	1	10G3	1	38	*95	3	8	5	10	1	1R5	2	41	53	7	1	5	4	1		
	*Normally shows short on position 11.											*Tube good if it reads 20 or more.								1S2-A	1	24	35					1
	*Normally shows grid emission.											*No short test.								1S4	2	41	*44	7	1	5	3	1
0C3	50	38	*85	2	11	3	5	1	10-K1	1	40	*75	4	5	1	10	1	*Normally shows short position 2-6.										
	*Normally shows short on position 11.											*Insert leads into pins 4 & 5 of socket 40.								1S5	2	41	54	7	1	5	6	1
	*Normally shows grid emission.											*Top cap goes to top lead.											70	7	1	5	3	1
0C3A	50	38	*85	2	11	3	5	1				*Tube good if it reads 20 or more.								1T4	2	41	50	7	1	5	6	1
	*Normally shows short on position 11.								10K29	1	40	*75	4	5	1	10	1	1T5	2	38	54	7	2	12	5	1		
	*Normally shows grid emission.											*Insert leads into pins 4 & 5 of socket 40.								1U4	2	41	49	7	1	5	6	1
0D3	50	38	*99	2	11	3	5	1				Top cap goes to top lead.								1U5	2	41	54	7	1	12	6	1
	*Normally shows short on position 11.											*Tube good if it reads 20 or more.											75	7	1	12	4	1
	*Normally shows grid emission.								10N5	2	41	54	7	1	12	6	1	1U6	2	41	56	7	1	12	4	1		
	*Tube good if it reads 60 or more.											75	7	1	12	4	1	1V2	1	40	99	5	4	12	1	1		
0D3A	50	38	*99	2	11	3	5	1	10Y4	1	41	*24	4	3	2	6	1	1X2	1	24	56					1		
	*Normally shows short on position 11.											*Normally shows short position 1-7.								2AF4	2	41	*24	4	3	2	6	1
	*Normally shows grid emission.								1E5	2	38	54	7	2	12	10	1		*Normally shows short position 1-7.									
	*Tube good if it reads 60 or more.								1F1	1	41	58	7	1	5	6	1	2AH2	2	45	99	1	12	12	10	1		
0Z4	6	31	8					1	1F2	1	41	55	7	1	5	6	1	2AS2	2	45	99	1	12	12	10	1		
									1F3	1	41	55	7	1	5	6	1	2AV2	2	40	*99	4	5	12	1	1		
1A3	2	41	*70	7	1	2	6	1	1F5	2	38	48	7	2	12	5	1	*Tube good if it reads 55 or more.										
	*Normally shows short on position 5-11.								1F7	2	38	54	7	2	12	10	1	2A22	2	24	35					1		
1A5	2	38	53	7	2	12	5	7				64	7	2	12	4	1	2B3	2	32	30					1		
1A7	2	38	54	7	2	12	5	1				67	7	2	12	5	1	2BA2	2	40	88	4	5	12	1	1		
1AB6	1	41	54	7	1	12	4	1	1FD1	1	41	58	7	1	12	6	1	2BJ2	2	24	52					1		
1AC6	1	41	48	7	1	12	4	1				70	7	1	12	3	1	2BN4	2	41	*33	4	3	2	7	1		
1AD2	1	45	*99	1	12	12	10	1	1FD9	1	41	56	7	1	12	6	1	*Normally shows short position 1-6.										
	*Tube good if it reads 20 or more.											95	7	1	12	3	1	2BU2	2	45	*80	1	12	12	10	1		
1AF4	1	41	50	7	1	5	6	1	1G3	1	32	55					1	*Tube good if it reads 30 or more.										
1AH5	1	41	58	7	1	12	6	1	1G4G	2	38	35	7	2	12	5	1	2C51	6	39	29	9	1	12	3	1		
									1G5G	2	38	48	7	2	12	5	1				29	9	1	12	7	1		
1AJ4	1	41	58	7	1	5	6	1	1G6	1	38	55	7	2	12	4	1	2CN3A	2	32	30					1		
1AN5	1	41	40	7	1	5	6	1				55	7	2	12	5	1	2CW4	2	43	*87	10	12	12	2	1		
1AS5	2	41	54	7	1	12	6	1	1H2	1	24	58					1	*For grid emission, Turn D Switch to position 4.										
									1H4G	2	38	54	7	2	12	5	1	2CY5	2	1	54					1		
1AU2	1	40	*100	5	4	12	1	1	1H5	1	38	55	7	2	12	10	1	2D21	6	41	32	4	3	5	1	1		
	*Tube good if it reads 20 or more.								1H6	2	38	54	7	2	12	6	1	2DL4	2	39	*85	4	5	7	8	1		
1AU3	1	32	95					1				65	7	2	12	4	1	*Normally shows short position 1-3-6-9.										
1AX2	1	24	93					1				65	7	2	12	5	1	2DS4	2	43	*87	10	12	12	2	1		
1AY2	1	*39	95	1	9	12	10	1	1H35	1	41	54	7	1	12	4	1	*For grid emission, Turn D Switch to position 4.										
	*Connect two leads from 1AY2 bottom pins to pin holes No. 1 and 9 of Socket No. 39.								1J3	1	32	88					1	2DX4	2	41	*62	3	4	1	7	1		
1B3	1	32	55					1	1J5G	2	38	35	7	2	12	5	1	*Normally shows short position 2-6.										
1B7	1	38	55	7	2	12	5	1	1J6	2	38	53	7	2	12	4	1	2DY4	2	41	*24	4	3	2	6	1		
1BC2	1	24	57					1				53	7	2	12	5	1	*Normally shows short position 1-7.										
1BG2	1	40	*75	4	5	1	10	1	1K3	1	32	90					1	2DZ4	2	41	*31	3	4	6	2	1		
	*Insert leads into pins 4 & 5 of socket 40.								1K5G	2	38	54	7	2	12	10	1		*Normally shows short position 1-7.									
	Top cap goes to top lead.								1L4	2	41	52	7	1	5	6	1	2E26	6	38	*40	7	2	1	5	1		
	*Tube good if it reads 20 or more.								1L6	2	41	56	7	1	12	4	1	*Normally shows short position 4-6.										
1BH2	1	*39	95	1	9	12	10	1	1LA4	2	37	53	8	1	12	6	1	2EA5	2	1	80					1		
	*Connect two leads from solder lugs of the 1BH2 to pin holes No. 1 and 9 of Socket No. 39.								1LA6	2	37	58	8	1	12	4	1	2EG4	2	43	*72	10	12	12	2	1		
1BK2	1	24	*53					1	1LB4	2	37	53	8	1	12	6	1	*For grid emission, Turn D Switch to position 4.										
	*Tube good if it reads 40 or more.								1LC5	1	37	54	8	1	5	6	1	2EN5	2	41	35	3	4	12	2	1		
1BQ2	1	24	56					1	1LC6	2	37	59	8	1	12	4	1				35	3	4	12	7	1		
1BX2	1	24	56					1	1LD5	2	37	53	8	1	12	6	1	2ER5	2	41	33	4	3	1	2	1		
1BY2	1	45	*99	1	12	7	10	1				63	8	1	12	4	1	2ES5	2	41	33	4	3	1	2	1		
	*Tube good if it reads 20 or more.								1LE3	1	37	55	8	1	12	6	1	2EV5	2	1	57					1		
1C1	1	41	57	7	1	5	4	1	1LG5	2	37	50	8	1	5	6	1	2FH5	2	41	33	4	3	1	2	1		
1C2	1	41	48	7	1	12	4	1	1LH4	2	37	52	8	1	12	6	1	2FS5	2	1	99					1		
1C3	1	41	54	7	1	12	4	1				60	8	1	12	4	1	2FQ5	2	41	33	4	3	1	2	1		
1C5	2	38	48	7	2	12	5	1	1LN5	2	37	50	8	1	5	6	1	2FQ5A	2	41	31	4	3	1	2	1		
1C7	2	38	54	7	2	12	5	1	1N2-A	1	32	53					1	2FV6	2	1	54					1		
1D5GT	2	38	54	7	2	12	10	1	1N5	2	38	53	7	2	12	10	1	2FY5	2	41	33	4	3	1	2	1		
	*Normal Shorts Refer to Position of "D" Switch.								1P5	2	38	53	7	2	12	10	1	2GK5	2	41	25	4	3	1	2	1		
									1P10	3	41	*48	7	1	5	3	1	2GU5	2	41	27	3	4	2	1	1		
									*Normally shows short position 2-6.								2GW5	2	41	29	3	4	6	2	1			

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
2HA5	2	5	56					1	3CV3	3	32	*40					1	3JC6A	3	9	59					1
2HK5	2	5	56					1	*Tube good if it reads 40 or more.									3JD6	3	9	61					1
2HM5	2	5	57					1	3CX3	3	38	*88	3	8	4	10	1	3KF8	3	21	92					1
2HQ5	2	5	55					1	*Ignore all shorts.											92					2	
2HR8	2	39	33	4	5	2	9	1	3CY3	3	32	60					1	3KT6	3	9	52					1
2T4	2	41	*33	4	3	2	6	1	3CY5	3	1	54					1	3L35	3	41	*36	7	1	5	4	1
*Normally shows short position 1-7.									3CZ3	3	32	35					1	*Normally shows short position 2-6.								
2V2	2	32	22					1	3U6	2	3/	43	8	1	7	6	1	3LE4	3	37	43	8	1	7	6	1
3A2	3	24	35					1	3UA3	3	38	*88	3	8	5	10	1	3LF4	3	37	43	8	1	7	6	1
3A3	3	32	54					1	*Ignore all shorts except position 10.									3M-P26	3	7	81					1
3A3A	3	32	54					1	3DB3	3	32	60					1	3M-R24	3	1	51					1
3A4	3	41	*36	7	1	5	4	1	3DC3	3	32	*13					1	3M-V7	3	1	61					1
*Normally shows short position 2-6.									*Tube good if it reads 30 or more.									3Q4	3	41	*42	7	1	5	3	1
3A5	3	41	45	7	1	4	3	1	3DF3	3	38	*75	3	8	5	10	1	*Normally shows short position 2-6.								
			45	7	1	4	5	1	*Tube good if it reads 20 or more.									3Q5	3	38	45	7	2	8	5	1
3A8	3	38	54	7	2	1	10	1	*No short test.									3S4	3	41	*48	7	1	5	3	1
			55	7	2	1	5	1	3DG4	3	38	26	1	3	12	5	1	*Normally shows short position 2-6.								
			92	7	2	1	8	1				26	1	3	12	7	1	3V4	3	41	45	7	1	5	6	1
3AB4	3	2	83					1	3DH3	3	38	*90	3	8	5	10	1	4AB8	4	39	37	5	4	12	9	1
3AF4	3	41	*24	4	3	2	6	1	*Tube good if it reads 40 or more.											44	5	4	12	2	1	
*Normally shows short position 1-7.									*No short test.									4AU6	4	1	82					1
3AJ8	3	39	85	5	4	12	1	1	3DJ3	3	32	*30					1	4AU8	4	12	59					1
			38	5	4	12	9	1	*Tube good if it reads 30 or more.											71					2	
3AL5	3	41	33	3	4	12	2	1	3DK6	3	1	61					1	4AV6	4	6	91					1
			33	3	4	12	7	1	3DR3	3	38	*90	3	8	5	10	1			78					2	
3AT2	3	45	96	1	12	12	10	1	*Tube good if it reads 40 or more.									4BA6	4	1	78					1
3AU6	3	1	82					1	*Ignore all shorts except position 10.									4BC5	4	1	74					1
3AV6	3	6	88					1	3DS3	3	38	*90	3	8	5	10	1	4BC8	4	8	53					1
			78					2	*Tube good if it reads 40 or more.											53					2	
3AW2	3	45	91	1	12	12	10	1	*Ignore all shorts except position 10.									4BE6	4	1	91					1
3AW3	3	32	55					1	3DT6	3	1	91					1	4BL8	4	11	66					1
3B2	3	32	72					1	3DX4	3	41	*62	3	4	1	7	1			55					2	
3B7	3	37	45	8	1	4	3	1	*Normally shows short position 2-6.									4BN4	4	41	*33	4	3	2	7	1
			45	8	1	4	6	1	3DY4	3	41	*24	4	3	2	6	1	*Normally shows short position 1-6.								
3BA6	3	1	78					1	*Normally shows short position 1-7.									4BN6	4	7	75					1
3BC5	3	1	74					1	3DZ4	3	41	*31	3	4	6	2	1	4BQ7	4	8	54					1
3BE6	3	1	91					1	*Normally shows short position 1-7.											54					2	
3BH2♦	3	44	*94	4	5	4	10	1	3E5	3	41	48	7	1	5	6	1	4BS8	4	8	54					1
*No short test.									3EA5	3	1	80					1			54					2	
3BL2	3	45	85	1	12	12	10	1	3EH7	3	9	40					1	4BU8	4	21	92					1
3BM2	3	45	85	1	12	12	10	1	3EJ7	3	9	58					1			92					2	
3BN2	3	45	*99	1	12	12	10	1	3ER5	3	41	33	4	3	1	2	1	4BX6	4	9	76					1
*Tube good if it reads 50 or more.									3ES5	3	41	33	4	3	1	2	1	4BX8	4	39	33	5	4	12	2	1
3BN4	3	41	*33	4	3	2	7	1	3EV5	3	1	57					1			33	5	4	12	7	1	
*Normally shows short position 1-6.									3FH5	3	41	33	4	3	1	2	1	4BZ6	4	1	61					1
3BN6	3	7	75					1	3FQ5	3	41	33	4	3	1	2	1	4BZ7	4	8	53					1
3BS2	3	45	87	1	12	12	10	1	3FQ5A	3	41	31	4	3	1	2	1			53					2	
3BS2A	3	45	87	1	12	12	10	1	3FS5	3	1	99					1	4BZ8	4	8	55					1
3BT2	3	45	*80	1	12	12	10	1	3FY5	3	41	33	4	3	1	2	1			55					2	
*Tube good if it reads 30 or more.									3GK5	3	41	25	4	3	1	2	1	4CB6	4	1	64					1
3BU8	3	21	92					1	3GX6	3	9	40					1	4CE5	4	1	62					1
			92					2	3GS8	3	21	95					1	4CFG	4	1	61					1
3BW2	3	45	*80	1	12	12	10	1				95				2	4CM4	4	40	29	4	5	3	6	1	
*Tube good if it reads 30 or more.									3GU5	3	41	27	3	4	2	1	1	4CS6	4	1	94					1
3BX6	3	9	76					1	3GW5	3	41	29	3	4	6	2	1	4CY5	4	1	54					1
3BY6	3	1	91					1	3GY5	3	36	*25	1	12	5	9	1	4DE6	4	1	61					1
3BY7	3	9	62					1	*Normally shows short position 1-3-4-7-10.									4DK6	4	1	61					1
3BZ6	3	1	61					1	3HA5	3	5	56					1	4DL4	4	39	*85	4	5	7	8	1
3C2	3	32	22					1	3HE7	3	36	27	1	12	10	2	1	*Normally shows short position 1-3-6-9.								
3C4	2	41	48	7	1	5	6	1				27	1	12	10	9	1	4DL5	4	3	88					1
3C5GT	3	38	45	7	2	8	5	1	3HF5	3	36	*25	1	12	9	5	1	4DT6	4	1	91					1
3CA3	3	32	55					1	*Normally shows short position 3-4-6-8-10-11.									4EH7	4	9	40					1
3CB6	3	1	64					1	3HK5	3	5	56					1	4EJ7	4	9	58					1
3CE5	3	1	62					1	3HM5	3	5	57					1	4ER5	4	41	33	4	3	1	2	1
3CF6	3	1	60					1	3HM6	3	9	68					1	4ES8	4	8	30					1
3CN3	3	32	30					1	3HQ5	3	5	55					1			30					2	
3CN3A	3	32	30		</																					

*Normal Shorts refer to position of "D" Switch. ♦Use TC-80 Adapter.

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
4GJ7	4	22	62					1	5AS4	5	33	17					1	5EH8	5	12	71					1
4GK5	4	41	25	4	3	1	2	1	5AS8	5	39	31	5	4	12	2	1	5ES8	5	8	30					2
4GM5	4	1	64					1				32	5	4	12	6	1	5EU8	5	39	32	5	4	12	7	1
4GS7	4	14	80					1	5AT4	5	33	12					1	5EW6	5	1	32	5	4	12	2	1
			53					2	5AT8	5	14	77					1	5FG7	5	14	77					1
4GS8	4	21	95					1	5AU4	5	33	16					1	5FV8	5	14	65					1
			95					2	5AV8	5	39	40	4	5	6	2	1	5GH8	5	11	54					2
4GW5	4	41	29	3	4	6	2	1	5AW4	5	33	17					1	5GH8A	5	11	68					1
4GX6	4	1	85					1	5AX4	5	33	16					1				56					2
4GX7	4	22	76					1				16					2	5GJ7	5	22	62					1
			73					2	5AZ4	5	37	53	8	2	12	4	1	5GM6	5	1	78					2
4GZ5	4	41	26	3	4	2	5	1	5B8	5	39	30	4	5	6	2	1	5GS7	5	14	80					1
4HA5	4	5	50					1				28	4	5	1	6	1				53					2
4HA7	4	36	35	1	12	5	9	1	5BC3	5	44	*33	1	3	6	5	1	5GX6	5	1	85					1
			35	1	12	5	11	1				**33	1	3	8	9	1	5GX7	5	22	76					1
4HC7	4	36	*35	1	12	5	9	1									1				73					2
			*35	1	12	5	11	1									2	5HA7	5	36	35	1	12	5	9	1
*Normally shows short position 7-10.																	1				35	1	12	5	11	1
4HG8	4	39	25	4	5	3	2	1				55					2	5HB7	5	22	75					1
			25	4	5	1	6	1									1				75					2
4HK5	4	5	56					1									1	5HC7	5	36	*35	1	12	5	9	1
4HM5	4	5	57					1	5BE8	5	14	72					1				*35	1	12	5	11	1
4HM6	4	9	68					1				55					2	*Normally shows short position 7-10.								
4HQ5	4	5	55					1	5BK7	5	8	55					1	5HG8	5	39	24	4	5	3	2	1
4HR8	4	39	33	4	5	2	9	1									1				25	4	5	1	6	1
4HS8	4	21	99					1	5BQ5	5	23	68					1	5HZ6	5	1	83					1
			99					2	5BQ7	5	8	54					1	5J6	5	2	60					1
4HT6	4	9	60					1				54	5	4	12	8	1				60					2
4JC6	4	9	65					1	5BR8	5	14	72					1	5JK6	5	1	61					1
4JCGA	4	9	59					1				55					2	5JL6	5	1	23					1
4JD6	4	9	61					1	5BS8	5	8	54					1	5JW8	5	11	80					1
4JH6	4	1	64					1				54					2				85					2
4JK6	4	1	61					1	5BT8	5	39	33	5	4	12	8	1	5KD8	5	11	68					1
4JL6	4	1	23					1									1				52					2
4JW8	4	11	80					1				54	5	4	12	1	1	5KE8	5	11	88					1
			85					2	5BW8	5	39	33	5	4	12	2	1	5KZ8	5	39	53					2
4KE8	4	11	88					1				34	5	4	7	1	1				26	4	5	12	2	1
			53					2				34	5	4	7	3	1	5LJ8	5	14	85					1
4KF8	4	21	92					1	5BZ7	5	8	53					1	5MB8	5	14	60					2
			92					2				53					2	5MF8	5	36	35	1	12	6	7	1
4KN8	4	39	86	4	5	12	1	1	5CG4	5	33	10					1	5MHH3	5	2	34	1	12	6	10	1
			90	4	5	12	6	1				10					2				56					1
4KT6	4	9	52					1	5CG8	5	14	73					1	5M-K9	5	41	30	3	4	12	5	1
4LJ8	4	14	85					1									1	5MQ8	5	11	65					1
			60					2				57					2				66					2
4LU6	4	1	52					1	5CL8	5	14	69					1	5N1039A	6	1	63					1
4MK8	4	21	98					1				51					2	5P-29	6	29	*62					1
			98					2	5CM6	5	16	64					1	*For plate cap, use jack next to socket 26								
4M-P12	4	1	60					1	5CM8	5	39	33	5	4	12	2	1	5R4	5	33	22					1
4M-P26	4	7	81					1				38	5	4	12	9	1				22					2
4R-HH2	4	8	53					1	5CQ8	5	11	72					1	5RDDH1	5	39	41	5	4	12	8	1
			53					2				55					2				35	5	4	12	1	1
4R-HH8	4	39	86	4	5	12	1	1	5CR8	5	39	*32	5	4	12	2	1	5R-HP1	4	11	66					1
			90	4	5	12	6	1				*34	5	4	12	9	1				55					2
4RHH15	4	8	53					1	*Normally shows short position 8.									5R-HR1	5	11	52					1
			53					2	5CU4	5	38	28	8	2	12	4	1				55					2
5AF4	5	41	*24	4	3	2	6	1				28	8	2	12	6	1	5R-K16	5	39	27	4	5	12	1	1
*Normally shows short position 1-7.									5CZ5	5	16	60					1				27	4	5	12	8	1
5AF11	5	36	31	1	12	12	11	1	5DB4	5	33	16					1									1
			31	1	12	12	6	1				16					2									2
			35	1	12	12	3	1	5DH8	5	14	61					1									1
5AM8	5	39	30	5	4	12	2	1				73					2									1
			30	5	4	12	8	1	5DJ4	5	33	16					1									1
5AN8	5	13	62					1				16					2									1
			61					2	5DN4	5	33	16					1									2
5AQ5	5	3	77					1				16					2									1
5AR4	5	33	10					1	5EA8	5	11	71					1									2
			10					2				56					2									1

*Normal Shorts refer to position of "D" Switch.

4GJ7-5RK16

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
5T4	5	33	16					1	6AG9	6	36	30	1	12	12	5	1	6AR11	6	36	28	1	12	12	5	1
			16					2				28	1	12	12	11	1				28	1	12	12	10	1
5T8	5	17	90					1	6AG11	6	36	28	1	12	12	8	1	6AS4	6	34	11					1
			63					2				28	1	12	12	5	1	6AS5	6	4	55					1
5U4	5	33	16					1				33	1	12	12	10	1	6AS6	6	1	77					1
								2										6AS7	6	38	35	8	7	12	1	1
5U8	5	11	16					1	6AH4	6	38	33	7	2	12	1	1				35	8	7	12	4	1
			79					2	6AH6	6	1	58					1	6AS8	6	39	31	5	4	12	2	1
5U9	5	42	28	5	6	12	3	1	6AH7	6	38	48	8	7	12	1	1				32	5	4	12	6	1
			32	5	6	12	10	1				48	8	7	12	5	1	6AS11	6	36	28	1	12	12	11	1
5V3	5	33	15					1	6AH9	6	36	37	1	12	5	2	1				32	1	12	12	6	1
			15					2				30	1	12	5	6	1				32	1	12	12	3	1
5V4	5	33	12					1	6AJ4	6	39	*84	8	7	1	5	1	6AT6	6	6	85					1
			12					2	*Normally shows short position 3-4-6-9.									6AT8	6	14	78					2
5V6	5	29	79					1	6AJ5	6	41	36	4	3	2	1	1				77					1
5V9	5	42	31	5	6	12	3	1	6AJ7	6	30	60					1				55					2
			30	5	6	12	8	1	6AJ8	6	39	85	5	4	12	1	1	6AU4	6	34	10					1
5W4	5	33	32					1				38	5	4	12	9	1	6AU5	6	28	71					1
			32					2	6AJ9	6	42	29	5	6	12	3	1	6AU6	6	1	82					1
5X4	5	38	47	8	7	12	3	1				33	5	6	12	10	1	6AU7	6	8	75					1
									6AK5	6	1	63					1				75					2
5X8	5	12	73					1	6AK6	6	1	82					1	6AU8	6	12	56					1
			61					2	6AK7	6	30	38					1				72					2
5X9	5	42	30	5	6	12	3	1	6AK8	6	17	90					1	6AV5	6	28	62					1
			30	5	6	12	10	1				63					2	6AV6	6	6	91					1
5Y3	5	33	32					1	6AK9	6	36	33	1	12	6	10	1				78					2
			32					2				35	1	12	6	3	1	6AV11	6	36	30	1	12	12	7	1
5Y4	5	38	52	8	7	12	3	1				31	1	12	6	8	1				30	1	12	12	9	1
			52	8	7	12	5	1	6AK10	6	36	32	1	12	12	7	1				30	1	12	12	11	1
5Z4	5	33	12					1				32	1	12	12	9	1	6AW6	6	1	64					1
								2																		
5Z10	5	33	16					1	6AL3*	6	40	30	5	4	7	3	1	6AW8	6	12	44					1
			16					2	*If no test, use alternate settings.												78					2
6A8	6	38	45	7	2	1	5	1	6AL3	6	40	30	5	4	3	7	1	6AX2	6	24	88					1
6A8GT	6	38	45	7	2	12	5	1	6AL5	6	41	33	3	4	12	2	1	6AX3	6	36	30	1	12	10	4	1
																		6AX4	6	34	13					1
6AB4	6	2	83					1				33	3	4	12	7	1	6AX5	6	38	44	7	2	1	5	1
6AB7	6	30	74					1	6AL6G	6	27	69					1				6	38	44	7	2	1
6AB8	6	39	37	5	4	12	9	1	6AL9	6	36	28	1	12	12	5	1	6AX6G	6	38	48	7	2	1	3	1
			44	5	4	12	2	1				28	1	12	12	11	1				48	7	2	1	5	2
6AB9	6	42	79	5	6	10	2	1	6AL11	6	36	31	1	12	12	3	1	6AX7	6	8	*85					1
																										2
6AC5	6	38	79	5	6	4	8	1	6AM4	6	39	*96	8	7	1	5	1	*Tube good if it reads 22 or more.								
6AC7	6	30	60					1	*Normally shows short position 3-4-6-9.									6AX8	6	11	73					1
6AC9	6	36	28	1	12	3	9	1	6AM5	6	41	34	4	3	12	1	1				54					2
			45	1	12	3	2	1	6AM6	6	41	30	4	3	12	1	1	6AY3	6	44	27	5	4	7	2	1
									6AM8	6	39	30	5	4	12	2	1	6AY3B	6	44	27	5	4	7	2	1
6AC10	6	36	35	1	12	2	3	1				30	5	4	12	8	1	6AY11	6	36	30	1	12	12	5	1
			32	1	12	12	7	1	6AN4	6	41	*30	4	3	2	6	1				30	1	12	12	8	1
			32	1	12	12	9	1	*May show short position 1-7.												30	1	12	12	3	1
6AD5G	6	38	40	7	2	12	5	1	6AN5	6	1	26					1				30	1	12	12	10	1
6AD7	6	38	54	7	2	12	5	1	6AN6	6	41	52	7	1	12	2	1	6AZ8	6	39	32	5	4	12	6	1
			62	7	2	12	1	1				52	7	1	12	3	1				36	5	4	12	9	1
6AD8	6	39	37	5	4	12	2	1				52	7	1	12	4	1	6B3	6	15	10					1
			60	5	4	12	7	1				52	7	1	12	5	1	6B4	6	38	35	7	2	12	5	1
			60	5	4	12	8	1	6AN8	6	13	62					1	6B6	6	38	37	7	2	12	10	1
6AD10	6	36	30	1	12	12	3	1				61					2				58	7	2	12	4	1
			33	1	12	12	8	1	6AQ4	6	41	*29	4	3	6	1	1				58	7	2	12	5	1
6AE5G	6	38	40	7	2	12	5	1	*Normally shows short position 2-5.									6B8	6	38	55	7	2	12	10	1
6AF3	6	15	12					1	6AQ5	6	3	77					1				65	7	2	12	4	1
6AF4	6	41	*24	4	3	2	6	1	6AQ6	6	6	89					1				65	7	2	12	5	1
*Normally shows short position 1-7.									6AQ7	6	38	80					2	6B10	6	36	34	1	12	12	3	1
6AF5G	6	38	38	7	2	12	5	1				45	8	7	12	4	1				34	1	12	12	5	1
6AF9	6	42	27	5	6	7	1	1																		

*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
68A7	6	39	33	5	4	12	2	1	68M5	6	3	77					1	6C8	6	38	48	7	2	12	5	1
68A8	6	12	53					1	68M8	6	39	33	5	4	12	3	1	6C9	6	39	48	7	2	12	10	1
			59					2				39	5	4	12	1	1				28	5	4	6	1	1
68A11	6	36	29	1	12	12	4	1	68N4	6	41	*33	4	3	2	7	1				28	5	4	10	7	1
			37	1	12	12	9	1													42	1	12	12	9	1
68-B14♦	6	44	*33	4			1	2	1																	
68C4	6	40	30	5	4	3	7	1	68N5	6	39	*39	5	4	1	2	1	6C10	6	36	42	1	12	12	11	1
68C5	6	1	74					1	68N6	6	7	75					1	6C16	6	11	66					1
68C7	6	39	32	5	4	12	2	1	68N8	6	39	35	5	4	12	8	1				55					2
												35	5	4	12	1	1	6C18	6	39	30	4	5	8	7	1
68C8	6	8	53	5	4	12	8	1	68N11	6	36	29	1	12	12	3	1	6C31	6	41	*80	4	3	1	7	1
			53					1				29	1	12	12	7	1									1
68C32	6	6	91					2	68Q5	6	23	68					1	6CA4	6	39	34	5	4	12	1	1
								1	68Q6	6	27	69					1				34	5	4	12	7	1
68D5	6	38	29	7	2	12	1	1	68Q7	6	8	54					1	6CA5	6	4	55					1
68D6	6	1	85					1				54					2	6CA7	6	29	53					1
68D11	6	36	26	1	12	12	11	1	68R3	6	15	10					1	6CA11	6	36	35	1	12	8	3	1
			31	1	12	12	3	1	68R8	6	14	72					1				33	1	12	8	6	1
												55					2				33	1	12	7	8	1
68E3	6	36	31	1	12	12	6	1	68S3	6	44	27	4	5	2	7	1	6CB5	6	26	43					1
68E6	6	1	91	1	12	4	10	1	68S3A	6	44	27	4	5	2	7	1	6CB6	6	1	64					1
68E7	6	39	33	5	4	3	7	1	68S8	6	8	54					1	6CCYZ	6	39	29	9	1	12	3	1
68E8	6	14	72					1				54					2				29	9	1	12	7	1
									6BT6	6	6	85					1	6CC31	6	2	60					1
			55					2				78					2				60					2
68F5	6	3	40					1	6BT8	6	39	33	5	4	12	8	1	6CD3	6	36	*27	1	12	4	10	1
68F6	6	6	85					1				54	5	4	12	1	1									1
			80					2	6BU6	6	6	85	5	4	12	2	1				53					1
68F8	6	39	25	4	5	12	1	1									1	6CE3	6	36	25	1	12	4	10	1
												80					2	6CE5	6	1	62					1
			25	4	5	12	3	1	6BU8	6	21	92					1	6CF6	6	1	60					1
			25	4	5	12	7	1				92					2	6CG3	6	36	30	1	12	4	10	1
			25	4	5	12	8	1	6BV8	6	39	31	5	4	12	2	1	6CG6	6	1	82					1
			25	4	5	12	9	1				33	5	4	12	6	1	6CG7	6	8	76					1
68F11	6	36	25	1	12	12	3	1				33	5	4	12	9	1	6CG8	6	14	78					2
68G6	6	28	66	1	12	12	8	1	6BV11	6	36	30	1	12	12	6	1				73					1
68H3	6	44	27	5	4	7	2	1				30	1	12	12	7	1	6CH3	6	44	57					2
68H3A	6	44	27	5	4	7	2	1	6BW3	6	36	28	1	12	4	10	1	6CH6	6	9	29	4	5	7	2	1
									6BW4	6	39	50	5	4	12	1	1				55					1
68H6	6	1	89					1				50	5	4	12	7	1	6CH8	6	39	33	5	4	12	7	1
68H8	6	12	59					1	6BW6	6	39	42	4	5	1	2	1				36	5	4	12	8	1
			54					2	6BW7	6	9	76					1	6CJ3	6	44	25	4	5	7	2	1
68H11	6	36	27	1	12	12	4	1	6BW8	6	39	33	5	4	2	6	1	6CJ6	6	39	*32	5	4	7	2	1
			27	1	12	12	6	1				34	5	4	7	1	1									1
68J3	6	36	27	1	12	12	8	1				34	5	4	7	3	1	6CK3	6	44	25	4	5	7	2	1
68J6	6	1	81	1	12	4	10	1	68W11	6	36	30	1	12	12	3	1	6CK4	6	38	34	7	2	1	3	1
68J7	6	39	33	5	4	12	2	1				30	1	12	12	11	1	6CK6	6	39	30	5	4	12	2	1
			33	5	4	12	6	1	68X6	6	9	76					1	6CL3	6	44	27	4	5	2	7	1
									68X7	6	25	55					1	6CL5	6	26	54					1
68J8	6	39	33	5	4	12	8	1				55					2	6CL6	6	39	*32	5	4	2	9	1
			38	5	4	12	8	1	68X8	6	39	33	5	4	12	2	1									1
			34	5	4	12	1	1				33	5	4	12	7	1	6CL8	6	14	69					1
			34	5	4	12	6	1	68Y5	5	38	38	7	2	12	4	1				51					2
68K4A	6	38	78	7	2	6	5	1				38	7	2	12	5	1	6CM3	6	44	30	4	5	2	7	1
68K4AA	6	38	78	7	2	6	5	1	6BY6	6	1	93					1	6CM4	6	40	29	4	5	3	6	1
68K48A	6	38	78	7	2	6	5	1	6BY7	6	9	62					1	6CM5	6	27	58					1
68K5	6	10	53					1	6BY8	6	39	34	5	4	12	1	1	6CM6	6	16	64					1
68K6	6	6	86					1				34	5	4	12	6	1	6CM7	6	19	80					1
			70					2	6BY11	6	36	32	1	12	12	3	1				94					2
68K7	6	8	55					1				32	1	12	12	8	1	6CM8	6	39	33	5	4	12	2	1
			55					2	6BZ3	6	36	30	1	12	4	10	1				38	5	4	12	9	1
68K11	6	36	35	1	12	12	7	1	6BZ6	6	1	61					1	6CN6	6	29	*62					1
			35	1	12	12	9	1	6BZ7	6	8	53					1									1
			35	1	12	12	11	1				53					2									1
68L4	6	34	10					1																		
68L7	6	25	57					1	6BZ8	6	8	55					1	6CN7	6	18	94					1
			57					2				55					2	6CQ4	6	34	11					1
68L8	6	11	66					1	6C4	6	41	41	4	3	1	6	1	6CQ6	6	41	35</					

▲ Use TC-75 Adapter

*Normal Shorts refer to position of "D" Switch.

6BA7-6CQ8

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6CR6	6	41	39	4	3	12	7	1	6DR8	6	39	31	5	4	12	2	1	6EM7	6	38	32	8	7	12	1	1
			61	4	3	12	2	1				62	5	4	12	7	1				45	8	7	12	4	1
6CR8	6	39	*32	5	4	12	2	1				62	5	4	12	8	1	6EN4	6	38	*40	7	2	6	5	1
			*34	5	4	12	9	1	6DS4	6	43	*87	10	12	12	2	1	*Normally shows short position 1 3 4 & *Tube good if it reads 40 or more.								
*Normally shows short position 8.									*For grid emission turn D switch to position 4.																	
6CS6	6	1	94					1	6DS5	6	3	76					1	6EQ7	6	39	34	5	4	12	2	1
6CS7	6	20	96					1	6DS8	6	39	30	5	4	12	2	1				71	5	4	12	8	1
			95					2				34	5	4	12	9	1	6ER5	6	41	33	4	3	1	2	1
6CT3	6	39	32	4	5	6	2	1	6DT3	6	36	31	1	12	4	10	1	6ES5	6	41	33	4	3	1	2	1
6CU5	6	4	47					1	6DT4	6	34	11					1	6ES6	6	41	26	3	4	2	1	1
6CU6	6	27	69					1	6DT5	6	16	45					1	6ES8	6	8	30					1
6CU8	6	39	32	5	4	1	7	1	6DT6	6	1	91					1				30				2	
			33	5	4	6	8	1	6DT8	6	8	71					1	6ET6	6	41	30	4	3	12	1	1
6CW4	6	43	*87	10	12	12	2	1				71				2	6ET7	6	39	30	5	4	12	7	1	
*For grid emission turn D switch to position 4.									6DU3	6	36	30	1	12	4	10	1				70	5	4	12	2	1
6CW5	6	23	58					1	6DW4	6	44	27	4	5	2	7	1				70	5	4	12	3	1
6CW7	6	39	33	5	4	7	2	1	6DW5	6	16	30					1	6EU7	6	39	35	2	1	12	5	1
			33	5	4	7	6	1	6DX4	6	41	*62	3	4	1	7	1				35	2	1	12	8	1
6CX8	6	12	45					1	*Normally shows short position 2-6.									6EU8	6	39	32	5	4	12	7	1
			67					2	6DX8	6	39	26	4	5	12	8	1				32	5	4	12	2	1
6CY5	6	1	54					1				26	4	5	12	1	1	6EY5	6	1	57					1
6CY7	6	39	31	5	4	2	3	1	6DY4	6	41	*24	4	3	2	6	1	6EY7	6	8	78					1
			45	5	4	2	7	1	*Normally shows short position 1-7.												78				2	
6CZ5	6	16	60					1	6DY5	6	23	68					1	6EW6	6	1	77					1
6D1	6	41	43	4	3	1	6	1	6DY7	6	38	40	7	2	12	1	1	6EW7	6	20	87					1
6D2	6	41	33	3	4	12	2	1				40	7	2	12	5	1				92				2	
			33	3	4	12	7	1	6DZ4	6	41	*31	3	4	6	2	1	6EX6	6	26	42					1
6D4	6	41	43	4	3	12	1	1	*Normally shows short position 1-7.									6EY6	6	29	65					1
6D8	6	38	43	7	2	12	5	1	6DZ7	6	38	40	7	2	12	1	1	6EZ5	6	29	65					1
6D10	6	36	32	1	12	12	7	1				40	7	2	12	5	1	6EZ8	6	39	33	5	4	12	2	1
			32	1	12	12	9	1	6DZ8	6	39	27	4	5	8	3	1				33	5	4	12	7	1
			32	1	12	12	11	1				30	4	5	2	1	1	6F5	6	38	40	7	2	1	10	1
6DA4	6	34	11					1	6E8	6	38	45	7	2	1	5	1	6F6	6	29	91					1
6DA6	6	9	80					1	6EA4*	6	36	80	1	12	6	4	1	6F8	6	38	45	7	2	12	5	1
6DB5	6	16	30					1	*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 37, remove resistor after test is completed.												45	7	2	12	10	1
6DB6	6	1	87					1	*Normally shows short position 2-5-9-11.									6F10	6	30	60					1
6DC6	6	1	67					1	6EA5	6	1	80					1	6F21	6	41	35	4	3	12	1	1
6DC8	6	39	33	5	4	12	2	1	6EA7	6	38	35	8	7	12	1	1	6F22	6	39	40	5	4	2	9	1
			60	5	4	12	7	1				39	8	7	12	4	1	6F29	6	9	40					1
			60	5	4	12	8	1	6EA8	6	11	71					1	6F31	6	1	78					1
6DE4	6	34	13					1				56					2	6F33	6	1	77					1
6DE6	6	1	61					1	6EB5	6	41	53	3	4	12	2	1	6F36	6	1	58					1
6DE7	6	20	81					1				53	3	4	12	7	1	6F40	6	39	39	5	4	2	9	1
			90					2	6EB8	6	12	35					1	6FA7	6	39	33	5	4	12	7	1
6DG6	6	29	38					1				99					2				65	5	4	12	3	1
6DJ8	6	39	31	5	4	12	2	1	6EC4	6	38	32	7	8	2	5	1	6FC7	6	39	29	4	5	7	2	1
			31	5	4	12	7	1	6EC7	6	9	76					1	6FD6	6	41	26	3	4	2	1	1
6DK3	6	44	31	4	5	2	7	1	6ED4	6	44	*52	4	5	12	8	1	6FD7	6	39	25	4	5	2	3	1
6DK6	6	1	61					1	*Normally shows short position 2-3-6-7-9.												32	4	5	2	7	1
6DL3	6	44	29	4	5	7	2	1	6EF4*	6	36	76	1	12	6	4	1	6FE5	6	29	37					1
6DL4	6	39	*85	4	5	7	8	1	*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 37, remove resistor after test is completed.									6FG5	6	41	31	4	3	2	1	1
*Normally shows short position 1-3-6-9.																		6FG7	6	14	72					1
6DL5	6	3	88					1													55					2
6DM4	6	34	11					1	*Normally shows short position 2-9.									6FH5	6	41	33	4	3	1	2	1
6DN3	6	44	31	4	5	2	7	1	6EH4*	6	36	80	1	12	6	4	1	6FH6	6	27	62					1
6DN6	6	26	47					1	*Insert a 2.7K 1w., 5% resistor from pin hole #4 to #6 of socket #37. Remove resistor after test is completed.									6FH8	6	39	32	5	4	12	6	1
6DN7	6	25	56					1													32	5	4	12	2	1
			77					2	*Normally shows short position 2-5-9-11.									6FJ7	6	36	36	1	12	12	3	1
6DQ3	6	36	30	1	12	4	10	1	6EH5	6	4	57					1	6FM7	6	36	25	1	12	3	8	1
6DQ4	6	34	11					1	6EH7	6	9	40					1	6FM8	6	39	47	5	4	12	8	1
6DQ5	6	26	55					1	6EH8	6	12	71					1				34	5	4	12	2	1
6DQ6	6	27	65					1				54					2				34	5	4	12	6	1
6DQ6B	6	27	62					1	6EJ4*	Use 6EF4 settings.											34	5	4	12	2	1
6DR4	6	41	43	4	3	1	6	1	May show short position 2-9-11.									6FQ5	6	41	33	4	3	1	2	1
6DR6	6	39	*32	5	4	7	2	1	6EJ7	6	9	58					1	6FQ5A	6	41	31	4	3	1	2	1
*Normally shows short position 1-6-9.									6EL4	6	38	78	7	2	6	8	1	6FQ7	6	8	68					1
6DR7	6	39	32	4	5	2	3	1	6EM5	6	16	53					1				68					2
			40	4	5	2	7	1																		

◆Use TC-80 Adapter

*Normal Shorts refer to position of "D" Switch.

▲Use TC-75 Adapter.

■ Use TC-62B Adapter

6CR6-6FQ7

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6FR7	6	39	24 32	4	5	2	3	1	6GT5	6	35	63					1	6HR5	6	3	77					1
6FS5	6	1	99					1	6GT5A	6	35	63					1	6HR6	6	1	71					1
6FY6	6	1	54					1	6GU5	6	41	27	3	4	2	1	1	6HS5	6	36	*30	1	12	11	2	1
6FY8	6	14	65					1	6GU7	6	8	56					2	*Normally shows short position 3-10.							1	
			54					2	6GV5	6	36	*26	1	12	5	9	1	6HS6	6	1	66					1
6FW5	6	28	57					1	*Normally shows short position 3-4-7-10-11.							1	6HS8	6	21	99					1	
6FW8	6	8	30					1	6GV7	6	39	30	4	5	8	7	1	6HT5	6	36	*52	1	12	2	6	1
			30					2				33	4	5	8	9	1	*May show short position 4-7-9-11.							1	
6FY5	6	41	33	4	3	1	2	1	6GV8	6	39	25	4	5	12	9	1	6HT6	6	9	60					1
6FY7	6	36	25	1	12	12	3	1				25	4	5	12	2	1	6HU6	6	39	52	4	5	2	1	1
			42	1	12	12	10	1	6GW5	6	41	29	3	4	6	2	1	6HU8	6	39	29	4	5	12	2	1
6FY8	6	39	30	4	5	12	3	1	6GW6	6	27	62					1				29	4	5	12	6	1
			39	4	5	12	1	1	6GW8	6	39	25	4	5	2	8	1	6HY5	6	36	*33	1	12	2	11	1
6G6	6	29	94					1				35	4	5	7	1	1	*Normally shows short position 3-10.							1	
6G11	6	36	33	1	12	12	3	1	6GX6	6	1	85					1	6HW8	6	39	32	4	5	12	6	1
			31	1	12	12	8	1	6GX7	6	22	76					1	6HZ5	6	36	*30	1	12	2	11	1
6GA8	6	8	76					1				73					2	*Normally shows short position 3-10							1	
			76					2	6GY5	6	36	*25	1	12	5	9	1	6HZ6	6	1	83					1
6G-B3A	6	27	65					1	*Normally shows short position 3-4-7-10-11.							1	6HZ8	6	12	28					1	
6GB5♦	6	44	*25	4	5	2	1	1	6GY6	6	1	82					1				75					2
*Normally shows short position 3-6-7-8.									6GY8	6	39	*32	5	4	12	1	1	6J4	6	41	*85	4	3	1	7	1
6G-B6	6	27	64					1				*32	5	4	12	3	1	*Normally shows short position 5-6.							1	
6G-B7	6	27	58					1				*94	5	4	12	6	1	6J5	6	29	93					1
6GB9	6	27	64					1	*Normally shows short position 4.							1	6J6	6	2	60					1	
6GC5	6	16	26					1	6GZ5	6	41	30	3	4	2	5	1				60					2
6GC6	6	26	52					1	6H6	6	38	48	7	2	1	3	1	6J7	6	38	50	7	2	1	10	1
6GD7	6	14	74					1				48	7	2	1	5	1	6J9	6	39	26	4	5	12	2	1
			63					2	6H31	6	1	91					1				26	4	5	12	9	1
6GE5	6	36	*24	1	12	11	3	1	6HA5	6	5	56					1				26	4	5	12	7	1
*Normally shows short position 4-10.									6HA6	6	9	23					1	6J10	6	36	96	1	12	12	6	1
6GE8	6	39	33	5	4	12	8	1	6HB5	6	36	*25	1	12	11	3	1	6J11	6	36	22	1	12	12	5	1
			33	5	4	12	3	1	*Normally shows short position 4-10.							1				22	1	12	12	11	1	
6GF5	6	36	*24	1	12	11	3	1	6HB6	6	9	20					1	6JA5	6	36	*33	1	12	9	2	1
*Normally shows short position 4-10.									6HB7	6	22	75					1	*Normally shows short position 3-4-10-11.							1	
6GF7	6	44	27	4	5	12	2	1				75					2	6JA8	6	39	25	4	5	12	7	1
			38	4	5	12	9	1	6HC8	6	39	36	5	4	12	3	1				95	4	5	12	3	1
6GF7A	6	44	27	4	5	12	2	1				38	5	4	12	1	1	6JB5	6	36	*35	1	12	9	2	1
			38	4	5	12	9	1	6HD5	6	36	*27	1	12	3	11	1	*Normally shows short position 3-4-10-11.							1	
6GH8	6	11	68					1	*Normally shows short position 4-5-9-10.							1	6JB6	6	35	62					1	
			56					2	6HD7	6	39	30	4	5	1	2	1	6JB6A	6	35	62					1
6GH8A	6	11	68					1				30	4	5	1	9	1	6JC5	6	36	*32	1	12	9	2	1
			56					2	6HE5	6	36	*32	1	12	9	2	1	*Normally shows short position 3-4-10-11							1	
6GJ5	6	35	65					1	*Normally shows short position 3-4-10-11.							1	6JC6	6	9	65					1	
6GJ5A	6	35	65					1	6HE7	6	36	27	1	12	10	2	1	6JC6A	6	9	59					1
6GJ7	6	22	62					1				27	1	12	10	9	1	6JC8	6	39	24	4	5	1	2	1
			78					2	6HF5	6	36	*25	1	12	9	5	1				24	4	5	1	8	1
6GJ8	6	11	70					1	*Normally shows short position 3-4-6-8-10-11.							1	6JD5	6	36	*30	1	12	2	11	1	
			53					2	6HF8	6	12	27					1	*Normally shows short position 3-10							1	
6GK5	6	41	25	4	3	1	2	1				80					2	6JD6	6	9	61					1
6GK6	6	9	40					1	6HG5	6	3	85					1	6JE6A	6	35	59					1
6GK7	6	9	58					1	6HG8	6	39	25	4	5	3	2	1	6JE6B	6	35	59					1
6G-K17	6	34	12					1				25	4	5	1	6	1	6JE6C	6	35	52					1
6GL7	6	25	54					1	6HJ5	6	36	*27	1	12	3	11	1	6JE8	6	12	56					1
			98					2	*Normally shows short position 4-5-9-10.							1				78					2	
6GM5	6	39	*26	4	5	2	6	1	6HJ7	6	39	*78	4	5	1	7	1	6JF6	6	44	*26	4	5	2	6	1
*May show short position 3-8.												30	4	5	1	9	1	*Normally shows short position 1-7.							1	
6GM6	6	1	64					1	*For grid emission turn D switch to position 2.							1	6JG5	6	12	29					1	
6GM8	6	39	33	5	4	12	2	1	6HJ8	6	39	29	5	4	12	2	1	6JG6	6	35	56					1
			33	5	4	12	7	1				31	5	4	12	8	1									1
6GN7	6	9	21					1	6HK5	6	5	56					1	6JG6A	6	35	56					1
6GN8	6	12	36					1	6HK8	6	8	54					1	6JH5	6	36	*32	1	12	11	2	1
			98					2				54					2	*Normally shows short position 3-7-8-10.							1	
6GQ7	6	39	24	4	5	3	2	1	6HL5	6	39	30	4	5	1	2	1	6JH6	6	1	64					1
			24	4	5	3	6	1	6HL8	6	11	60					1	6JH8	6	39	26	4	5	12	6	1
			24	4	5	3	8	1				60					2	6JK5	6	36	*32	1	12	11	2	1
6GS7	6	14	80					1	6HM5	6	5	57					1	*Normally shows short position 3-7-8-10.							1	
			53					2	6HM6	6	9	68					1	6JK6	6	1	61					1
6GS8	6	21	95					1	6HQ5	6	5	55					1	6JK8	6	8	54					1
			95					2	6HQ6	6	1	64					1				55					2

*Normal Shorts refer to position of "D" Switch.

</

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6JL6	6	1	23					1	6KS6	6	7	83					1	6LV6	6	36	*31	1	12	5	9	1
6JL8	6	12	40					1	6KS8	6	12	33					1	*May show short position 3-4-7-10-11								
			70					2				84					2	6LW6	6	38	*31	7	8	1	5	1
6JM6	6	36	28	1	12	4	5	1	6KT6	6	9	52					1	*Normally shows short position 2-6								
6JN6	6	36	27	1	12	4	11	1	6KTR	6	12	67					1	6LX6	6	27	47					1
6JN8	6	14	67					1				91					2	6LY8	6	11	80					1
			53					2	6KU8	6	39	22	4	5	12	7	1				85					2
6JQ6	6	39	*34	4	5	8	7	1				60	4	5	12	2	1	6LY8	6	12	21					1
			*57	4	5	8	6	1				60	4	5	12	3	1				*99					2
*May show short position 2-3.									6KY6	6	44	30	4	5	1	2	1	*Tube good if it reads 28 or more.								
6JR6	6	35	50					1	6KY8	6	12	22					1	6LZ6	6	35	53					1
6JS6	6	36	*29	1	12	9	5	1				82					2	6M7	6	38	52	7	2	1	10	1
*Normally shows short position 3-4-10-11.									6KW6	6	44	30	4	5	1	8	1	6M11	6	36	25	1	12	12	2	1
6JT6	6	35	65					1	6KY6	6	9	20					1				25	1	12	12	5	1
6JT6A	6	35	65					1	6KY8	6	44	27	4	5	12	2	1				25	1	12	12	8	1
6JT8	6	12	20					1				39	4	5	12	9	1	6MA6	6	38	*58	3	8	2	6	1
			*99					2	6KY8A	6	44	27	4	5	12	2	1	*Tube good if it reads 40 or more.								
*Tube good if reads 60 or more.												39	4	5	12	9	1	*No short test.								
6JU6	6	35	55					1	6KZ8	6	39	26	4	5	12	2	1	6MB6	6	36	*32	1	12	9	5	1
6JU8	6	39	*32	4	5	2	1	1				26	4	5	12	9	1	*Normally shows short position 3-4-10-11.								
			**32	4	5	8	7	1	6L5	6	38	53	7	2	6	5	1	6MB8	6	14	84					1
*Normally shows short position 8.									6L6	6	29	63					1				61					2
**Normally shows short position 2.									6L7	6	38	44	7	2	1	10	1	6MC6	6	35	46					1
6JU8A	6	39	*32	4	5	2	1	1	6L10	6	30	38					1	6MD8	6	44	35	4	5	12	6	1
			**32	4	5	8	7	1	6L12	6	8	70					1				35	4	5	12	8	1
*Normally shows short position 8.												70					2				35	4	5	12	9	1
**Normally shows short position 2.									6L41	6	39	33	5	4	8	9	1	6ME6	6	35	53					1
6JV8	6	12	55					1	6L43	6	39	*32	5	4	2	9	1	6ME8	6	39	30	4	5	12	6	1
			85					2	*Normally shows short position 3-8.									6MF8	6	36	35	1	12	6	7	1
6JW8	6	11	80					1	6LB6	6	36	*30	1	12	9	5	1				34	1	12	6	10	1
			85					2	*Normally shows short position 3-4-10-11.									6MG8	6	11	80					1
6JX8	6	22	88					2	6LB8	6	12	21					1				59					2
			93					2				71					2									
6JY8	6	12	40					1	6LC6A	6	38	78	7	2	12	5	1	6M-H1	6	41	*85	4	3	1	7	1
			55					2	6LC8	6	39	24	4	5	3	6	1	*Normally shows short position 5-6								
6JZ6	6	36	*31	1	12	9	5	1				24	4	5	6	2	1	6MH6	6	36	*31	1	12	5	9	1
*Some tubes may show short position 3-4-10-11.									6LD6	6	9	51					1	*May show short position 3-4-7-10-11								
6JZ8	6	36	29	1	12	6	7	1	6LD12	6	16	90					1	6M-HH3	6	2	56					1
			40	1	12	6	10	1				63					2				56					2
6K6	6	29	92					1	6LE8	6	39	29	4	5	12	9	1	6MU6	6	35	52					1
6K7	6	38	52	7	2	1	10	1	6LF6	6	36	*31	1	12	5	9	1	6MJ8	6	36	35	1	12	7	8	1
6K8	6	38	35	7	2	1	5	1	*May show short position 3-4-7-10-11.												35	1	12	7	10	1
6K11	6	36	38	1	12	12	7	1	6LF8	6	12	55					1				35	1	12	7	11	1
			38	1	12	12	9	1				95					2	6MK8	6	21	98					1
			38	1	12	12	11	1	6LG6	6	36	*32	1	12	9	5	1				98					2
6KA8	6	39	26	4	5	12	6	1	*May show short position 2-3-4-7-10-11.									6M-L4	6	41	*24	4	3	2	6	1
			33	4	5	12	2	1	6LH6A	6	38	78	7	2	12	5	1	*Normally shows short position 1-7.								
6KD6	6	36	*26	1	12	9	5	1	6LJ6A	6	38	78	2	7	12	5	1	6ML8	6	39	34	4	5	12	6	1
*Normally shows short position 3-4-10-11.												95					2				4	5	12	8	1	
6KD8	6	11	68					1	6LJ8	6	14	85					1					4	5	12	9	1
			52					2				60					2	6MN8	6	36	33	1	12	7	8	1
6KE8	6	11	88					1	6LM8	6	11	68					1				33	1	12	7	10	1
			53					2				58					2				33	1	12	7	11	1
6KF8	6	21	92					1	6LN8	6	11	66					1	6M-P17	6	3	90					1
			92					2				55					2	6M-P18	6	41	34	3	4	7	1	1
6KG6	6	44	*26	4	5	1	8	1	6LP12	6	39	33	5	4	12	3	1	6MP20	6	1	43					1
*Normally shows short position 2-3-6-7.												39	5	4	12	1	1	6MQ8	6	11	65					1
6KL8	6	39	31	4	5	12	2	1	6LO6	6	35	52					1				66					2
			70	4	5	12	8	1	6LQ8	6	12	31					1	6MU8	6	11	42					1
6KM6	6	35	53					1				50					2				60					2
6KM8	6	39	31	4	5	12	7	1	6LR6	6	36	*32	1	12	9	5	1	6MV8	6	12	60					1
			75	4	5	12	3	1	*May show short position 3-4-7-10-11.																	2
6KN6	6	36	*30	1	12	9	5	1	6LR8	6	44	31	4	5	12	2	1	6MX8	6	44	27	4	5	12	2	1
*Normally shows short position 3-4-10-11.												31	4	5	12	9	1				39	4	5	12	9	1
6KN8	6	39	86	4	5	12	1	1	6LT8	6	39	27	4	5	7	9	1	6MY8	6	36	27	1	12	6	7	1
			90	4	5	12	6	1				32	4	5	1	6	1				27	1	12	6	10	1
6KR8	6	12	22					1				32	4	5	1	8	1	6N3	6	39	29	4	5	6	9	1
			59					2	6LU6	6	1	52					1	6N7	6	38	47	7	2	1	4	1
6KR8A	6	12	22					1	6LUB	6	36	27	1	12	6	10	1				47	7	2	1	5	1
			59					2				27	1	12	6	10	1									

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6N8	6	39	37 64 64	5 5 5	4 4 4	12 12 12	2 7 8	1 1 1	6S27	6	38	44 72 72	8 7 8	7 7 7	1 1 1	2 4 5	1 1 1	7AF7	6	37	41 41 32	8 8 8	1 1 1	12 12 12	4 5 6	1 1 1
6NK7GT	6	30	84					1	6T4	6	41	*33	4	3	2	6	1	7AG7	6	37	32	8	1	12	6	1
6P5	6	29	93					1	*Normally shows short position 1-7.									7AH7	6	37	32	8	1	12	6	1
6P15	6	23	68					1	6T7G	6	38	37 58 58	7 7 7	2 2 2	12 12 12	10 4 5	1 1 1	7AJ7	6	37	37	8	1	12	6	1
6Q7	6	38	40 63 63	7 7 7	2 2 2	1 1 1	10 4 5	1 1 1	6T8	6	17	90 63					2	7AK7	6	37	33	8	1	12	6	1
6Q8	6	38	45	7	2	1	5	1	6T8A	6	17	90 63					2	7AN7	7	39	33 33	5 5	4 4	7 7	2 6	1 1
6Q11	6	36	38 38 38	1 1 1	12 12 12	12 12 12	7 9 11	1 1 1	6T9	6	36	27 27 27	1 1 1	12 12 12	8 4 3	1 1 1	7AU7	7	8	75 75						2
6R3	6	39	33	5	4	2	9	1	6T10	6	36	28	1	12	12	3	1	7B4	6	37	40	8	1	12	6	1
6R4	6	39	30	4	5	12	1	1	6U4	6	34	11					1	7B5	6	37	52	8	1	12	6	1
6R7	6	38	52 63 63	7 7 7	2 2 2	1 1 1	10 4 5	1 1 1	6U6	6	29	54					1	7B6	6	37	40 68 68	8 8 8	1 1 1	4 4 4	3 5 6	1 1 1
6R8	6	17	86 62					2	6U7	6	38	35	7	2	12	10	1	7B7	6	37	45	8	1	12	6	1
6RA6	6	40	34	4	5	9	7	1	6U8	6	11	79					2	7B8	6	37	42	8	1	12	4	1
6R-A9	6	39	30	4	5	7	2	1	6U9	6	42	28 32	5 5	6 6	12 12	3 10	1 1	7C4	6	37	53	8	1	12	4	1
6R-B11	6	39	32	4	5	6	3	1	6U10	6	36	32 32	1 1	12 12	7 9	1 1	7C5	6	37	38	8	1	12	6	1	
6R-HH2	6	8	53 53					2	6V3	6	15	10					1	7C6	6	37	50	8	1	4	3	1
6R-HH8	4	39	86 90	4 4	5 5	12 12	1 6	1 1	6V4	6	39	40 40	5 5	4 4	12 12	1 7	1 1	7C7	6	37	68 68	8 8	1 1	4 4	5 6	1 1
6R-K19	6	15	10					1	6V6	6	29	79					1	7D10	6	9	55					1
6R-P15	6	39	35	4	5	1	2	1	6V8	6	39	40 32 32	5 5 5	4 4 4	12 12 12	6 2 7	1 1 1	7D18	7	39	31	5	4	12	2	1
6R-P22	6	39	*32	4	5	2	9	1	6V9	6	42	31	5	6	12	3	1	7E5	6	37	*33	8	2	1	5	1
*Normally shows short position 3-8.									6W4	6	34	11					1	*Normally shows short position 3-4-6-7.								
6S2	6	24	35					1	6W5G	6	38	44 44	7 7	2 2	1 1	5 3	1 1	7E6	6	37	40 69	8 8	1 1	4 4	3 5	1 1
6S4	6	16	58					1	6W6	6	29	51					1	7E7	6	37	47 68 68	8 8 8	1 1 1	12 12 12	6 3 4	1 1 1
6S7	6	38	47	7	2	1	10	1	6W7	6	38	50	7	2	12	10	1	7EK7	7	39	33	5	4	7	2	1
6S8	6	38	45	8	7	5	10	1	6X4	6	41	44 44	4 4	3 3	12 12	1 6	1 1	7ES8	7	8	30 30					2
			62 62 63	8 8 8	7 7 7	5 5 2	1 4 3	1 1 1	6X5	6	33	15 15					1 2	7EY6	7	29	65					1
6SA7	6	38	37	7	2	1	5	1	6X6	6	38	48 48	7 7	2 2	12 12	3 5	1 1	7F7	6	37	45	8	1	12	4	1
6SB7Y	6	38	34	7	2	1	5	1	6X8	6	12	73 61					2	7F8	6	37	30 30	7 7	2 2	12 12	1 8	1 1
6SC7	6	38	48 48	8 8	7 7	1 1	3 4	1 1	6X9	6	42	30	5	6	12	3	1	7FC7	7	39	29 29	4 4	5 5	7 7	2 6	1 1
6SD7	6	30	69					1	6Y6	6	29	40					1	7G7	6	37	36	8	1	12	6	1
6SE7	6	30	83					1	6Y9	6	42	27 27	5 5	6 6	12 12	1 8	1 1	7GS7	7	14	80 53					1
6SF5	6	38	41	8	7	1	3	1	6Y10	6	36	29	1	12	4	3	1	7GV7	7	39	30 33	4 4	5 5	8 8	7 9	1 1
6SF7	6	38	46 69	8 8	7 7	1 1	2 5	1 1	6Z7G	6	38	29 47 47	1 7 7	12 2 2	4 1 1	8 4 5	1 1 1	7H7	6	37	35	8	1	12	6	1
6SG7	6	30	77					1	6Z10	6	36	30 95	1 1	12 12	11 6	1 1	7HG8	7	39	25 25	4 4	5 5	3 1	2 6	1 1	
6SH7	6	30	77					1	6Z31	6	41	44 44	4 4	3 3	12 12	1 6	1	7J7	6	37	35 50	8 8	1 1	12 12	4 4	1 1
6SJ7	6	30	83					1	6ZY5	6	33	17					1	7K7	6	37	45 65 65	8 8 8	1 1 1	12 12 12	4 5 6	1 1 1
6SK7	6	30	84					1	7A4	6	37	41	8	1	12	6	1	7KY6	7	9	20					1
6SL7	6	25	*85 *85					2	7A5	6	37	34	8	1	12	6	1	7KZ6	7	9	17					1
*Tube good if it reads 22 or more.									7A6	6	37	48 48	8 8	1 1	12 12	3 6	1 1	7L7	6	37	36	8	1	12	6	1
6SN7	6	25	78					1	7A7	6	37	45	8	1	12	6	1	7M-P18	7	41	34	3	4	7	1	1
6SQ7	6	38	78 42 71 71	8 8 8	7 7 7	1 1 1	2 4 5	1 1 1	7A8	6	37	40	8	1	12	4	1	7N7	6	37	42	8	1	12	4	1
6SR7	6	38	46	8	7	1	2	1	7AD7	6	37	35	8	1	12	6	1	7Q7	6	37	35	8	1	12	4	1
			68 68	8 8	7 7	1 1	4 5	1 1										7R7	6	37	35	8	1	12	6	1
6SS7	6	38	46	7	2	1	4	1												72 72	8 8	1 1	12 12	3 4	1 1	
6ST7	6	38	52 72	8 8	7 7	1 1	2 4	1 1										7S7	6	37	38	8	1	12	6	1
6SU7	6	38	72 43 43	8 8 8	7 7 7	1 12 12	5 1 4	1 1 1												52	8	1	12	4	1	

*Normal Shorts refer to position of "D" Switch.

6N8-7S7

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
7T7	6	37	32	8	1	12	6	1	8CU8	8	39	32	5	4	1	7	1	8MU8	8	11	42					1
7Y7	6	37	32	8	1	12	6	1				33	5	4	6	8	1				60					2
7W7	6	37	31	8	1	4	6	1	8CW5	8	23	58					1	8R-HP1	8	39	33	4	5	12	3	1
7X6	6	37	35	8	1	12	3	1	8CX8	8	12	45					1				39	4	5	12	1	1
			35	8	1	12	6	1				67					2	8R-LP1	8	39	35	4	5	12	1	1
7X7	6	37	43	8	1	12	3	1	8CY5	8	1	54					1				32	4	5	12	3	1
			36	8	1	12	5	1	8CY7	8	39	31	5	4	2	3	1	8SN7	8	25	78					1
			35	8	1	12	6	1				45	5	4	2	7	1				78					2
7Y4	6	37	45	8	1	12	3	1	8D8	6	39	41	5	4	2	9	1	8U9	8	42	28	5	6	12	3	1
			45	8	1	12	6	1	8DE7	8	20	81					1				32	5	6	12	10	1
7Z4	6	37	50	8	1	12	3	1				90					2	8X9	8	42	30	5	6	12	3	1
			50	8	1	12	6	1	8DX8	8	39	26	4	5	12	8	1				30	5	6	12	10	1
8A8	8	11	66					1				26	4	5	12	1	1	9A8	9	11	66					1
8AC9	8	36	28	1	12	3	9	1	8EB8	8	12	35					1				55					2
			45	1	12	3	2	1				99					2	9AB4	9	2	83					1
8AC10	8	36	35	1	12	2	3	1	8EM5	8	16	53					1	9AH9	9	36	37	1	12	5	2	1
			32	1	12	12	7	1	8ET7	8	39	30	5	4	12	7	1				30	1	12	5	6	1
			32	1	12	12	11	1				70	5	4	12	2	1	9AK8	9	16	90					1
8AL9	8	36	28	1	12	12	5	1				70	5	4	12	3	1				63					2
			28	1	12	12	11	1	8FQ7	8	8	68					1	9AK10	9	36	32	1	12	12	7	1
8AR11	8	36	28	1	12	12	5	1				68					2				32	1	12	12	9	1
			28	1	12	12	10	1	8GJ7	8	22	62					1				32	1	12	12	11	1
8AU8	8	12	56					1				78					2	9AM10	9	36	34	1	12	12	7	1
			72					2	8GM6	8	1	64					1				34	1	12	12	9	1
8AV11	8	36	30	1	12	12	7	1	8GN8	8	12	36					1				34	1	12	12	11	1
			30	1	12	12	9	1				98					2	9AQ8	9	8	70					1
			30	1	12	12	11	1	8GU7	8	8	56					1				70					2
8AW8	8	12	44					1				56					2	9AU7	9	8	75					1
			78					2	8GX7	8	22	76					1				75					2
8B8	8	39	33	4	5	12	3	1				73					2	9BJ11	9	36	28	1	12	12	6	1
			39	4	5	12	1	1	8HA6	8	9	23					1				28	1	12	12	11	1
8B10	8	36	34	1	12	12	3	1	8HG8	8	39	25	4	5	3	2	1	9BR7	9	39	32	5	4	9	2	1
			34	1	12	12	5	1				25	4	5	1	6	2				37	5	4	9	6	1
			34	1	12	12	8	1	8JE8	8	12	56					1				37	5	4	9	7	1
			34	1	12	12	10	1				78					2	9BR8	9	14	72					1
8BA8	8	12	53					1	8JK8	8	8	54					1				55					2
			59					2				55					2	9CG&A	9	14	73					1
8BA11	8	36	29	1	12	12	4	1	8JL8	8	12	40					1				57					2
			37	1	12	12	9	1				70					2	9CL8	9	14	69					1
8BH8	8	12	59					1	8JT8	8	12	20					1				51					2
			54					2				*99					2	9DZ8	9	39	27	4	5	8	3	1
8BM11	8	36	30	1	12	12	6	1				*Tube good if reads 60 or more.									30	4	5	2	1	1
			30	1	12	12	11	1	8JU8A	8	39	*32	4	5	2	1	1	9EA8	9	11	71					1
8BN8	8	39	35	5	4	12	8	1				**32	4	5	8	7	1				56					2
			35	5	4	12	1	1				*Normally shows short position 8.						9ED4◆	9	44	*52	4	5	12	8	1
8BN11	8	36	29	1	12	12	3	1				**Normally shows short position 2.														
			29	1	12	12	7	1	8JV8	8	12	55					1	9GH8A	9	11	68					1
8BQ5	8	23	68					1				85					2				56					2
8BQ7	8	8	54					1	8K11	8	36	38	1	12	12	7	1	9GV8	9	39	25	4	5	12	9	1
			54					2				38	1	12	12	9	1				25	4	5	12	2	1
8BQ11	8	36	28	1	12	12	5	1				38	1	12	12	11	1	9HS6	9	1	66					1
			28	1	12	12	10	1	8KA8	8	39	26	4	5	12	6	1	9J6	9	2	60					1
8BU11	8	36	28	1	12	12	8	1				33	4	5	12	2	1				60					2
			28	1	12	12	4	1	8KR8	8	12	22					1	9JW8	9	11	80					1
			28	1	12	12	6	1				59					2				85					2
8CB11	8	36	28	1	12	12	5	1	8KS8	8	12	33					1	9KC6	9	39	25	4	5	12	2	1
			28	1	12	12	10	1				84					2				83	4	5	12	9	1
8CG7	8	8	76					1	8KT8	8	12	67					1	9KG6◆	9	44	*26	4	5	1	8	1
			76					2				91					2				*Normally shows short position 2-3-6-7.					
8CH8	8	39	33	5	4	12	7	1	8LC8	6	39	24	4	5	3	6	1	9KV8	9	12	22					1
			36	5	4	12	8	1				24	4	5	6	2	1				82					2
8CL8	8	14	69					1	8LE8	8	39	29	4	5	12	9	1	9KX6	9	9	16					1
			51					2	8LS6	8	9	44					1	9KZ8	9	39	26	4	5	12	2	1
8CM7	8	19	80					1	8LT8	8	39	27	4	5	7	9	1				26	4	5	12	9	1
			94					2				32	4	5	1	6	1	9LA6	9	9	21					1
8CN7	8	18	94					1				32	4	5	1	8	1	9M-HH3	9	2	56					1
			60					2	8MD8	8	44	35	4	5	12	6	1									

*Normal Shorts refer to position of "D" Switch.

◆Use TC-80 Adapter

7T7-9ML8

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
9MN8	9	36	33 33 33	1 1 1	12 12 12	7 7 7	8 10 11	1 1 1	10JY8	10	12	36 61 22					1 2 1	12A4	12	40	32	5	4	3	7	1
9M-P12	9	41	38	3	4	2	1	1	10KR8	10	12	59					2	12A6	12	29	92					1
9R-A6	9	40	34	4	5	9	7	1	10KU8	10	39	22	4	5	12	7	1	12A8	12	38	45	7	2	12	5	1
9R-AL1	9	39	33	4	5	2	3	1				60	4	5	12	2	1	12AB5	12	16	67					1
9R-HR2	9	11	68 56					1 2	10LB8	10	12	60 21	4	5	12	3	1	12AC6	12	41	42	4	3	12	1	1
9U8	9	11	79 55					1 2	10LD6	10	9	51					1	12AC10	12	36	32	1	12	12	7	1
9V9	9	42	31 30	5 5	6 6	12 12	3 8	1 1	10LD12	10	17	90 63					1 2	12AD6	12	41	35	4	3	12	1	1
9X8	9	12	73 61					1 2	10LE8	10	39	29	4	5	12	8	1	12AD7	12	8	85					2
10AF11	10	36	31	1	12	12	11	1	10LW8	10	12	25 92					1 2	12AE6	12	41	52	4	3	12	1	1
			31	1	12	12	6	1	10LY8	10	12	21 *99					1 2	12AE7	12	39	32	5	4	9	2	1
10AL11	10	36	35 31	1 1	12 12	12 12	3 3	1 1				*Tube good if it reads 28 or more.					1	12AE10	12	36	30	1	12	12	8	1
10BQ5	10	23	27 68	1	12	12	8	1	10LZ8	10	12	54 *99					1 2	12AF3	12	15	12					1
10C8	10	13	59 73					1 2				*Tube good if it reads 40 or more.						12AF6	12	41	37	4	3	12	1	1
10CW5	10	23	58					1	10T10	10	36	28 25	1	12	12	3	1	12AF11	12	36	31	1	12	12	11	1
10D2	19	41	33 33	3 3	4 4	12 12	2 7	1 1	10Z10	10	36	30 95	1	12	12	11 6	1	12AG6	12	41	35	4	3	12	1	1
10DE7	10	20	81 90					1 2	11AF9	10	42	27 27	5	6	7	1	1	12AH7	12	38	48 48	8 8	7 7	12 12	1 5	1
10DR7	10	39	32 41	5 5	4 4	2 2	3 7	1 1	11AR11	12	36	28 28	1	12	12	5 10	1	12AJ6	12	41	40 66 66	4 4 4	3 3 3	12 12 12	1 5 6	1
10DX8	10	39	26	4	5	12	8	1	11BM8	12	39	33	5	4	12	3	1	12AJ7	12	39	32 35	5 5	4 4	12 12	2 9	1
			26	4	5	12	1	1				39	5	4	12	1	1	12AL5	12	41	33	3	4	12	2	1
10/E/312	25	29	47					1	11BN11	10	36	29	1	12	12	3	1	12AL8	12	39	33	3	4	12	7	1
10/E/349	6	29	79					1				29	1	12	12	7	1				34	5	4	12	3	1
10/E/558	6	38	52	7	2	12	10	1	11BQ11	10	36	28	1	12	12	5	1	12AL11	12	36	52	5	4	12	8	1
10/E/11448	6	29	93					1				28	1	12	12	10	1				31	1	12	12	3	1
10/E/11533	6	29	63					1	11BT11	10	36	27	1	12	6	11	1				27	1	12	12	8	1
10/E/11581	6	38	40	7	2	12	10	1				30	1	12	8	5	1	12AQ5	12	3	77					1
10EB8	10	12	35 99					1 2				26 54	1	12	8	3	1	12AS5	12	4	55					1
10EG7	10	38	32	8	7	12	1	1	11CA11	10	36	35	1	12	8	3	1	12AT6	12	6	85 78					2
			45	8	7	12	4	1				33	1	12	8	6	1	12AT7	12	8	74					1
10EM7	10	38	32 45	8 8	7 7	12 12	1 4	1 1	11CF11	10	36	33 34 34 32	1 1 1 1	12 12 12	7 7 8	8 11 5	1 1 1	12AU5	12	28	74 71					2
10EW7	10	20	87 92					1 2				34 34 32	1 1 1	12 12 12	7 8 8	8 11 5	1 1 1	12AU6	12	1	82					1
10FD7	10	39	25	4	5	2	3	1	11CH11	10	36	31	1	12	6	11	1	12AU7	12	8	75					1
			32	4	5	2	7	1				34	1	12	8	5	1				75					2
10FR7	10	39	24	4	5	2	3	1				30	1	12	8	3	1	12AU8	12	12	56					1
			32	4	5	2	7	1	11CY7	12	39	31	5	4	2	3	1	12AV5	12	28	72					2
10GF7	10	44	27	4	5	12	2	1				45	5	4	2	7	1	12AV6	12	6	62					1
			38	4	5	12	9	1	11DS5	10	3	76					1				91					1
10GH8	10	11	68 56					1 6	11FY7	12	36	25	1	12	12	3	1	12AV7	12	8	78					2
10GK6	10	9	40					1				42	1	12	12	10	1	12AW6	12	1	55					1
10GM8	10	39	33	5	4	12	2	1	11HM7	10	39	*29	4	5	6	2	1	12AW8	12	12	78					2
			33	5	4	12	7	1				*Normally shows short position 3-9.									55					1
10GN8	10	12	36					1	11JE8	10	12	56					1	12AX3	12	36	44					2
			98					2				78					2	12AX4	12	34	78					1
10GV8	10	39	25	4	5	12	8	1	11KV8	10	12	22					1	12AX7	12	8	13					1
			25	4	5	12	2	1				82					2				*85					1
10HA6	10	9	23					1	11LQ8	12	12	31					1				*85					2
10HF8	10	12	27 80					1 2				50					2				*Tube good if it reads 22 or more.					
10JAS	10	36	*33	1	12	8	2	1	11LT8	12	39	27	4	5	7	9	1	12AY3	12	44	27	5	4	7	2	1
			*Normally shows short position 3-4-10-11.									32	4	5	1	6	1	12AY3A	12	44	27	5	4	7	2	1
10JA8	10	39	25	4	5	12	7	1	11LY6	10	9	46					1	12AY7	12	8	93					1
			95	4	5	12	3	1	11MS8	10	39	25	4	5	12	8	1				93					2
10JT8	10	12	20 *99					1 2	11R3	10	39	33	4	5	12	9	1	12AZ7	12	8	73					1
									11Y9	12	42	27	5	4	2	9	1	12B4	12	40	73					2
												27	5	6	12	1	1	12B7	12	37	35	5	4	3	7	1
												27	5	6	12	8	1	12BA6	12	1	45	8	1	12	6	1

*Tube good if it reads 60 or more.

*Normal Shorts refer to position of "D" Switch

◆Use TC-80 Adapter

9MN8-12BA6

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
12BA7	12	39	33	5	4	12	2	1	12DA6	12	9	80					1	12EK6	12	41	31	4	3	12	1	1	
12BA11	12	36	28	1	12	12	4	1	12DB5	12	16	30					1	12EL6	12	41	38	4	3	12	1	1	
♦12B-814	12	44	*33	4	5	1	2	1	12DE8	12	39	36	5	4	12	1	1				68	4	3	12	5	1	
			*Normally shows short position 3-6-7-8.																								
12BC32	12	6	91					1	12DF5	12	39	52	5	4	9	1	1		12EM6	12	39	34	5	4	12	1	1
			78					2				52	5	4	9	1	1			90	5	4	12	9	1		
12B06	12	1	85					1	12DF7	12	8	*85					1		12EN6	12	29	36					1
12BE3	12	36	26	1	12	4	10	1	*Tube good if it reads 22 or more.										12EQ7	12	39	34	5	4	12	2	1
12BE6	12	1	91					1	12DJ8	12	39	31	5	4	12	2	1			71	5	4	12	8	1	1	
12BF6	12	6	85					1				31	5	4	12	7	1		12EZ6	12	41	32	4	3	12	1	1
			80					2	12DK5	12	9	42					1		12F5	12	38	40	7	2	12	10	1
12BF11	12	36	25	1	12	12	3	1	12DK6	12	1	61					1		12F8	12	39	40	5	4	12	8	1
			25	1	12	12	8	1	12DK7	12	39	33	5	4	8	1	1			62	5	4	12	1	1	1	
12BH7	12	8	56					1				80	5	4	8	6	1		12F31	12	1	78					1
			56					2				80	5	4	8	9	1		12FK6	12	41	40	4	3	12	1	1
12BK5	12	10	53					1	12DL8	12	39	35	5	4	12	3	1			65	4	3	12	5	1	1	
12BK6	12	6	86					1				65	5	4	12	9	1			65	4	3	12	6	1	1	
			70					2				65	5	4	12	1	1		12FM6	12	41	35	4	3	12	1	1
12BL6	12	41	35	4	3	12	1	1	12DM4	12	34	11					1			68	4	3	12	5	1	1	
12BM5	12	3	77					1	12DM5	12	4	57					1			68	4	3	12	6	1	1	
12BN6	12	7	75					1	12DM7	12	8	*85					1		12FQ7	12	8	68					1
12BQ6	12	27	69					1	*Tube good if it reads 22 or more.											68						2	
12BR3	12	15	10					1	12DN6	12	26	47					1		12FQ8	12	39	39	5	4	12	2	1
12BR7	12	39	32	5	4	9	2	1												39	5	4	12	7	1	1	
			36	5	4	9	6	1	12DQ4	12	34	11					1		12FR8	12	39	*25	4	5	12	3	1
			36	5	4	9	7	1	12DQ6	12	27	65					1				*37	4	5	12	1	1	
12BS3	12	44	27	4	5	2	7	1	12DQ6B	12	27	62					1				*62	4	5	12	8	1	
12BT3	12	36	27	1	12	4	10	1	12DQ7	12	9	36					1		*Normally shows short position 5.								
12BT6	12	6	85					1	12DS7	12	39	34	5	4	12	3	1		12FS5	12	1	99					1
			78					2				*85	5	4	12	1	1										
12BU6	12	6	85					1	*Tube good if it reads 20 or more.										12FT6	12	41	52	4	3	12	1	1
			80					2	12DT5	12	16	45					1				66	4	3	12	5	1	
12BV7	12	9	39					1	12DT6	12	1	91					1				66	4	3	12	6	1	
12BV11	12	36	30	1	12	12	6	1	12DT7	12	8	*85					1		12FY7	12	8	42					1
			30	1	12	12	7	1				*85					2				42					2	
12BW4	12	39	50	5	4	12	1	1	*Tube good if it reads 22 or more.										12FX5	12	4	68					1
			50	5	4	12	7	1	12DT8	12	8	71					1		12FX8	12	39	32	5	4	12	2	1
12BX6	12	9	76					1				71					2				28	5	4	12	6	1	
12BX7	12	25	55					1											12FY8	12	39	30	4	5	12	3	1
			55					2													39	4	5	12	1	1	
12BY3	12	15	10					1	12DU7	12	39	31	5	4	12	1	1		12G4	12	41	41	4	3	1	6	1
12BY7	12	9	42					1				77	5	4	12	7	1		12G11	12	36	33	1	12	12	3	1
12BZ6	12	1	61					1				77	5	4	12	9	1				31	1	12	12	8	1	
12BZ7	12	8	95					1	12DV7	12	39	49	5	4	9	7	1		12GA6	12	41	36	4	3	12	1	1
			95					2				78	5	4	9	2	1		12G-B3A	12	27	65					1
12C5	12	4	44					1				78	5	4	9	3	1		12G-B7	12	27	61					1
12C8	12	38	55	7	2	12	10	1	12DV8	12	39	35	5	4	12	3	1		12GC5	12	16	26					1
			65	7	2	12	4	1				58	5	4	12	9	1		12GC6	12	26	52					1
			65	7	2	12	5	1				58	5	4	12	1	1		12GE5	12	36	*24	1	12	11	3	1
12C8Y	12	38	55	7	2	12	10	1	12DW4A	12	44	27	4	5	2	7	1		*Normally shows short position 4-10.								
			65	7	2	12	4	1	12DW5	12	16	30					1		12GJ5	12	35	65					1
			65	7	2	12	5	1	12DW7	12	8	75					1		12G-K17	12	34	12					1
12CA5	12	4	55					1				*90					2		12GN7	12	9	21					1
12CK3	12	44	25	4	5	7	2	1	*Tube good if it reads 22 or more.										12GT5	12	35	63					1
12CL3	12	44	27	4	5	2	7	1	12DW8	12	39	32	5	4	12	2	1		12GT5A	12	35	63					1
12CM6	12	16	64					1				32	5	4	12	7	1		12GV5	12	36	*26	1	12	5	9	1
12CN5	12	41	33	4	3	2	5	1				44	5	4	12	9	1		*Normally shows short position 3-4-7-10-11.								
12CR6	12	41	39	4	3	12	7	1	12DY8	12	39	30	5	4	12	1	1		12GW6	12	27	62					1
			61	4	3	12	2	1				35	5	4	12	9	1		12H4	12	40	44	4	3	2	6	1
12CS5	12	16	30					1	12DZ6	12	41	33	4	3	12	1	1		12H6	12	38	48	7	2	12	3	1
12CS6	12	1	94					1				27	4	5	8	3	1				48	7	2	12	5	1	
12CT3	12	39	32	4	5	6	2	1	12DZ8	12	39	30	4	5	2	1	1		12H31	12	1	91					1
12CT8	12	13	57					1	12E5	12	25	93					1		12HB25♦	12	44	*33	4	5	1	2	1
			63																								

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
12HU8	12	39	29	4	5	12	2	1	12SR7	12	38	46	8	7	12	2	1	14BL11	14	36	29	1	12	12	3	1
12J5	12	29	93	4	5	12	6	1				68	8	7	12	4	1				31	1	12	12	5	1
12J7	12	38	50	7	2	12	10	1	12SS7	12	30	97	8	7	12	5	1				29	1	12	12	11	1
12J8	12	39	30	5	4	12	1	1	12SW7	12	38	52	8	7	12	2	1	14BQ11	14	36	28	1	12	12	5	1
			35	5	4	12	8	1				70	8	7	12	4	1				28	1	12	12	10	1
			35	5	4	12	9	1				70	8	7	12	5	1	14BR11	14	36	30	1	12	12	2	1
12JB6	12	35	62					1	12SX7	12	25	78					1				31	1	12	12	8	1
12JB6A	12	35	62					1				78				2	14C5	12	37	38	8	1	12	6	1	
12JF5	12	36	*32	1	12	11	3	1	12SY7	12	38	39	7	2	12	5	1	14C7	12	37	37	8	1	12	6	1
*Normally shows short position 4-10									12T10	12	36	28	1	12	12	3	1	14E6	12	37	40	8	1	4	3	1
12JM6	12	36	26	1	12	4	5	1				25	1	12	12	8	1				69	8	1	4	5	1
12JN6	12	36	27	1	12	4	11	1	12U7	12	39	40	5	4	9	2	1				69	8	1	4	6	1
12JN8	12	14	67					1				40	5	4	9	7	1	14E7	12	37	47	8	1	12	6	1
			53					2	12V6	12	29	79					1				68	8	1	12	3	1
12JQ6	12	39	*34	4	5	8	7	1	12W6	12	29	51					1				68	8	1	12	4	1
			*57	4	5	8	6	1	12X4	12	41	44	4	3	12	1	1	14F7	12	37	45	8	1	12	4	1
*May show short position 2-3.												44	4	3	12	6	1				45	8	1	12	5	1
12JS6	12	36	*29	1	12	9	5	1	13CM5	12	27	57					1	14F8	12	37	30	7	2	12	1	1
*Normally shows short position 3-4-10-11									13CW4	14	43	*87	10	12	12	2	1				30	7	2	12	8	1
12JT6	12	35	65					1	*For grid emission turn D switch to position 4.									14GT8	14	39	52	5	4	12	8	1
12JTG6A	12	35	65					1	13D1	25	25	78					1				35	5	4	12	2	1
12JZ8	12	36	29	1	12	6	7	1				78				2	14GW8	14	39	25	4	5	2	8	1	
			40	1	12	6	10	1	13DE7	12	20	81					1				35	4	5	7	1	1
12JF5	12	36	*32	1	12	11	3	1				90				2										
*Normally shows short position 4-10									13DF7	12	8	*85					1	14H7	12	37	35	8	1	12	6	1
12K5	12	41	35	4	3	5	6	1				*85				2	14J7	12	37	35	8	1	12	6	1	
12K7	12	38	52	7	2	12	10	1	*Tube good if it reads 22 or more.												50	8	1	12	4	1
12K8	12	38	35	7	2	12	5	1	13DR7	12	39	32	5	4	2	3	1	14JG8	14	39	32	4	5	12	8	1
12KA8	12	39	26	4	5	12	6	1				41	5	4	2	7	1				27	4	5	12	2	1
									13EM7	12	38	32	8	7	12	1	1									
12KL8	12	39	33	4	5	12	2	1				45	8	7	12	4	1	14N7	12	37	42	8	1	12	4	1
			70	4	5	12	8	1	13FD7	12	39	25	4	5	2	3	1				42	8	1	12	5	1
12L6	12	29	47					1				32	4	5	2	7	1	14Q7	12	37	35	8	1	12	4	1
12MD8	12	44	35	4	5	12	6	1	13FG7	12	14	68					1	14R7	12	37	35	8	1	12	6	1
			35	4	5	12	8	1				56				2					72	8	1	12	3	1
			35	4	5	12	9	1	13FM7	14	36	25	1	12	3	8	1	14S7	12	37	72	8	1	12	4	1
12MX8	12	44	27	4	5	12	2	1				36	1	12	3	10	1				38	8	1	12	6	1
			39	4	5	12	9	1	13FR7	12	39	24	4	5	2	3	1				52	8	1	12	4	1
12Q7	12	38	40	7	2	12	10	1				32	4	5	2	7	1	14V7	12	37	32	8	1	12	6	1
									13GB5	12	44	*25	4	5	2	1	1	14W7	12	37	31	8	1	4	6	1
			63	7	2	12	4	1	*Normally shows short position 3-6-7-8.									14X7	12	37	43	8	1	12	3	1
12R5	12	41	39	4	3	2	5	1	13GF7	12	44	27	4	5	12	2	1				36	8	1	12	5	1
12R-K19	12	15	10					1				38	4	5	12	9	1				35	8	1	12	6	1
12R-LL3	12	8	55					1	13GF7A	12	44	27	4	5	12	2	1	14Y4	12	37	45	8	1	12	3	1
												38	4	5	12	9	1				45	8	1	12	6	1
12R-LL5	12	8	68					2	13J10	12	36	96	1	12	12	6	1	15A6	15	39	30	5	4	12	2	1
			68					2				28	1	12	12	11	1	15A8	15	38	36	7	2	12	4	1
12S8	12	38	45	8	7	5	10	1	13JT8	12	12	20					1				40	7	2	12	3	1
			62	8	7	5	1	1				*99					2	15AB9	15	42	79	5	6	10	2	1
									*Tube good if it reads 60 or more.												79	5	6	4	8	1
			63	8	7	2	3	1	13JZ8	12	36	29	1	12	6	7	1	15AF11	15	36	31	1	12	12	11	1
12SA7	12	38	37	7	2	12	5	1				40	1	12	6	10	1				31	1	12	12	6	1
12SC7	12	38	48	8	7	12	3	1	13SJ7	12	30	83					1				35	1	12	12	3	1
			48	8	7	12	4	1	13V10	12	36	33	1	12	12	3	1	15BD11	15	36	26	1	12	12	11	1
12SF5	12	38	41	8	7	12	3	1				33	1	12	12	8	1				31	1	12	12	3	1
12SF7	12	38	46	8	7	12	2	1	13Z10	12	36	30	1	12	12	11	1	15BD11A	15	36	31	1	12	12	6	1
			69	8	7	12	5	1				95	1	12	12	6	1				26	1	12	12	11	1
12SG7	12	30	77					1	14A4	12	37	41	8	1	12	6	1				31	1	12	12	3	1
12SH7	12	30	77					1	14A5	12	37	34	8	1	12	6	1				31	1	12	12	6	1
12SJ7	21	30	83					1	14A7	12	37	45	8	1	12	6	1	15CW5	15	23	58					1
12SK7	12	30	84					1	14AF7	12	37	41	8	1	12	4	1	15DQ8	15	39	26	4	5	12	1	1
12SL7	12	25	*85					1				41</														

*Normal Shorts refer to position of "D

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.		
15FY7	15	36	25	1	12	12	3	1	17BH3	17	44	27	5	4	7	2	1	17KW6♦	17	44	30	4	5	1	8	1		
			42	1	12	12	10	1	17BH3A	17	44	27	5	4	7	2	1	17L6	17	29	47					1		
15HA6	15	9	23					1	17BJ6	17	1	81					1	17LD8	17	44	25	4	5	12	2	1		
15HB6	15	9	20					1	17BQ6	17	27	69					1				33	4	5	12	9	1		
15KY8	15	44	27	4	5	12	2	1	17BR3	17	15	10					1	17RS	17	4	50					1		
			39	4	5	12	9	1	17BS3	17	44	27	4	5	2	7	1	17R-HH2	17	8	65					1		
15KY8A	15	44	27	4	5	12	2	1	17BW3	17	36	28	1	12	4	10	1				65					2		
			39	4	5	12	9	1	17BZ3	17	36	30	1	12	4	10	1	17R-K19	17	15	10					1		
15LE8	15	39	29	4	5	12	9	1	17C5	17	4	44					1	17W6	17	29	52					1		
15MF8	15	36	35	1	12	6	7	1	17C8	17	39	33	5	4	12	2	1	17X10	17	36	98	1	12	12	6	1		
			34	1	12	6	10	1				65	5	4	12	7	1				28	1	12	12	11	1		
15MX8	15	44	27	4	5	12	2	1				65	5	4	12	8	1	17Y9	17	42	27	5	6	12	1	1		
			39	4	5	12	9	1	17C9	17	39	28	5	4	6	1	1				27	5	6	12	8	1		
16A5	16	23	68					1				28	5	4	10	7	1	17Z3*	17	39	33	4	5	2	9	1		
16A8	16	39	33	5	4	12	3	1	17CA5	17	4	55					1	*If No Test use alternate settings below.										
			39	5	4	12	1	1	17CK3	17	44	25	4	5	7	2	1				17	40	33	4	5	2	3	1
16AK9	7	36	33	6	12	6	10	1	17CL3	17	44	27	4	5	2	7	1	18A5	18	28	69					1		
			35	6	12	6	3	1	17CQ4	17	34	11					1	18AJ10	18	36	32	1	12	4	3	1		
			31	6	12	6	8	1	17CT3	17	39	32	4	5	6	2	1				33	1	12	4	8	1		
16AQ3*	16	40	30	5	4	7	3	1	17CU5	17	4	47					1	18AK5	18	1	63					1		
*If no test, use alternate settings.									17D4	17	34	11					1	18AQ5	18	3	77					1		
16AQ3	16	40	30	5	4	3	7	1	17DE4	17	34	13					1	18C51	18	39	29	9	1	12	3	1		
16BQ11	16	36	28	1	12	12	5	1	17DM4	17	34	11					1				29	9	1	12	7	1		
			28	1	12	12	10	1	17DQ4	17	34	11					1	18D28	18	39	27	4	5	8	3	1		
16BX11	16	36	32	1	12	12	2	1	17DQ6	17	27	65					1				30	4	5	2	1	1		
			31	1	12	12	5	1	17DQ6B	17	27	62					1	18FW6	18	1	79					1		
16C-B28	16	36	*28	1	12	5	9	1	17DW4A	17	44	27	4	5	2	7	1	18FX6	18	1	92					1		
*Normally shows short position 3-4-10-11.									17EW8	17	8	65					2	18FY6	18	6	84					1		
16CL8	16	14	69					1				65					2				81					2		
			51					2	17FY7	17	36	25	1	12	12	3	1	18GB5♦	18	44	*25	4	5	2	1	1		
16GK6	16	9	40					1	17GE5	17	36	*24	1	12	12	10	1	*Normally shows short position 3-6-7-8.										
16GY5	16	36	*25	1	12	5	9	1	*Normally shows short position 4-10.									18GD6	18	1	80					1		
*Normally shows short position 1-3-4-7-10.									17GJ5	17	35	65					1	18GE6	18	6	78					1		
16HB5	16	36	*25	1	12	11	3	1	17GJ5A	17	35	65					1	18GV5	18	36	*26	1	12	5	9	1		
*Normally shows short position 4-10.									17GT5	17	35	63					1	*Normally shows short position 3-4-7-10-11.										
16K11	16	36	38	1	12	12	7	1	17GT5A	17	35	63					1	18GV8	18	39	25	4	5	12	9	1		
			38	1	12	12	9	1	17GV5	17	36	*26	1	12	9	5	1				25	4	5	12	2	1		
			38	1	12	12	11	1	*Normally shows short position 3-4-7-10-11.									18HB8	18	39	36	5	4	12	9	1		
16KA6	16	36	*30	1	12	9	5	1	17GW6	17	27	62					1				33	5	4	12	1	1		
*May show short position 3-4-7-11.									17GY5	17	36	*25	1	12	5	9	1	18J6	18	6	60					1		
16LD6	16	9	51					1	*Normally shows short position 3-4-7-10-11.												60					2		
16LU8	16	36	27	1	12	6	7	1	17H3	17	15	13					1	18R-AL1	18	39	33	4	5	2	3	1		
			27	1	12	6	10	1	♦17H-B25	17	44	*33	4	5	1	2	1	19A3	19	41	32	3	4	6	5	1		
16MY8	16	36	27	1	12	6	7	1	*Normally shows short position 3-6-7-8.									19AJ8	6	39	85	5	4	12	1	1		
									17HC8	17	39	36	5	4	12	3	1				38	5	4	12	9	1		
16Y9	16	42	27	1	12	6	10	1				38	5	4	12	1	1	19AQ5	19	3	77					1		
			27	5	6	12	1	1	17HG8	17	39	25	4	5	3	2	1	19AU4	19	34	10					1		
17A8	17	11	66					1				25	4	5	1	6	1	19BG6	19	26	66					1		
			55					2	17JB6	17	35	62					1	19BX6	19	9	76					1		
17AB9	17	42	79	5	6	10	2	1	17JB6A	17	35	62					1	19BY7	19	9	62					1		
			79	5	6	4	8	1	17JF6	17	44	*28	4	5	2	6	1	19C8	19	17	94					1		
17AB10	17	36	29	1	12	12	11	1	*Normally shows short position 1-7.												62					2		
			95	1	12	12	6	1	17JG6	17	35	56					1	19CG3	19	36	30	1	12	4	10	1		
17AF3	17	15	12					1	17JG6A	17	35	56					1	19CL8-A	19	14	74					1		
17AV5	17	28	62					1	17JK8	17	8	54					1				53					2		
17AX3	17	36	30	1	12	10	4	1				55					2	19D8	19	39	32	5	4	12	2	1		
17AX4	17	34	13					1	17JM6	17	36	26	1	12	4	5	1				35	5	4	12	9	1		
17AY3	17	44	27	5	4	7	2	1	17JN6	17	36	27	1	12	4	11	1	19DE3●	19	27	47					1		
17AY3B	17	44	27	5	4	7	2	1	17JQ6	17	39	*34	4	5	8	7	1	19DE7	19	20	81					1		
♦17B-B14	17	44	*33	4	5	1	2	1				*57	4	5	8	6	1				90					2		
*Normally shows short position 3-6-7-8.									*May show short position 2-3.									19DK3	19	44	31	4	5	2	7	1		
17BD11	17	36	26	1	12	12	11	1	17JR6	17	35	50					1	19DN6	19	26	47					1		
			31	1	12	12	3	1	17JS6	17	36	*29	1	12	9	5	1	19DQ3	19	36	30	1	12	4	10	1		
			31	1	12	12	6	1	*Normally shows short position 3-4-10-11.									19EA8	19	11	71					1		
17BE3	17	36	26	1	12	4	10	1	17JT6	17	35	65					1				56					2		
17BF11	17	36	25	1	12	12	3																					

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
19HR6	19	1	71					1	21KQ6♦	22	44	*29	4	5	1	8	1	250T5	25	16	45					1
19HS6	19	1	66					1	*Normally shows short position 2-3-6-7.									25E5	25	27	58					1
19HV8	19	14	64					1	21LG6	22	36	*32	1	12	9	5	1	25EC6	25	26	53					1
*Tube good if it reads 40 or more.									*May show short position 2-3-4-7-10-11.									25EH5	25	4	57					1
			*99					2	21LR8	22	44	31	4	5	12	2	1	25F5	25	4	54					1
19J6	19	2	60					1				31	4	5	12	9	1	25F5A	25	4	54					1
			60					2	21LU8	22	36	27	1	12	6	7	1	25FY8	25	39	30	4	5	12	3	1
19JC6	19	9	65					1				27	1	12	6	10	1				39	4	5	12	1	1
19JN8	19	14	67					1	21MY8	22	36	27	1	12	6	7	1	25G-B6	25	27	64					1
			53					2				27	1	12	6	10	1	25GE5	25	36	*24	1	12	11	3	1
♦19KF6	19	44	33	4	5	7	1	1	22AL3*	22	40	30	5	4	7	3	1	*Normally shows short position 4-10.								
19KG8	19	39	21	4	5	12	9	1	*If no test, use alternate settings.									25HX5♦	25	44	*30	4	5	7	1	1
			21	4	5	12	2	1	22AL3	22	40	30	5	4	3	7	1	*Normally shows short position 2-3.								
19MR9	19	1	73					1	22BH3	22	44	27	5	4	7	2	1	25JQ6	25	39	*34	4	5	8	7	1
19Q9	19	39	25	4	5	12	1	1	22BH3A	22	44	27	5	4	7	2	1				*57	4	5	8	6	1
			25	4	5	12	8	1	22BW3	22	36	28	1	12	4	10	1	25JZ8	25	36	29	1	12	6	7	1
19T8	19	17	90					1	22DE4	22	34	13					1				40	1	12	6	10	1
			63					2	22JF6	22	44	*26	4	5	2	6	1	25L6	25	29	47					1
19U3	19	39	29	5	4	12	9	1	*Normally shows short position 1-7.									25M-P20	25	1	43					1
19V8	19	39	40	5	4	12	6	1	22JG6	22	35	56					1	25R-K19	25	15	10					1
			92					2	22JG6A	22	35	56					1	25SN7	25	25	78					1
19FX5	19	4	68					1	22JR6	22	35	50					1				78				2	
19GQ7	19	39	24	4	5	3	2	1	22JU6	2	35	55					1	25U4	25	34	11					1
			24	4	5	3	6	1	22KM6	22	35	53					1	25W4	25	34	11					1
			24	4	5	3	8	1	22KV6	22	44	30	4	5	1	2	1	25W6	25	29	51					1
19GY5	19	36	*25	1	12	5	9	1	23JS6	22	36	*29	1	12	9	5	1	25X6GT	25	38	34	7	2	12	3	1
*Normally shows short position 3-4-7-10-11.									*Normally shows short position 3-4-10-11.												34	7	2	12	5	1
			32	5	4	12	2	1	23JS6A	22	36	*29	1	12	9	5	1	25Z4G	25	38	33	7	2	12	5	1
			32	5	4	12	7	1	*Normally shows short position 3-4-10-11.									25Z6	25	38	34	7	2	12	3	1
			61	5	4	12	9	1	23MB6	22	36	*32	1	12	9	5	1				34	7	2	12	5	1
19W3	19	39	29	5	4	12	9	1	*Normally shows short position 3-4-10-11.									26A6	25	1	77					1
19X3	19	39	29	5	4	12	9	1	23Z9	22	36	30	1	12	6	10	1	26A7	25	38	29	7	6	12	1	1
19X8	19	12	73					1				39	1	12	6	3	1				29	7	6	12	3	1
			61					2				28	1	12	6	8	1	26AQ8	25	8	70					1
19Y3	19	39	29	4	5	12	9	1	24AX4	25	34	13					1				70				2	
20AQ3*	19	40	30	5	4	7	3	1	24BF11	25	36	25	1	12	12	3	1	26BK6	25	6	86					1
*If no test, use alternate settings.												25	1	12	12	8	1	26C6	25	6	85					1
20AQ3	19	40	30	5	4	3	7	1	24JE6A	25	35	59					1	26D6	25	1	93					1
20D1	9	41	33	3	4	12	2	1	24JZ8	25	36	29	1	12	6	7	1				82					2
			33	3	4	12	7	1				40	1	12	6	10	1	26DQ5	25	26	55					1
20EQ7	19	39	34	5	4	12	2	1	24LQ6	25	35	52					1	26E6	25	29	40					1
			71	5	4	12	8	1	24LZ6	24	35	53					1	26HU5	25	38	*28	7	8	1	5	1
20EW7	19	20	87					1	25A6	25	29	74					1	*Normally shows short position 2-6.								
			92					2	25AC5G	25	36	*32	1	12	11	3	1	26JG6	25	35	56					1
20EZ7	19	39	35	2	1	3	5	1	*Normally shows short position 4-10.									26LW6	25	38	*31	7	8	1	5	1
			35	2	1	3	8	1	25AU4	25	34	10					1	*Normally shows short position 2-6								
20LF6	20	36	*31	1	12	5	9	1	25AV5	25	28	62					1	26LX6♦	25	27	47					1
*May show short position 3-4-7-10-11.									25AX4	25	34	13					1	26Z5	25	39	36	5	4	9	1	1
21A6	22	39	*32	5	4	7	2	1	25B6	25	29	48					1				36	5	4	9	6	1
*Normally shows short position 1-6-9.									25B-814♦	25	44	*33	4	5	1	2	1	27GB5♦	25	44	*25	4	5	2	1	1
21AK6	22	1	82					1	*Normally shows short position 3-6-7-8									*Normally shows short position 3-6-7-8.								
21B6	22	39	*32	5	4	7	2	1	25BK5	25	10	53					1	27KG6♦	25	44	*26	4	5	1	8	1
*Normally shows short position 1-6-9.									25BQ6	25	27	69					1	*Normally shows short position 2-3-6-7								
21EX6	22	26	42					1	25BR3	25	15	10					1	27LF6	25	36	*31	1	12	5	8	1
21GY5	22	36	*25	1	12	5	9	1	25C5	25	4	44					1	*May show short position 3-4-7-10-11								
*Normally shows short position 3-4-7-10-11.									25C6	25	29	45					1	28D7	30	37	40	8	1	12	2	1
21HB5	22	36	*25	1	12	11	3	1	25CA5	25	4	55					1				40	8	1	12	7	1
*Normally shows short position 4-10.									25CQ6	25	26	53					1	28EC4	30	38	32	7	8	2	5	1
21HD5	22	36	*27	1	12	3	11	1	25CG3	25	36	30	1	12	4	10	1	28GB5♦	30	44	*25	4	5	2	1	1
*Normally shows short position 4-5-9-10.									25CG6	25	1	77					1	*Normally shows short position 3-6-7-8.								
21HJ5	22	36	*27	1	12	3	11	1	25CK3	25	44	30	4	5	7	2	1	28HA6	30	9	23					1
*Normally shows short position 4-5-9-10.									25CM3	25	44	30	4	5	2	7	1	28HD5	30	36	*27	1	12	3	11	1
21JS6	22	36	*29	1	12	9	5	1	25CT3	25	39	32	4	5	6	2	1	*Normally shows short position 4-5-9-10.								
*Normally shows short position 3-4-10-11.									25CU6	25	27	69					1	29GK6	30	9	40					1
21JV6	22	36	28	1	12	4	11	1	25D4	25	34	11					1									
21JZ6	22	36	*29	1	12	9	5	1	25DK3	25	44	31	4	5	2	7	1	29KQ6♦	30	44	*29	4	5	1	8	1
*Some tubes may show short position 3-4-10-11.									25DK4	25	41	26	3	4	6	5	1	*Normally shows short position 2-3-6-7.								
21KA6	22	36	*30	1	12	9	5	1	25DL3	25	44	29	4	5	7	2	1	29LE6♦	30	44	*30	4	5	8	1	1
*May show short position 3-4-7-11.									25DN6	25	26	47					1	*Normally shows short position 2-3-6-7.								
									25DQ6	25	27	65					1									

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
30A5	30	41	27	3	4	5	2	1	35EH5	35	4	57					1	50Z6G	50	38	35	7	2	12	3	1
30AE3*	30	40	30	5	4	7	3	1	35GL6	35	41	39	4	3	6	2	1	50Z7G	50	38	35	7	2	12	5	1
*If no test, use alternate settings.									35HB8	35	39	36	5	4	12	9	1				35	7	2	6	3	1
30AE3	30	40	30	5	4	3	7	1				33	5	4	12	1	1	53HK7	50	36	29	1	12	10	9	1
30AG11	30	36	28	1	12	12	8	1	35L6	35	29	54					1				29	1	12	10	2	1
			28	1	12	12	5	1	35LR6	35	36	*32	1	12	9	5	1	53KU	5	33	10					2
			33	1	12	12	10	1	*May show short position 3-4-7-10-11; 12.												10					1
			33	1	12	12	3	1	35W4	35	41	33	4	3	6	5	1	55N3	50	39	29	4	5	6	9	1
30C1	9	11	66					1	35Y4	35	37	31	8	1	4	2	1	58HE7	50	36	27	1	12	10	2	1
30CW5	30	23	58					1	35Z3	35	37	31	8	1	12	2	1				27	1	12	10	2	1
30HD5	30	36	*27	1	12	3	11	1	35Z4	35	38	33	7	2	12	5	1				27	1	12	10	9	1
*Normally shows short position 4-5-9-10.									35Z5	35	38	33	7	2	3	5	1	60EH5	50	4	57					1
30HJ5	30	36	*27	1	12	3	11	1	36AM3	35	41	35	4	3	6	5	1	60FX5	50	4	68					1
*Normally shows short position 4-5-9-10.									36AM3-B	35	41	35	4	3	6	5	1	60HL5	50	39	30	4	5	1	2	1
30JZ6	30	36	*31	1	12	9	5	1	36KD6	35	36	*26	1	12	9	5	1	64SPT	6	39	33	5	4	1	2	1
*Some tubes may show short position 3-4-10-11.									*Normally shows short position 3-4-10-11.									150C3	50	38	*99	2	11	3	5	1
30KD6	30	36	*26	1	12	9	5	1	36LW6	35	38	*31	7	8	1	5	1	*Tube good if it reads 60 or more.								
*Normally shows short position 3-4-10-11.									*Normally shows short position 2-6.									*Normally shows short position 11.								
30KG6	30	44	*26	4	5	1	8	1	36MC6	35	35	46					1	*Normally shows grid emission.								
*Normally shows short position 2-3-6-7.									38A3	35	40	30	4	5	1	6	1	213PEN	19	39	*32	5	4	7	2	1
30L1	7	39	33	5	4	7	2	1	38HE7	40	36	27	1	12	10	2	1	*Normally shows short position 1-6-9.								
			33	5	4	7	6	1				27	1	12	10	9	1	274	5	33	12					1
30MB6	30	36	*32	1	12	9	5	1	38HK7	40	36	29	1	12	10	9	1				12					2
*Normally shows short position 3-4-10-11.												29	1	12	10	2	1	396-A	6	39	29	9	1	12	3	1
30M-P23	30	41	30	3	4	5	2	1	40FR5	40	4	54					1				29	9	1	12	1	1
30M-P27	30	41	30	3	4	5	2	1	40KD6	40	36	*26	1	12	9	5	1	403B	6	1	63					1
30PL12	16	39	33	5	4	12	3	1	*Normally shows short position 3-4-10-11.									407A	40	39	29	1	9	5	3	1
			39	5	4	12	1	1	40KG6	40	44	*26	4	5	1	8	1				29	1	9	5	7	1
30P16	16	23	68					1	*Normally shows short position 2-3-6-8.									408A	19	1	65					1
31AL10	30	36	51	1	12	6	3	1	40Z5	50	38	31	7	2	3	5	1	409A	6	1	77					1
			33	1	12	6	8	1	42EC4	40	38	32	7	8	2	5	1	502A	6	38	26	2	7	12	5	1
			38	1	12	6	11	1	42KN6	22	36	*30	7	12	9	5	1	884	6	38	35	2	7	12	5	1
31JS6A	30	36	*29	1	12	9	5	1	*DO NOT turn D switch to position 1 and 12.									1003	6	31	8					1
*Normally shows short position 3-4-10-11.									*Normally shows short position 3-4-10-11.												8					2
31LQ6	30	35	52					1	45B5	50	23	68					1	1201	6	37	*33	8	2	1	5	1
31LR8	30	44	31	4	5	12	2	1	45Z3	50	41	32	7	1	6	2	1	*Normally shows short position 3-4-6-7.								
			31	4	5	12	9	1	45Z5	50	38	31	7	2	3	5	1	1203	6	37	53	8	1	12	4	1
31LZ6	30	35	53					1	50A5	50	37	35	8	1	12	6	1	1217	6	1	92					1
32A8	30	39	33	5	4	12	3	1	50AX6G	50	38	35	7	2	12	3	1	1219	6	39	29	9	1	12	3	1
			39	5	4	12	1	1	50B5	50	3	38					1				29	9	1	12	7	1
32ET5	30	4	60					1	50BK5	50	10	53					1	1222A	6	38	25	1	6	12	4	1
32HQ7	35	36	34	1	12	7	2	1	50BM8	50	39	33	5	4	12	3	1	1223	6	38	50	7	2	12	10	1
			34	1	12	7	9	1				39	5	4	12	1	1	1225	6	38	44	7	2	1	10	1
33GT7	30	36	*55	1	12	7	10	1	50C5	50	4	44					1	1231	6	37	32	8	1	12	6	1
			*26	1	12	7	2	1	50C6	50	29	45					1	1232	6	37	36	8	1	12	6	1
*Normally shows short position 9-11.									50C51	50	4	55					1	1273	6	37	37	8	1	12	6	1
33GY7	30	36	*56	1	12	7	11	1	50CA5	50	4	55					1	1274	6	37	45	8	1	12	3	1
			*26	1	12	7	2	1	50CD6	50	26	53					1				45	8	1	12	6	1
*Normally shows short position 9-10.									50DC4	50	41	33	4	3	6	5	1	1280	12	37	37	8	1	12	6	1
33GY7A	30	36	*56	1	12	7	11	1	50E5	50	27	58					1	1282	6	37	35	8	1	4	6	1
			*26	1	12	7	2	1	50EH5	50	4	57					1	1288	3	37	45	8	1	4	3	1
*Normally shows short position 9-10.									50FA5	50	4	54					1				45	8	1	4	6	1
33HE7	30	36	27	1	12	10	2	1	50FE5	50	29	37					1	1291	3	37	45	8	1	4	3	1
			27	1	12	10	9	1	50FK5	50	4	88					1				45	8	1	4	6	1
33JR6	30	35	55					1	50FY8	50	39	30	4	5	12	3	1	1292	3	37	45	8	1	4	3	1
33JV6	30	36	28	1	12	4	11	1				39	4	5	12	1	1				45	8	1	4	6	1
34CD3	35	36	*27	1	12	4	10	1	50GY7	50	36	*55	1	12	7	11	1	1294	2	37	60	8	1	12	4	1
*Some tubes may show short position 5-6-8-9.									*30 1 12 7 2 1									1299	2	37	43	8	1	7	6	1
34CE3	35	36	25	1	12	4	10	1	*Normally shows short position 9-10.									1611	6	29	91					1
34CM3	35	44	30	4	5	2	7	1	50HC6	50	41	26	3	4	6	2	1	1612	6	38	44	7	2	1	10	1
34DK3	35	44	31	4	5	2	7	1	50HK6	50	41	27	3	4	6	2	1	1613	6	29	91					1
34GD5	35	4	57					1	50HN5	50	39	30	4	5	1	2	1	1614	6	29	67					1
34R3	35	39	33	5	4	2	9	1	50JY6	50	27	55					1	1619	3	38	39	7	2	12	5	1
35A5	35	37	34	8	1	12	6	1	50L6	50	29	47					1	1620	6	38	50	7	2	12	10	1
35B5	35	3	55					1	50X6	50	37	35	8	1	12	3	1	1621	6	29	91					1
35C5	35	4	54					1				35	8	1	12	6	1	1622	6	29	63					1
35CD6	35	26	53					1	50Y6	50	38	35	7	2	12	3	1	1626	12	29	82					1
35DZ8	35	39	27	4	5	8	3	1				35	7	2	12	5	1	1631	6	29	63					1
			30	4	5	2	1	1	50Y7	50	38	35	7	2	6	3	1	1632	12	29	47					1
												35	7	2	6	5	1									

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
1634	12	38	48	8	7	12	3	1	5910	2	41	54	7	1	12	6	1	6147	6	29	63					1	
			48	8	7	12	4	1				75	7	1	12	4	1	6159	25	38	*38	7	2	1	5	1	
1655	6	38	48	8	7	1	3	1	5915	6	1	92					1	*Normally shows short position 4-6.									
			48	8	7	1	4	1	5920	6	2	49					1	6180	6	25	78					1	
1664	12	38	55	7	2	12	10	1				49					2				78					2	
			65	7	2	12	4	1	5931	5	33	16					1	6185	6	39	29	9	1	12	3	1	
			65	7	2	12	5	1				16					2				29	9	1	12	7	1	
1665	6	41	32	4	3	5	1	1	5932	6	29	63					1	6186	6	1	80					1	
1667	6	41	32	4	3	5	1	1	5961	6	38	37	7	2	12	5	1	6187	6	1	87					1	
1852	6	30	60					1	5963	12	8	76					1	6188	6	25	*81					1	
												76					2				*81					2	
1853	6	30	74					1	5964	6	2	67					1	*Tube good if it reads 22 or more.									
2013	12	8	54					1				67					2	6189	12	8	75					1	
			54					2	5965	12	8	54					1				75					2	
2014	6	39	*32	5	4	2	9	1				54					2	6197	6	39	*32	5	4	2	9	1	
*Normally shows short position 3-8.									5992	6	29	79					1	*Normally shows short position 3-8.									
2050	6	38	34	7	2	12	5	1	6005	6	3	77					1	6198	12	8	75					1	
5590	6	1	63					1	6006	6	30	77					1				75					2	
5591	6	1	63					1	6012	6	38	28	2	7	12	3	1	6201	12	8	74					1	
5649	12	29	92					1	6028	19	1	63					1				74					2	
5654	6	1	63					1	6042	6	25	78					1	6202	6	41	44	4	3	12	1	1	
5659	12	29	92					1				78					2				44	4	3	12	6	1	
5660	12	39	55	7	2	12	10	1	6046	25	29	47					1	6203	6	39	41	4	5	12	1	1	
			65	7	2	12	4	1	6057	12	8	*85					1				41	4	5	12	9	1	
			65	7	2	12	5	1				*85					2	6211	12	8	54					1	
5661	12	30	84					1	*Tube good if it reads 22 or more.												54					2	
5663	6	41	25	3	4	12	1	1	6058	6	41	33	3	4	12	2	1	6216	6	39	*29	4	5	3	2	1	
5670	6	39	29	9	1	12	3	1				33	3	4	12	7	1	*Normally shows short position 1-6.									
			29	9	1	12	7	1	6060	12	8	74					1	6218	6	39	72	4	5	12	2	1	
5679	6	37	48	8	1	12	3	1				74					2	6227	6	9	53					1	
			48	8	1	12	6	1	6062	6	39	33	5	4	8	9	1	6265	6	1	89					1	
5686	6	23	87					1	6063	6	41	44	4	3	12	1	1	6267	6	39	40	5	4	2	9	1	
5687	12	39	37	5	4	8	2	1				44	4	3	12	6	1	6293	6	38	*38	7	2	1	5	1	
			37	5	4	8	7	1	6066	6	6	85					1	*Normally shows short position 4-6.									
5691	6	25	*85					1				78					2	6336	6	38	29	8	7	12	1	1	
			*85					2	6067	12	8	75					1				29	8	7	12	4	1	
*Tube good if it reads 22 or more.												75					2	6350	12	39	31	4	5	9	3	1	
5692	6	25	78					1	6069	6	1	63					1				31	4	5	9	8	1	
			78					2	6072	12	8	93					1	6360	12	39	30	4	5	9	1	1	
5693	6	30	83					1				93					2				30	4	5	9	3	1	
5696	6	41	34	4	3	5	6	1	6080	6	38	35	8	7	12	1	1	6384	6	38	33	8	6	12	7	1	
												35	8	7	12	4	1	6417	12	39	33	5	4	8	9	1	
5721	12	8	*85					1	6082	25	38	35	8	7	12	1	1	6463	12	39	28	4	5	9	3	1	
			*85					2				35	8	7	12	4	1				28	4	5	9	8	1	
*Tube good if it reads 22 or more.									6084	6	39	39	4	5	7	9	1	6485	6	1	58					1	
5725	6	1	77					1				74					1	6516	6	41	34	4	3	12	1	1	
5726	6	41	33	3	4	12	2	1	6085	12	8	74					2	6520	6	38	35	8	7	12	1	1	
			33	3	4	12	7	1				74					1				35	8	7	12	4	1	
5727	6	41	32	4	3	5	1	1	6087	5	33	23					1	6525	6	41	32	4	3	5	1	1	
5749	6	1	78					1				23					2	6550	6	29	52					1	
5750	6	1	91					1	6095	6	3	77					1	6660	6	1	78					1	
5751	12	8	*85					1				63					1	6661	6	1	89					1	
			*85					2	6096	6	1	63					1	6662	6	1	81					1	
*Tube good if it reads 22 or more.									6097	6	41	33	3	4	12	2	1	6663	6	41	33	3	4	12	2	1	
5755	16	39	38	4	5	9	3	1				33	3	4	12	7	1				33	3	4	12	7	1	
			38	4	5	9	6	1	6098	6	38	33	8	6	12	7	1	6664	6	2	83					1	
5763	6	39	33	5	4	8	9	1	6099	6	2	60					1	6669	6	3	77					1	
												60					2	6676	6	1	64					1	
5814-A	12	8	75					1				60					1	6677	6	39	*32	5	4	2	9	1	
			75					2	6100	6	41	41	4	3	1	8	1	*Normally shows short position 3-8.									
5823	1	41	*85	5	6	5	4	1				41					1	6678	6	11	79					1	
*Ignore short lamp indication.									6101	6	2	60					1				55					2	
*Normally shows grid emission.												60					2	6679	12	8	79					1	
			67					2	6106	5	3	16					1	6680	12	8	75					2	
5824	25	29	48					1				16					2				75					2	
5844	6	2	67					1	6113	6	25	*85					1	6681	12	8	*85					1	
			67					2	*Tube good if it reads 22 or more.									2			*85					2	
5845	4	41	*100	3	4	7	1	1	6134	6	30	60					1	*Tube good if it reads 22 or more.									

◆Use TC-80 Adapter.

*Normal Shorts refer to position of "D" Switch.

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6687	6	1	89					1	7318	12	39	32	5	4	9	2	1	7984	12	36	*59	1	12	7	11	1
6688	6	23	82					1				32	5	4	9	7	1									
6689	6	39	25	4	5	12	2	1	7320	6	23	68					1									
6829	12	8	54					1	7355	6	38	37	7	2	12	6	1	8016	1	32	55					1
			54					2	7360	6	39	29	4	5	12	3	1	8032	12	38	*38	7	2	1	5	1
6853	5	33	23					1	7370	40	39	24	4	5	8	2	1									
			23					2				24	4	5	8	7	1	8056	6	43	*63	10	12	12	2	1
6883	12	38	*38	7	2	1	5	1	7408	6	29	80					1									
*Normally shows short position 4-6.									7494	12	8	*85					1									
6887	6	41	33	4	3	12	2	1				*85				2										
			33	4	3	12	7	1																		
6888	6	30	62					1									1									
6913	12	8	*85					1	7543	6	1	85					1									
			*85					2	7551	15	39	*33	4	5	9	2	1									
*Tube good if it reads 22 or more.																										
6919	6	41	33	3	4	12	2	1	7558	6	39	*26	4	5	3	2	1									
			33	3	4	12	7	1																		
6922	6	8	24					1	7581	6	29	64					1									
			24					2	7586	6	43	*65	10	12	12	2	1									
6939	12	39	34	4	5	9	1	1									1									
			34	4	5	9	3	1	7587	6	43	*67	10	12	12	2	1									
6954	6	1	87					1																		
6968	6	1	63					1																		
6973	6	16	62					1																		
7000	6	38	50	7	2	12	10	1																		
7025	12	8	*85					1																		
			*85					2																		
*Tube good if it reads 22 or more.																										
7027	6	38	*36	7	2	5	6	1																		
*Normally shows short position 1-4.																										
7036	6	1	92					1																		
7044	12	39	30	4	5	8	2	1																		
			30	4	5	8	7	1																		
7054	12	9	42					1																		
7055	12	41	33	3	4	12	2	1																		
			33	3	4	12	7	1																		
7056	12	1	64					1																		
7057	12	8	53					1																		
			53					2																		
7058	12	8	*85					1																		
			*85					2																		
*Tube good if it reads 22 or more.																										
7059	12	11	79					1																		
			55					2																		
7060	12	13	55					1																		
			75					2																		
7061	12	16	67					1																		
7062	12	8	54					1																		
			54					2																		
7105	12	38	35	8	7	12	1	1																		
			35	8	7	12	4	1																		
7119	12	39	30	4	5	8	2	1																		
			30	4	5	8	7	1																		
7167	12	1	54					1																		
7184	6	39	*33	5	4	1	2	1																		
*Normally shows short position 1-3-6-9.																										
7189	6	39	*33	5	4	1	2	1																		
*Normally shows short position 1-3-6-9.																										
7199	6	39	30	5	4	12	7	1																		
			32	5	4	12	9	1																		
7233	6	39	33	5	4	2	7	1																		
*Normally shows short position 1-3-6-9.																										
7247	12	8	75					1																		
			*90					2																		
*Tube good if it reads 22 or more.																										
7258	12	13	62					1																		
			61					2																		
7308	6	8	23					1																		
			24					2																		

*Normal Shorts refer to position of "D" Switch.

6687-ARTH-1

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
AU13	5	33	32					1	CV565	35	37	31	8	1	12	2	1	CV764	2	38	54	7	2	12	10	1
			32					2	CV567	35	38	33	7	2	3	5	1	CV768	2	38	48	7	2	12	5	1
AZ32	4	33	32					1	CV568	35	38	33	7	2	3	5	1	CV770	2	38	54	7	2	12	10	1
			32					2	CV571	50	29	47					1			64	7	2	12	4	1	
B36	12	25	78					1	CV572	6	33	15					1			67	7	2	12	5	1	
			78					2				15					2	CV772	1	38	55	7	2	12	4	1
B65	6	25	78					1	CV573	6	33	15					1			55	7	2	12	5	1	
			78					2				15					2	CV773	1	38	55	7	2	12	4	1
B152	12	8	74					1	CV574	6	33	15					1			55	7	2	12	5	1	
			74					2				15					2	CV775	1	37	62	8	1	12	4	1
B309	12	8	74					1	CV575	5	33	16					1	CV776	1	37	55	8	1	12	6	1
			74					2				16					2	CV777	1	37	54	8	1	5	6	1
B319	7	39	33	5	4	7	2	1	CV578	6	38	45	7	2	12	5	1	CV778	1	37	68	8	1	12	4	1
			33	5	4	7	6	1	CV579	6	38	45	7	2	12	5	1	CV779	2	37	53	8	1	12	6	1
B329	12	9	75					1	CV580	6	38	45	7	2	12	5	1			63	8	1	12	4	1	
			75					2	CV581	6	29	99					1	CV780	2	37	52	8	1	12	6	1
B339	12	8	*85					1	CV582	6	29	99					1			60	8	1	12	4	1	
			*85					2	CV583	6	29	99					1	CV781	1	37	53	8	1	5	6	1
*Tube good if it reads 22 or more.									CV586	6	29	63					1	CV782	1	41	57	7	1	5	4	1
B349	7	39	33	5	4	7	2	1	CV587	6	38	40	7	2	12	10	1	CV783	1	41	*55	7	1	5	3	1
			33	5	4	7	6	1				63	7	2	12	4	1									
B719	6	8	70					1				63	7	2	12	5	1	CV784	1	41	56	7	1	12	6	1
			70					2	CV588	6	38	40	7	2	12	10	1				95	7	1	12	3	1
B729	6	8	76					1				63	7	2	12	4	1	CV785	1	41	55	7	1	5	6	1
			76					2				63	7	2	12	5	1	CV786	1	38	54	7	2	12	5	1
BA2	6	38	34	7	2	12	5	1	CV589	6	38	40	7	2	12	10	1	CV797	6	41	32	4	3	5	1	1
BPM04	6	3	77					1				63	7	2	12	4	1	CV805	50	38	35	7	2	12	3	1
CC86E	6	39	33	5	4	12	2	1				63	7	2	12	5	1				35	7	2	12	5	1
			33	5	4	12	7	1	CV590	6	30	83					1	CV807	3	41	*36	7	1	5	4	1
CV131	6	41	35	4	3	12	1	1	CV591	6	30	83					1									
									CV592	6	30	83					1	CV808	3	41	45	7	1	4	3	1
CV133	6	41	41	4	3	12	1	1	CV593	5	33	12					1				45	7	1	4	5	1
CV136	6	41	34	4	3	12	1	1				12				2	CV815	2	37	43	8	1	7	6	1	
CV138	6	41	30	4	3	12	1	1	CV594	6	30	77					1	CV818	3	41	*42	7	1	5	3	1
CV140	6	41	33	3	4	12	2	1	CV595	6	30	77					1									
			33	3	4	12	7	1				77					1	CV819	3	38	45	7	2	8	5	1
CV216	50	38	*99	2	1	3	5	1	CV657	6	38	50	7	2	12	10	1	CV820	3	41	*48	7	1	5	3	1
*Normally shows short position 11.									CV660	6	30	60					1									
*Normally shows grid emission.									CV661	6	30	74					1	CV841	5	33	16					
CV283	6	41	33	3	4	12	2	1	CV664	6	41	*46	4	3	1	6	1				16					
			33	3	4	12	7	1	*Normally shows short position 2-7.								1	CV842	5	33	32					
CV450	6	29	*62					1	CV665	6	1	*73					1				32					
*For plate cap use jack next to socket 26.									CV686	50	38	*85	2	11	3	5	1	CV844	6	38	40	7	2	12	5	1
CV452	6	6	85					1									1	CV845	6	38	40	7	2	12	5	1
			78					2	*Normally shows short position 11.								1	CV846	6	30	60					
CV453	6	1	91					1	*Normally shows grid emission.								1									
CV454	6	1	78					1	CV692	6	31	8					1	CV848	6	1	80					
CV455	12	8	74					1				8					2	CV849	6	30	60					
			74					2	CV694	12	30	77					1	CV850	6	1	63					
CV491	12	8	75					1	CV697	12	30	83					1	CV851	6	38	35	7	2	12	5	1
			75					2	CV698	12	30	83					1	CV852	6	41	14	4	3	1	6	1
CV492	12	8	*85					1	CV700	12	38	46	8	7	12	2	1	CV858	6	2	60					
			*85					2				68	8	7	12	4	1				60					
*Tube good if it reads 22 or more.												68	8	7	12	5	1	CV862	6	38	53	7	2	12	5	1
CV493	6	41	44	4	3	12	1	1	CV703	6	38	35	7	2	12	5	1	CV865	6	30	69					
			44	4	3	12	6	1	CV706	6	38	48	7	2	12	10	1	CV866	6	30	83					
CV511	6	29	79					1	CV717	5	33	22					1	CV867	6	38	46	8	7	12	2	1
CV538	12	38	37	7	2	12	5	1				22					2				68	8	7	12	4	1
CV544	12	30	84					1	CV723	3	38	39	7	2	12	5	1				68	8	7	12	5	1
CV547	12	38	42	8	7	12	2	1	CV726	35	37	31	8	1	12	2	1	CV873	6	33	17					
			71	8	7	12	4	1	CV728	2	38	53	7	2	12	10	1		</							

*Normal Shorts refer to position of "D" Switch.

AU13-CV882

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
CV883	6	37	42	8	1	12	4	1	CV1649	6	29	99					1	CV1928	12	1	78					1
CV885	6	37	38	8	1	12	6	1	CV1741	6	29	53					1	CV1929	6	38	48	7	2	12	3	1
CV886	6	37	38	8	1	12	6	1	CV1753	35	37	34	8	1	12	6	1				48	7	2	12	5	1
CV887	6	37	50	8	1	4	3	1	CV1757	6	1	93					1	CV1930	6	38	48	7	2	12	3	1
			68	8	1	4	5	1	CV1758	1	41	55	7	1	5	6	1				48	7	2	12	5	1
CV890	6	37	*33	8	2	1	5	1	CV1762	6	1	82					1	CV1931	6	38	48	7	2	12	3	1
*Normally shows short position 3-4-6-7.									CV1763	6	41	*85	4	3	1	7	1				48	7	2	12	5	1
CV891	6	37	40	8	1	4	3	1	CV1777	6	37	37	8	1	12	6	1	CV1932	6	29	93					1
			69	8	1	4	5	1	CV1784	6	30	38					1	CV1933	6	29	93					1
CV892	6	37	69	8	1	4	6	1	CV1790	6	37	50	8	1	12	3	1	CV1934	6	29	93					1
			47	8	1	12	6	1	CV1800	1	38	50	8	1	12	6	1	CV1935	6	38	50	7	2	12	10	1
			68	8	1	12	3	1	CV1802	1	38	57	7	2	12	5	1	CV1936	6	38	50	7	2	12	10	1
			68	8	1	12	4	1	CV1803	1	38	54	7	2	12	5	1	CV1937	6	38	50	7	2	12	10	1
CV893	6	37	45	8	1	12	4	1	CV1805	1	38	54	7	2	12	5	1	CV1938	6	29	92					1
			45	8	1	12	5	1	CV1811	1	38	58	7	2	12	5	1	CV1940	6	29	92					1
CV894	6	37	36	8	1	12	6	1				*99	7	2	12	8	1	CV1941	6	38	52	7	2	12	10	1
CV895	6	37	35	8	1	12	6	1				86	7	2	12	10	1	CV1942	6	38	52	7	2	12	10	1
CV896	6	37	45	8	1	12	4	1				*Tube good if it reads 30 or more.						CV1943	6	38	52	7	2	12	10	1
			65	8	1	12	5	1	CV1818	1	38	55	7	2	12	10	1	CV1944	6	38	35	7	2	12	5	1
CV897	6	37	35	8	1	12	6	1	CV1819	6	29	93					1	CV1945	6	38	35	7	2	12	5	1
			50	8	1	12	4	1	CV1820	1	38	96	7	2	12	5	1	CV1946	6	38	35	7	2	12	5	1
CV898	6	37	42	8	1	12	4	1	CV1821	2	38	53	7	2	12	10	1	CV1947	6	29	63					1
			42	8	1	12	5	1	CV1823	2	38	53	7	2	12	10	1	CV1948	6	29	63					1
CV899	6	37	35	8	1	12	4	1	CV1824	1	38	48	7	2	12	5	1	CV1949	6	41	43	4	3	12	1	1
CV900	6	37	35	8	1	12	6	1	CV1826	1	38	48	7	2	12	5	1	CV1950	6	38	44	7	2	12	10	1
			72	8	1	12	3	1	CV1829	1	38	54	7	2	12	5	1	CV1951	6	38	44	7	2	12	10	1
CV901	6	37	72	8	1	12	4	1	CV1846	5	33	22					1	CV1956	6	38	47	7	2	12	4	1
			45	8	1	12	3	1	CV1849	5	33	32					2	CV1961	12	1	82					1
CV910	12	38	45	7	2	12	5	1	CV1851	5	38	47	8	7	12	3	1	CV1962	6	38	52	7	2	12	10	1
CV916	12	38	48	7	2	12	3	1				47	8	7	12	5	1				63	7	2	12	4	1
			48	7	2	12	5	1	CV1852	5	38	47	8	7	12	3	1	CV1963	6	38	52	7	2	12	10	1
CV917	12	38	50	7	2	12	10	1	CV1854	5	33	32					1				63	7	2	12	4	1
CV918	12	38	52	7	2	12	10	1				32					2	CV1964	6	38	52	7	2	12	10	1
CV919	12	38	41	8	7	12	3	1	CV1856	5	33	32					1	CV1966	6	38	37	7	2	12	5	1
CV920	12	38	41	8	7	12	3	1	CV1857	5	38	52	8	7	12	3	1	CV1967	6	38	37	7	2	12	5	1
CV921	12	38	46	8	7	12	2	1	CV1862	6	3	77	8	7	12	5	1	CV1969	6	38	48	8	7	12	3	1
			69	8	7	12	5	1	CV1863	5	33	12					1	CV1970	6	38	48	8	7	12	3	1
CV922	12	30	77					1	CV1864	5	33	12					1	CV1972	6	38	48	8	7	12	4	1
CV924	12	25	*85					1	CV1873	6	30	74					1	CV1973	6	38	41	8	7	12	3	1
			*85					2	CV1876	6	30	60					1	CV1974	6	38	47	7	2	12	10	1
*Tube good if it reads 22 or more.									CV1878	6	38	54	7	2	12	5	1	CV1975	6	38	47	7	2	12	10	1
CV925	12	25	78					1	CV1882	6	30	38					1	CV1976	6	38	37	7	2	12	5	1
			78					2	CV1893	6	38	55	7	2	12	10	1	CV1978	6	30	77					1
CV930	12	37	45	8	1	12	4	1				65	7	2	12	4	1	CV1981	6	30	84					1
			45	8	1	12	5	1	CV1894	6	38	65	7	2	12	5	1	CV1982	6	30	84					1
CV939	25	38	40	7	2	12	5	1				65	7	2	12	4	1	CV1985	6	25	*85					1
CV945	30	37	40	8	1	12	2	1				65	7	2	12	5	1				*85					2
CV946	30	37	40	8	1	12	7	1	CV1895	50	38	*70	2	11	3	5	1	*Tube good if it reads 22 or more.								
			40	8	1	12	7	1				65	7	2	12	4	1	CV1988	6	25	78					1
CV995	6	41	36	4	3	2	1	1				65	7	2	12	5	1	CV1990	6	38	42	8	7	12	2	1
CV1067	6	29	93					1	CV1902	6	38	45	7	2	12	5	1				71	8	7	12	4	1
CV1071	5	33	16					1	CV1908	6	38	40	7	2	12	10	1				71	8	7	12	5	1
			16					2	CV1909	6	38	40	7	2	12	10	1	CV1991	6	38	42	8	7	12	2	1
CV1074	6	38	50	7	2	12	10	1	CV1910	6	38	40	7	2	12	10	1				71	8	7	12	4	1
CV1268	5	33	32					1	CV1911	6	29	91					1	CV1993	6	30	92					1
			32					2	CV1912	6	29	91					1									1
CV1280	6	38	44	7	2	12	10	1	CV1926	6	26	52					1									1
CV1285	6	38	47	7	2	12	4	1																		1
CV1301	6	38	47	7	2	12	5	1																		1
			47	7	2	12	5	1																		1
CV1375	6	9	62					1																		1
CV1377	5	33	10					1																		1
			10					2																		1
CV1633	12	8	74					2																		1
			74					2																		1

*Normal Shorts refer to position of "D" Switch.

CV883-CV1993

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
CV1995	6	38	52 72 72	8 8 8	7 7 7	12 12 12	2 4 5	1 1 1
CV1996	6	38	52 72	8 8	7 7	12 12	2 4	1 1
CV2128	6	39	72 85 38	8 5	7 4	12 12	5 1	1 1
CV2129	6	39	33	5	4	8	9	1
CV2370	3	41	*48	7	1	5	3	1
*Normally shows short position 2-6.								
CV2390	3	41	*36	7	1	5	4	1
*Normally shows short position 2-6.								
CV2500	35	38	33	7	2	12	5	1
CV2507	1	41	52	7	1	5	6	1
CV2522	6	1	77					1
CV2524	6	1	82					1
CV2526	6	6	91 78					1 2
CV2534	50	29	47					1
CV2704	6	37	*33	8	2	1	5	1
*Normally shows short position 3-4-6-7.								
CV2706	6	37	53	8	1	12	4	1
CV2714	6	29	67					1
CV2716	6	38	48	8	7	12	3	1
CV2721	6	39	*32	5	4	7	2	1
*Normally shows short position 1-6-9.								
CV2748	5	33	12 12					1 2
CV2769	6	41	*55	4	3	1	5	1
*Normally shows short position 2-7.								
CV2901	6	39	40	4	5	2	9	1
CV2938	6	29	53					1
CV2975	6	23	68					1
CV2983	3	41	45	7	1	5	6	1
CV2984	6	38	35 35	8 8	7 7	12 12	1 4	1 1
CV3512	6	41	34	4	3	5	6	1
CV3523	6	38	*38	7	2	1	5	1
*Normally shows short position 4-6.								
*Normally shows grid emission.								
CV3798	50	38	*70	2	11	3	5	1
*Normally shows short position 11.								
*Normally shows grid emission.								
CV3799	50	38	*69	2	11	3	5	1
*Normally shows short position 11.								
*Normally shows grid emission.								
CV4007	6	41	33 33	3 3	4 4	12 12	2 7	1 1
CV4010	6	1	63					1
CV4018	6	41	32	4	3	5	1	1
CV4024	12	8	74 74					1 2
D2M9	6	41	33	3	4	12	2	1
D63	6	38	33 48	3 7	4 2	12 12	7 3	1 1
D77	6	41	33 33	3 3	4 4	12 12	2 7	1 1
D152	6	41	33 33	3 3	4 4	12 12	2 7	1 1
D193	3	41	*36	7	1	5	4	1
*Normally shows short position 2-6.								
DA90	2	41	*70	7	1	2	6	1
*Normally shows short position 5-11.								
DAC32	1	38	55 96	7 7	2 2	12 12	10 5	1 1
DAF91	1	41	56 95	7 7	1 1	12 12	6 3	1 1

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
DAF92	2	41	55 70	7 7	1 1	12 12	6 4	1 1
DAF96	1	41	58 70	7 7	1 1	12 12	6 3	1 1
DC90	1	41	*70	7	1	5	6	1
*Normally shows short position 2-3.								
DCC90	3	41	45 45	7 7	1 1	4 4	3 5	1 1
DD6	6	41	33 33	3 3	4 4	12 12	2 7	1 1
DF33	2	38	53	7	2	12	10	1
DF91	1	41	55	7	1	5	6	1
DF92	1	41	55	7	1	5	6	1
DF96	1	41	58	7	1	5	6	1
DF97	1	41	40	7	1	5	6	1
DF904	1	41	52	7	1	5	6	1
DH63	6	38	40 63 63	7 7 7	2 2 2	12 12 12	10 4 5	1 1 1
DH74	12	38	40	7	2	12	10	1
			63 63 63	7 7 7	2 2 2	12 12 12	4 5 5	1 1 1
DH76	12	38	40	7	2	12	10	1
			63 63	7 7	2 2	12 12	4 5	1 1
DH107	19	6	85 78					1 2
DH149	6	37	50 68 68	8 8 8	1 1 1	4 4 4	3 5 6	1 1 1
DH710	6	17	90 63					1 2
DH719	6	17	90 63					1 2
DK91	1	41	57	7	1	5	4	1
DK92	1	41	48	7	1	12	4	1
DK96	1	41	54	7	1	12	4	1
DL33	3	38	45	7	2	8	5	1
DL35	1	38	54	7	2	12	5	1
DL36	1	38	48	7	2	12	5	1
DL91	1	41	*55	7	1	5	3	1
*Normally shows short position 2-6.								
DL92	3	41	*48	7	1	5	3	1
*Normally shows short position 2-6.								
DL93	3	41	*36	7	1	5	4	1
*Normally shows short position 2-6.								
DL94	3	41	45	7	1	5	6	1
DL95	3	41	*42	7	1	5	3	1
*Normally shows short position 2-6.								
DL96	3	41	45	7	1	5	6	1
DP61	6	1	63					1
DY30	1	32	55					1
DY80	1	24	85					1
DY86	1	24	35					1
DY87	1	24	35					1
DY802	1	24	56					1
E55L	6	44	*25	4	5	7	8	1
*Normally shows short position 2-6.								
E80CC	12	8	74 74					1 2
E80CF	6	11	72 55					1 2
E80F	6	39	34	4	5	7	9	1
E80L	6	39	25	4	5	1	2	1
E80T	6	39	72	4	5	12	2	1
E81CC	12	8	74 74					1 2
E81L	6	9	60					1
E83F	6	39	25	4	5	12	2	1

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
E88CC	6	8	24 24					1 2
E90CC	6	2	49 49					1 2
E90F	6	1	82					1
E91AA	6	41	33 33	3 3	4 4	12 12	2 7	1 1
E91H	6	1	89					1
E91N	6	41	32	4	3	5	1	1
E92CC	6	2	61					1
E99F	6	1	61 84					2 1
E180F	6	23	82					1
E182CC	6	39	30 30	4 4	5 5	8 8	2 7	1 1
E188CC	6	8	23 24					1 2
E235L	6	38	30	2	7	4	5	1
E280F	6	23	80					1
E810F	6	39	*29	4	5	3	2	1
*Normally shows short position 6-9.								
EAA91	6	41	33 33	3 3	4 4	12 12	2 7	1 1
EABC80	6	17	90 63					1 2
EAF801	6	39	33 35	5 5	4 4	12 12	2 8	1 1
EB34	6	38	48 48	7 7	2 2	1 1	3 5	1 1
EB91	6	41	33	3	4	12	2	1
EBC90	6	6	33 85	3 3	4 4	12 12	7 1	1 1
EBC91	6	6	78 91 78					2 1 2
EBF80	6	39	37 64 64	5 5 5	4 4 4	12 12 12	2 7 8	1 1 1
EBF83	6	39	31 62	5 5	4 4	12 12	2 7	1 1
EBF89	6	39	62 33 60 60	5 5 5 5	4 4 4 4	12 12 12 12	8 2 7 8	1 1 1 1
EC81	6	39	30	4	5	12	1	1
EC86	6	40	29	4	5	3	6	1
EC88	6	39	*85	4	5	7	8	1
*Normally shows short position 1-3-6-9.								
EC90	6	41	41	4	3	1	6	1
EC91	6	41	*29	4	3	6	1	1
*Normally shows short position 2-5.								
EC92	6	2	83					1
EC95	6	41	32	4	3	1	2	1
EC97	6	41	33	4	3	1	2	1
EC806S	6	40	29	4	5	3	6	1
EC900	6	5	56					1
EC8010	6	39	*73	5	4	7	8	1
*Normally shows shorts position 1, 3, 6, 9								
ECC35	6	25	*85 *85					1 2
*Tube good if it reads 22 or more.								
ECC81	12	8	74 74					1 2
ECC82	12	8	75 75					1 2
ECC83	12	8	*85 *85					1 2
*Tube good if it reads 22 or more.								
ECC84	6	39	33 33	5 5	4 4	7 7	2 6	1 1

- Use TC-628 Adapter.

◆ Use TC-80 Adapter

*Normal Shorts refer to position to "D" Switch.

CV1995-ECC84

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
ECC85	6	8	70					1	EF85	6	9	62					1	EZ90	6	41	44	4	3	12	1	1
			70					1	EF86	6	39	40	5	4	2	9	1				44	4	3	12	6	1
			70					2	EF89	6	9	80					1	G180/ZM	50	38	*99	2	11	3	5	1
ECC86	6	39	33	5	4	12	2	1	EF91	6	41	30	4	3	12	1	1				*Tube good if it reads 60 or more.					
			33	5	4	12	7	1	EF92	6	41	35	4	3	12	1	1				*Normally shows short position 11					
ECC88	6	39	31	5	4	12	2	1	EF93	6	1	78					1				*Normally shows grid emission.					
			31	5	4	12	7	1	EF94	6	1	82					1	GY501♦	3	44	*94	4	5	4	10	1
ECC89	6	39	29	4	5	7	2	1	EF95	6	1	63					1				*No short test.					
			29	4	5	7	6	1	EF96	6	1	80					1	GZ-30	5	33	12					1
ECC91	6	2	60					1	EF98	6	41	30	4	3	12	1	1				12					2
			60					2	EF183	6	9	40					1	GZ-32	5	33	12					1
ECC189	6	8	30					1	EF184	6	9	58					1				12					2
			30					2	EF804	6	39	39	5	4	2	9	1	GZ-34	5	33	10					1
ECC801S	12	8	74					1	EF-806S	6	39	40	4	5	2	9	1				10					2
			74					2	EFL200	6	42	27	5	6	12	1	1	H63	6	38	40	7	2	12	10	1
ECC802S	12	8	75					1				27	5	6	12	8	1	HABC80	19	17	90					1
			75					2	EH90	6	1	94					1				63					2
ECC808	6	39	33	5	4	12	1	1	EH-900S	6	1	91					1	HBC90	12	6	85					1
			33	5	4	12	9	1	EK90	6	1	91					1				78				2	
ECC960	6	2	49					1	EL34	6	29	53					1	HBC91	12	6	91					1
			49					2	EL36	6	27	58					1				78					2
ECF80	6	11	66					1	EL37	6	29	63					1	HCC85	17	8	65					1
			55					2	EL38	6	29	*62					1				65					2
ECF82	6	11	79					1				*62					1	HCH81	12	39	32	5	4	12	2	1
			56					2	EL81	6	39	*32	5	4	7	2	1				35	5	4	12	9	1
ECF86	6	39	25	4	5	3	2	1				*32	5	4	7	2	1	HD14	1	38	55	7	2	12	10	1
			25	4	5	1	6	1									1				96	7	2	12	5	1
ECF200	6	42	30	5	6	12	3	1	EL82	6	23	68					1	HF93	12	1	78					1
			30	5	6	12	10	1	EL83	6	39	30	5	4	12	2	1	HF94	12	1	82					1
ECF201	6	42	28	5	6	12	3	1	EL84	6	23	68					1	HK90	12	1	91					1
			28	5	6	12	3	1	EL85	6	39	*39	5	4	1	2	1									1
ECF202	6	42	32	5	6	12	10	1				*39	5	4	1	2	1	HL90	19	3	77					1
			29	5	6	12	3	1	EL86	6	23	58					1	HL92	50	4	44					1
ECF801	6	22	33	5	6	12	10	1	EL90	6	3	77					1	HL94	30	41	27	3	4	5	2	1
			62					1	EL91	6	41	34	4	3	12	1	1	HMO4	6	1	91					1
			78					2	EL95	6	3	88					1	HY90	35	41	33	4	3	6	5	1
ECF802	6	11	80					1									1	KT32	25	29	47					1
			85					2	EL500♦	6	44	*25	4	5	2	1	1	KT63	6	29	91					1
ECF-805	6	39	30	4	5	8	7	1				*25	4	5	2	1	1	KT66	6	29	63					1
			33	4	5	8	9	1	EL503♦	6	44	*31	4	5	3	7	1	KT88	6	29	43					1
ECH81	6	39	85	5	4	12	1	1				*31	4	5	3	7	1	KT763	6	38	50	7	2	12	10	1
			85	5	4	12	1	1	EL505♦	6	44	*26	4	5	1	8	1									1
ECH83	6	39	38	5	4	12	9	1				*26	4	5	1	8	1	L63	6	29	93					1
			30	5	4	12	2	1	EL508♦	6	44	30	4	5	1	8	1	L77	6	41	41	4	3	1	6	1
ECH84	6	22	34	5	4	12	9	1	EL509♦	6	44	*26	4	5	1	8	1	LC900	3	5	56					1
			88					1				*26	4	5	1	8	1	LCF80	6	11	66					1
			93					2	EL802	6	9	51					1				55					2
ECH200	6	42	31	5	6	12	3	1	EL803	6	39	30	5	4	12	2	1	LCF200	5	42	30	5	6	12	3	1
			30	5	6	12	8	1	EL820	6	39	*32	5	4	7	2	1				30	5	6	12	10	1
ECL80	6	39	37	5	4	12	9	1				*32	5	4	7	2	1	LCF201	5	42	28	5	6	12	3	1
			44	5	4	12	2	1	EL821	6	9	55					1				32	5	6	12	10	1
ECL82	6	39	33	5	4	12	3	1	ELL80	6	39	29	4	5	12	2	1	LCF-201	6	11	80					1
			39	5	4	12	1	1				29	4	5	12	6	1				85					2
ECL84	6	39	26	4	5	12	8	1	EM-87	6	39	52	4	5	2	1	1	LCF801	5	22	62					1
			26	4	5	12	1	1	EN93	6	41	43	4	3	12	1	1				78					2
ECL85	6	39	25	4	5	12	9	1	EO80	6	39	33	5	4	3	7	1	LCH200	5	42	31	5	6	12	3	1
			25	4	5	12	2	1	EY81	6	39	33	5	4	2	9	1				30	5	6	12	8	1
ECL86	6	39	25	4	5	2	8	1	EY82	6	39	29	4	5	6	9	1	LCL80	4	39	37	5	4	12	9	1
			35	4	5	7	1	1	EY86	6	40	*95	5	4	1	10	1				44	5	4	12	2	1
ECLL800	6	39	*99	4	5	12	1	1				*95	5	4	1	10	1	LCL82	12	39	33	5	4	12	3	1
			36	4	5	12	2	1	EY87	6	40	*95	5	4	1	10	1				39	5	4	12	1	1
			36	4	5	12	6	1				*95	5	4	1	10	1	LCL84	10	39	26	4	5	12	8	

♦Use TC-80 Adapter

■Use TC-62B Adapter.

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.								
LL505♦	25	44	*26	4	5	1	8	1	PCC85	9	8	70					1	PY88*	30	40	30	5	4	7	3	1								
*Normally shows short position 2-3-6-7.									PCC88	7	39	31	5	4	12	2	1	*If no test, use alternate settings.																
LL521♦	22	44	*29	4	5	1	8	1				31	5	4	12	1	1	PY88	30	40	30	5	4	3	7	1								
*Normally shows short position 2-3-6-7.									PCC89	7	39	29	4	5	7	2	1	PY500	40	38	32	7	8	2	5	1								
LL802	10	9	51					1				29	4	5	7	6	1	QA240	6	41	41	4	3	1	6	1								
LN152	6	39	37	5	4	12	9	1	PCC189	7	8	30					1	QA2404	6	41	33	3	4	12	2	1								
			44	5	4	12	2	1				30					1			33	3	4	12	7	1									
LY-81	10	39	33	5	4	2	9	1	PCF80	9	11	66					2	QA2406	12	8	74					1								
LY88*	22	40	30	5	4	7	3	1				55					1			74					2									
*If no test, use alternate settings.									PCF82	9	11	79					2	QA2407	6	41	44	4	3	12	1	1								
LY88	22	40	30	5	4	3	7	1				55					1			44	4	3	12	6	1									
LY500	30	38	32	7	8	2	5	1	PCF86	7	39	25	4	5	3	2	1	QA2408	6	25	78					1								
LZ319	9	11	66					1				25	4	5	1	6	1			78					2									
			55					2	PCF200	8	42	30	5	6	12	3	1	QE03/10	6	39	33	5	4	8	9	1								
LZ329	9	11	66					1				30	5	6	12	10	1	QE05/40	6	38	*38	7	2	1	5	1								
			55					2	PCF201	8	42	28	5	6	12	3	1	*Normally shows short position 4-6.																
M8081	6	2	60					1				32	5	6	12	10	1	QS150/40	50	38	*99	2	11	3	5	1								
			60					2	PCF801	8	22	62					1	*Tune good if it reads 60 or more.																
M8100	6	1	63					1				78					2	*Normally shows short position 11.																
N14	1	38	54	7	2	12	5	1	PCF802	9	11	80					1	*Normally shows grid emission.																
N17	3	41	*48	/	1	5	3	1				85					2	QV03/12	6	39	33	5	4	8	9	1								
*Normally shows short position 2-6.									PCF805	7	39	30	4	5	8	7	1	QV06/20	6	38	*38	7	2	1	5	1								
N18	3	41	*42	7	1	5	3	1				33	4	5	8	9	1	*Normally shows short position 4-6.																
*Normally shows short position 2-6.									PCH200	9	42	31	5	6	12	3	1	R52	5	33	12					1								
N19	3	41	45	7	1	5	6	1				30	5	6	12	8	1			12						2								
♦M22LL	19	44	33	4	5	7	1	1	PCL82	16	39	33	5	4	12	3	1	SN7	1	32	55					1								
M152	19	39	*32	5	4	7	2	1				39	5	4	12	1	1	SP6	6	41	30	4	3	12	1	1								
*Normally shows short position 1-4-9.									PCL84	15	39	26	4	5	12	8	1	T2M05	6	41	34	4	3	12	5	1								
N329	16	23	68					1				26	4	5	12	1	1			34	4	3	12	6	1									
N709	6	23	68					1	PCL85	18	39	25	4	5	12	9	1	TJ880	6	39	*27	5	4	6	2	1								
NCC189	4	39	30	5	4	12	2	1				25	4	5	12	2	1	*Normally shows shorts position 3, 9																
			30	5	4	12	7	1	PCL86	14	39	25	4	5	2	8	1	TM12	6	41	*85	4	3	1	7	1								
NR67	6	38	44	7	2	12	10	1				35	4	5	7	1	1	*Normally shows short position 5-6.																
NR78	6	29	99					1	PD500♦	9	44	*52	4	5	12	8	1	TS51	6	1	63					1								
NR78A	6	29	93					1	*Normally shows short position 2-3-6-7-9.																	TS52	6	2	60					1
NR81	6	38	52	7	2	12	10	1	PF9	6	38	52	7	2	12	10	1	TS-876C	6	39	*28	4	5	1	2	1								
NR83	6	38	50	7	2	12	10	1	PF86	4	39	33	4	5	2	9	1	TT21	12	39	32	5	4	9	2	1								
NR85	6	29	91					1	PFL200	17	42	27	5	6	12	1	1			32	5	4	9	7	1									
NR95	25	29	47					1				27	5	6	12	8	1	U50	5	33	32					1								
NU20	5	33	32					1	PH4	6	38	45	7	2	12	5	1			32						2								
			32					2	PL36	25	27	58					1	U52	5	33	16					1								
OBC3	12	38	42	8	7	12	2	1	PL81	19	39	*32	5	4	7	2	1			16						2								
			71	8	7	12	4	1	*Normally shows short position 1-6-9.									U54	5	33	10					1								
OF1	6	38	47	7	2	12	10	1	PL82	16	23	68					1			10						2								
OH4	12	38	45	7	2	12	5	1	PL83	12	39	30	5	4	12	2	1	U78	6	41	44	4	3	12	1	1								
OSW2190	6	30	60					1	PL84	15	23	58					1			44	4	3	12	6	1									
OSW2192	6	30	38					1	PL95	4	3	88					1	U147	6	33	15					1								
OSW2600	6	30	60					1	PL500♦	30	44	*25	4	5	2	1	1			15						2								
OSW2601	6	30	38					1	*Normally shows short position 3-6-7-8.									U149	6	37	45	8	1	12	3	1								
OSW3105	6	38	42	8	1	12	2	1	PL504♦	30	44	*25	4	5	2	1	1			45	8	1	12	6	1									
			71	8	1	12	4	1	*Normally shows short position 3-6-7-8									U152	19	39	29	5	4	12	9	1								
			71	8	1	12	5	1	PL505♦	40	44	*26	4	5	1	8	1	U153	17	39	33	4	5	2	9	1								
OSW3106	6	29	79					1	*Normally shows short position 2-3-6-7.									U154	19	39	29	4	5	6	9	1								
OSW3108	6	29	63					1	PL508♦	17	44	30	4	5	1	8	1	U192	19	39	29	4	5	6	9	1								
OSW3109	6	38	48	7	2	12	3	1	PL509♦	30	44	*26	4	5	1	8	1	U193*	17	39	33	4	5	2	9	1								
			48	7	2	12	5	1	*Normally shows short position 2-3-6-7.									*If no test, use alternate setting below																
OSW3111	6	30	84					1	PL521♦	30	44	*29	4	5	1	8	1			17	40	33	4	5	2	3	1							
OSW3112	6	29	93					1	*Normally shows short position 2-3-6-7.									U381	35	40	30	4	5	1	6	1								
PABC80	9	17	90					1	PL802	16	9	51					1	U707	6	41	44	4	3	12	1	1								
			63					2	PL820	19	39	*32	5	4	7	2	1			44	4	3	12	6	1									
PC86	4	40	29	4	5	3	6	1	*Normally shows short position 1-6-9.									U709	6	39	34	5	4	12	1	1								
PC88	4	39	*85	4	5	7	8	1	PM04	6	1	78					1			34	5	4	12	7	1									
*Normally shows short position 1-3-6-9.									PM05	6	1	63					1	UAA91	19	41	33	3	4	12	2	1								
PC92	3	2	83					1	PY32	30	38	24	2	7	6	3	1			33	3	4	12	7	1									
PC-95	4	41	33	4	3	1	2	1				24	2	7	6	5	1	UABC80	25	17	90					1								
PC97	5	41	33	3	4	1	2	1	PY80	19	39	29	5	4	12	9	1			63						2								
PC900	4	5	56					1	PY81	17	39	33	5	4	2	9	1	UBF80	17	39	33	5	4	12	2	1								
PCC84	7	39	33	5	4	7	2	1				29	4	5	6	9	1			65	5	4	12	7	1									
			33	5	4	7	6	1	PY82	19	39	29	4	5	6	9	1			65	5	4	12	8										

B & K DYNA-JET MODEL 707 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
UC92	9	2	83					1	VT103	6	38	42	8	7	12	2	1	XCH81	3	39	85	5	4	12	1	1	
UCC84	22	39	33	5	4	7	2	1				71	8	7	12	4	1	XCL82	8	39	38	5	4	12	9	1	
UCC85	25	8	70	5	4	7	6	1	VT104	12	38	42	8	7	12	2	1				33	5	4	12	3	1	
			70					2				71	8	7	12	4	1	XCL84	8	39	39	5	4	12	1	1	
UCF80	25	11	66					1				71	8	7	12	5	1				26	4	5	12	8	1	
			55					2	VT105	6	38	48	8	7	12	3	1	XCL85	18	39	26	4	5	12	1	1	
UCH81	19	39	32	5	4	12	2	1				48	8	7	12	4	1				25	4	5	12	9	1	
			35	5	4	12	9	1	VT107	6	29	79					1	XF80	3	9	76					1	
UCL82	50	39	33	5	4	12	3	1	VT112	6	30	60					1	XF85	3	9	62					1	
			39	5	4	12	1	1	VT114	5	33	16					1									1	
UF80	19	9	76					1				16					2	XF86	2	38	33	4	5	2	9	1	
UF85	19	9	62					1	VT115	6	29	63					1	XF94	3	1	82					1	
UF86	12	39	40	5	4	2	9	1	VT116	6	30	83					1	XF183	3	9	40					1	
UF89	12	9	80					1	VT117	6	30	84					1	XF184	3	9	58					1	
UL84	50	23	58					1	VT124	1	38	55	7	2	12	5	1	XL36	12	27	57					1	
UU12	6	39	34	5	4	12	1	1	VT125	1	38	54	7	2	12	5	1	XL84	8	23	68					1	
			34	5	4	12	7	1	VT126	6	33	15					1	XL86	8	23	58					1	
UY82	50	39	29	4	5	6	9	1				15					2	XL500*	12	44	*25	4	5	2	1	1	
UY85	35	40	30	4	5	1	6	1	W17	1	41	55	7	1	5	6	1									1	
Y2M70	6	41	44	4	3	12	1	1	W77	6	41	35	4	3	12	1	1				62					2	
			44	4	3	12	6	1	W149	6	37	45	8	1	12	6	1	XXD	12	37	41	8	1	12	4	1	
V177	6	41	35	4	3	12	1	1	W719	6	9	62					1				41	8	1	12	5	1	
V741	6	41	41	4	3	1	6	1	W727	6	1	78					1	XXFM	6	37	43	8	1	12	3	1	
V884	6	41	35	4	3	12	1	1	WD709	6	39	37	5	4	12	2	1				36	8	1	12	5	1	
V886	6	41	34	4	3	12	1	1				64	5	4	12	7	1									1	
VP6	6	41	35	4	3	12	1	1				64	5	4	12	8	1	XXL	6	37	41	8	1	12	8	1	
VP12D	12	38	55	7	2	12	10	1	WT210-0001	6	41	32	4	3	5	1	1	XY88*	16	40	30	5	4	7	3	1	
			65	7	2	12	4	1	WT606	6	41	32	4	3	5	1	1										1
			65	7	2	12	5	1	X14	2	38	54	7	2	12	5	1										1
YP1321	12	41	*55	4	3	1	5	1	X17	2	41	53	7	1	5	4	1	Y88	16	40	30	5	4	3	7	1	
									X18	1	41	48	7	1	12	4	1	YC95	3	4	33	4	3	1	2	1	
VR75	50	38	*70	2	11	3	5	1	X20	1	41	48	7	1	12	4	1	YC97	3	40	33	3	4	1	2	1	
									X25	1	41	54	7	1	12	4	1	YCC189	5	8	30					1	
									X63(M)	6	38	45	7	2	12	5	1				30					2	
VR90	50	38	*69	2	11	3	5	1	X64	6	38	44	7	2	1	10	1	YCF86	5	38	24	4	5	3	2	1	
									X730M	6	38	45	7	2	12	5	1				25	4	5	1	6	1	
									X107	19	1	91					1	YCL180	5	8	54					1	
VR105	50	38	*85	2	11	3	5	1	X119	19	39	32	5	4	12	2	1				54					2	
												35	5	4	12	9	1	YF183	4	9	40					1	
																		YF184	4	9	58					1	
VR150/30	50	38	*99	2	11	3	5	1	X148	6	37	38	8	1	12	6	1	YL1371	12	38	*38	7	2	1	8	1	
												52	8	1	12	4	1									1	
									X150	6	36	42	1	12	12	7	1									1	
												42	1	12	12	9	1	Z14	2	38	53	7	2	12	10	1	
												42	1	12	12	11	1	Z63	6	38	50	7	2	12	10	1	
VT52	6	29	92					1									1	Z719	6	9	76					1	
VT65	7	29	99					1	X155	6	8	55					2	Z729	6	39	40	5	4	2	9	1	
VT66	6	29	91					1				55					1	ZD17	1	41	*55	7	1	5	3	1	
VT74	5	33	12					1	X719	6	39	85	5	4	12	1	1									1	
			12					2				38	5	4	12	9	1									1	
VT86	6	38	52	7	2	12	10	1	X727	6	1	91					1	ZD25	1	41	58	7	1	12	6	1	
VT87	6	38	44	7	2	12	10	1													70	7	1	12	3	1	
VT88	6	38	52	7	2	12	10	1	XAA91	3	41	33	3	4	12	2	1									1	
			63	7	2	12	4	1				33	3	4	12	7	1									1	
			63	7	2	12	5	1	XB91	3	5	62					1				64	5	4	12	7	1	
VT90	6	38	48	7	2	12	3	1				62					2				64	5	4	12	8	1	
			48	7	2	12	5	1	XB767A	6	38	34	7	2	12	5	1				37	5	4	12	2	1	
VT91	6	38	50	7	2	12	10	1													64	5	4	12	7	1	
VT93	6	38	55	7	2	12	10	1	XC95	2	41	33	4	3	1	2	1				64	5	4	12	7	1	
			65	7	2	12	4	1	XC97	2	41	33	4	3	1	2	1				5	4	12	8	1		
									XC900	2	5	56					1				37	5	4	12	2	1	
VT94	6	29	93					1	XCC82	7	8	75					1				64	5	4	12	7	1	
VT96	6	38	47	7	2	12	4	1	XCC189	4	8	30					1									1	
			47	7	2	12	5	1																			1
VT97	5	33	32					1	XCF80	4	11	66					2										1
			32					2																			