

R8


GUY KIT

**Assembly And Installation
Instructions**

MASTER PARTS LIST

KEY	PART#	DESCRIPTION	QTY
11	030411	9/16" SS Worm Clamp	1
31	193631	Aluminum Bracket	3
59	024259	Zinc Plated Steel Thimble	3
79	195179	Galvanized Steel Stake	3
87	090287	Black Danscord #D30	150 ft

Detail "A"

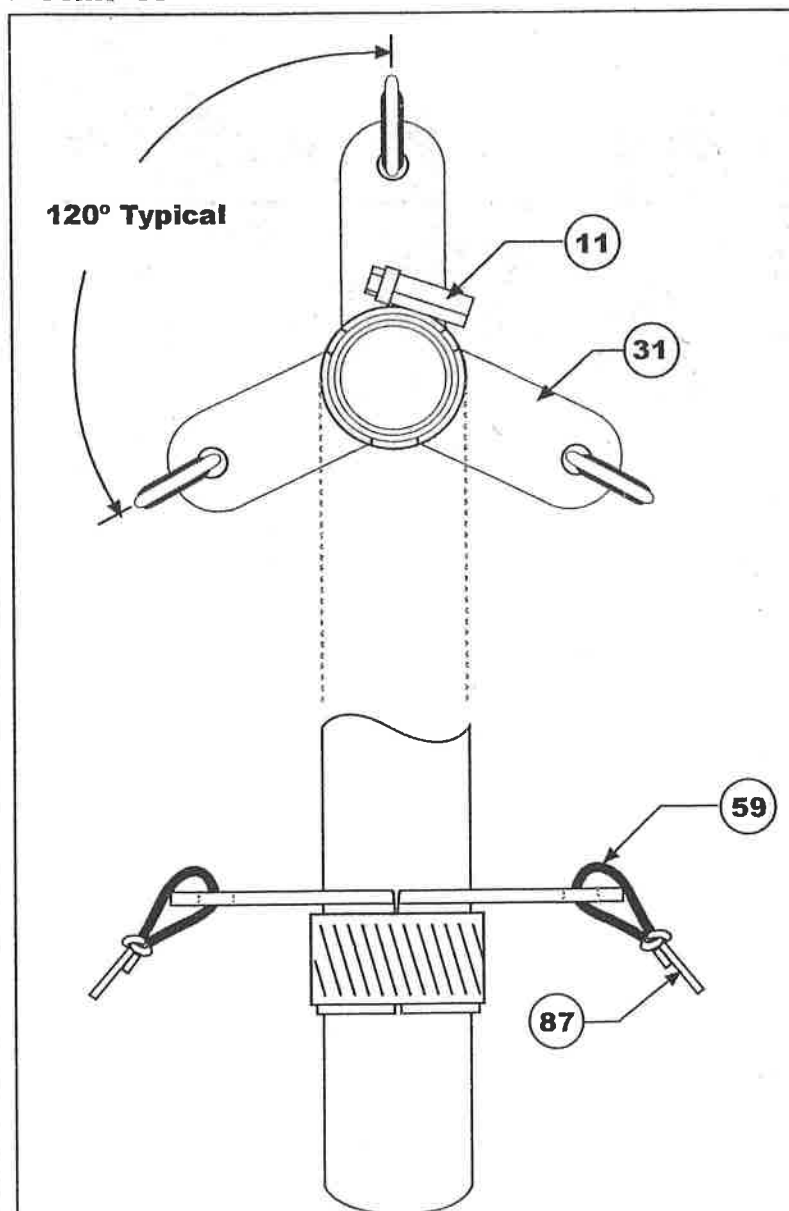

#1 - ASSEMBLE GUY KIT

Install right angle bracket (31) to the R8 antenna just below the lower X-hat. Fasten the brackets with the Worm clamp (11). Cut the guy cord (87) to the appropriate length for specific installations. (Use 50' lengths for flat mounting area). Attach the cords to the brackets and stake (79) as shown in details A & B.

Detail "B"

