


6m-kit for 4ele antennas

p/n 12200.64

On 50 MHz the 180° function disabled

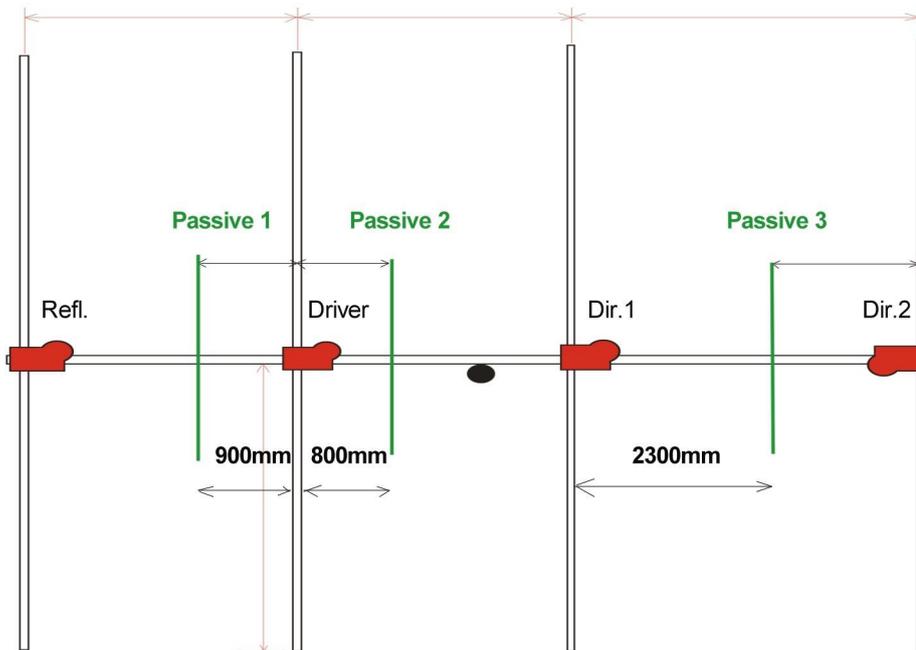

*away or closer the "Passivo 2" for the minimum SWR

Your antenna works on the 6 meter band already, but if you want to add some extra gain you have to add a couple of passive elements.

The 6-meter kit provides two passive elements to be positioned along the boom as shown in the antenna diagram.

The two extra passive elements will permit your antenna to perform as a genuine 4 element yagi antenna.

The two passive elements are made of aluminum tubes and fixed on the boom by their aluminum support plates.

~~The assembly is very easy: pull out the two external 10mm tubes from the 14mm central tube until the holes are aligned.~~

~~Tighten the parker-screws and tape the junction.~~

Passive Element 1 = 3050 mm.

Passive Element 2 = 2850 mm.

Passive Element 3 = 2590 mm.

no more Parker screws... just use the shrink tube with adhesive inside to fix the outer tubes.

As the 180° function cannot be used on this band, you have to rotate the antenna as a normal yagi antenna.

Note: as the motorized reflector DOES NOT participate to the yagi configuration of this band, its length will be shorter (non resonant) than the other motorized elements.



IMPORTANT:

Do not mistake the director with the reflector when assembling on the boom.

NOTE:

Unlike the other bands, the SWR on the 50 MHz band can be optimized by modifying the Driven-element only. Should you ever experience that the best SWR remains relatively high, just try to slightly increase or decrease the distances of the passive elements from the Driven-element. This will permit you to get an ideal SWR.

UltraBeam informs you that although the antenna can operate on the 6 meter band efficiently, the antenna has been designed for best performances on HF, therefore you have to consider a certain compromise on the 50 MHz. This means that you cannot consider it as a pure monoband especially designed for this band. The spirit to have an UltraBeam antenna working also on 50 MHz is to have the possibility to operate on this band and avoid to install another antenna especially designed for this particular band.

