

Figure 3. Schematic Diagram for 610

610 PARTS LIST

SYM.#	STOCK#	AM'T.	DESCRIPTION
P1	51013	1	✓ plug, 9 pin miniature
XV4	97072	1	✓ socket, 5 pin NUVIDOR
XV5	97073	1	✓ socket, 7 pin NUVIDOR
XV1	97068	1	✓ socket, 10 pin miniature
XV2	97067	1	✓ socket, 12 pin COMPACTRON
XV3	97066	1	✓ socket, 9 pin NOVAR
	40007	6	nut, hex, No. 4-40
	41014	1	screw, No. 6-32 x 3/8
	41023	6	screw, No. 4-40, self tapping
	41090	6	screw, No. 4-40 x 5/16
	42003	1	✓ washer, No. 6, fibre, flat
	42006	1	✓ washer, No. 6, fibre, shoulder
	42007	6	✓ washer, No. 4, lock
	43000	1	lug, No. 6 solder
	45014	1	✓ cap, grid
	46000	1	✓ grommet, 3/8" rubber
	58442	length	✓ cable, 9 conductor insul.
	80131	1	✓ panel
	88110	1	✓ cabinet
	89577	1	strain relief
	89691	1	✓ cover, rubber for PI
	66110	1	✓ manual of instructions (wired)
	66365	1	✓ manual of construction (kit)
Cabinet Mounting Hardware	40000	2	nut, hex, No. 6-32
	41086	2	screw, No. 6-32 x 5/16
	42002	2	washer, No. 6, lock

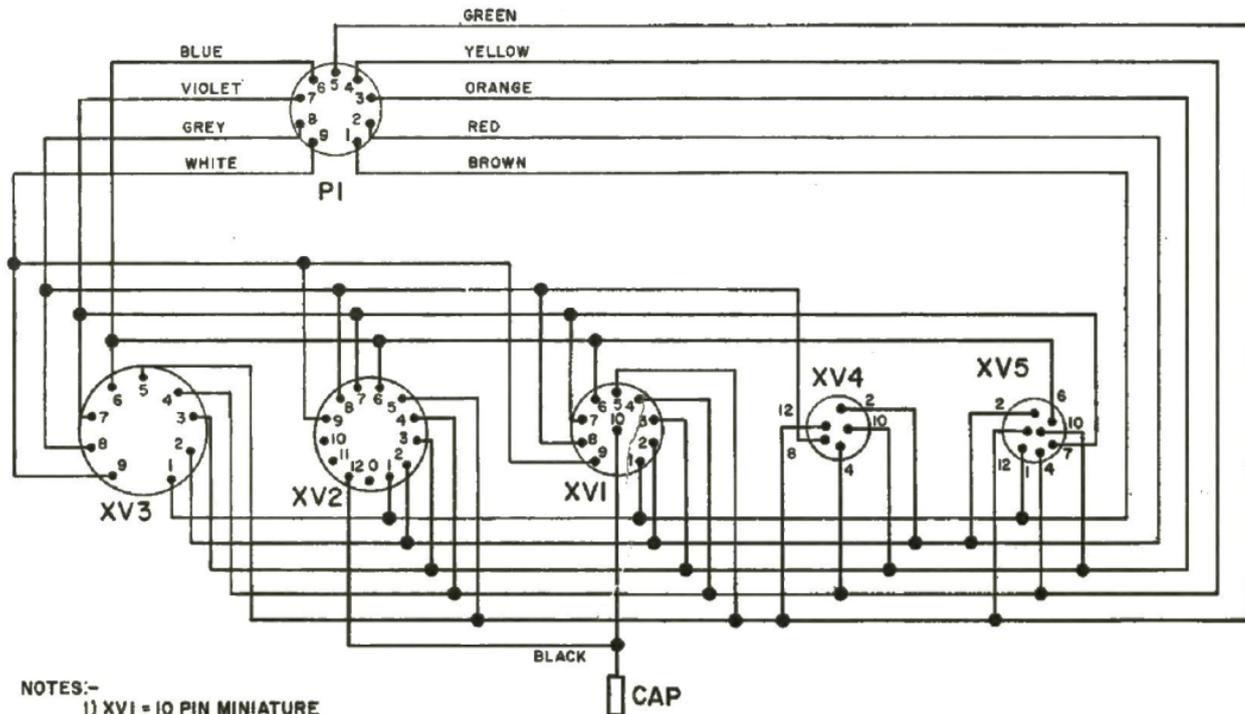


Figure 3. Schematic Diagram for 610

610 PARTS LIST

SYM.#	STOCK#	AM'T.	DESCRIPTION
P1	51013	1	✓ plug, 9 pin miniature
XV4	97072	1	✓ socket, 5 pin NUVIDOR
XV5	97073	1	✓ socket, 7 pin NUVIDOR
XV1	97068	1	✓ socket, 10 pin miniature
XV2	97067	1	✓ socket, 12 pin COMPACTRON
XV3	97066	1	✓ socket, 9 pin NOVAR
	40007	6	nut, hex, No. 4-40
	41014	1	screw, No. 6-32 x 3/8
	41023	6	screw, No. 4-40, self tapping
	41090	6	screw, No. 4-40 x 5/16
	42003	1	✓ washer, No. 6, fibre, flat
	42006	1	✓ washer, No. 6, fibre, shoulder
	42007	6	✓ washer, No. 4, lock
	43000	1	lug, No. 6 solder
	45014	1	✓ cap, grid
	46000	1	✓ grommet, 3/8" rubber
	58442	length	✓ cable, 9 conductor insul.
	80131	1	✓ panel
	88110	1	✓ cabinet
	89577	1	strain relief
	89691	1	✓ cover, rubber for PI
	66110	1	✓ manual of instructions (wired)
	66365	1	✓ manual of construction (kit)
Cabinet Mounting	40000	2	nut, hex, No. 6-32
Hardware	41086	2	screw, No. 6-32 x 5/13
	42002	2	washer, No. 6, lock