


Automatic Key(VK-6) Instructions

Instructions:

1. Methods of adjusting the feel:


1.1 Adjust the tightness of the paddles:

- ◇ Rotate the nut ① to adjust the tightness of the left and right paddles.

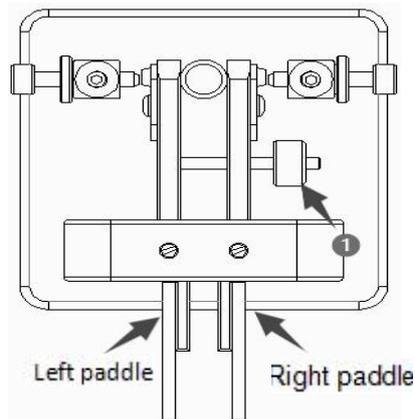

1.2 Adjust the distance between contact ④:

- ◇ Rotate the nut ① to adjust the distance between contact ④.
- ◇ Rotate the nut ② to set the limit distance for thumb screw ①.
- ◇ Tighten the nut ③ after adjusting the distance between the contacts, tighten the screw (to maintain this tactile state).

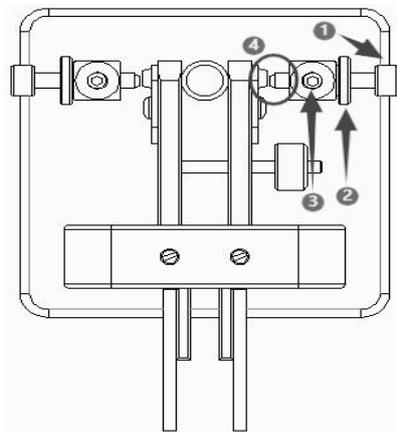

2. Connector instruction:

Plug model: 3-core 3.5 mm plug

