






CIRCUIT DIAGRAM MODELS 909A & 909A/I

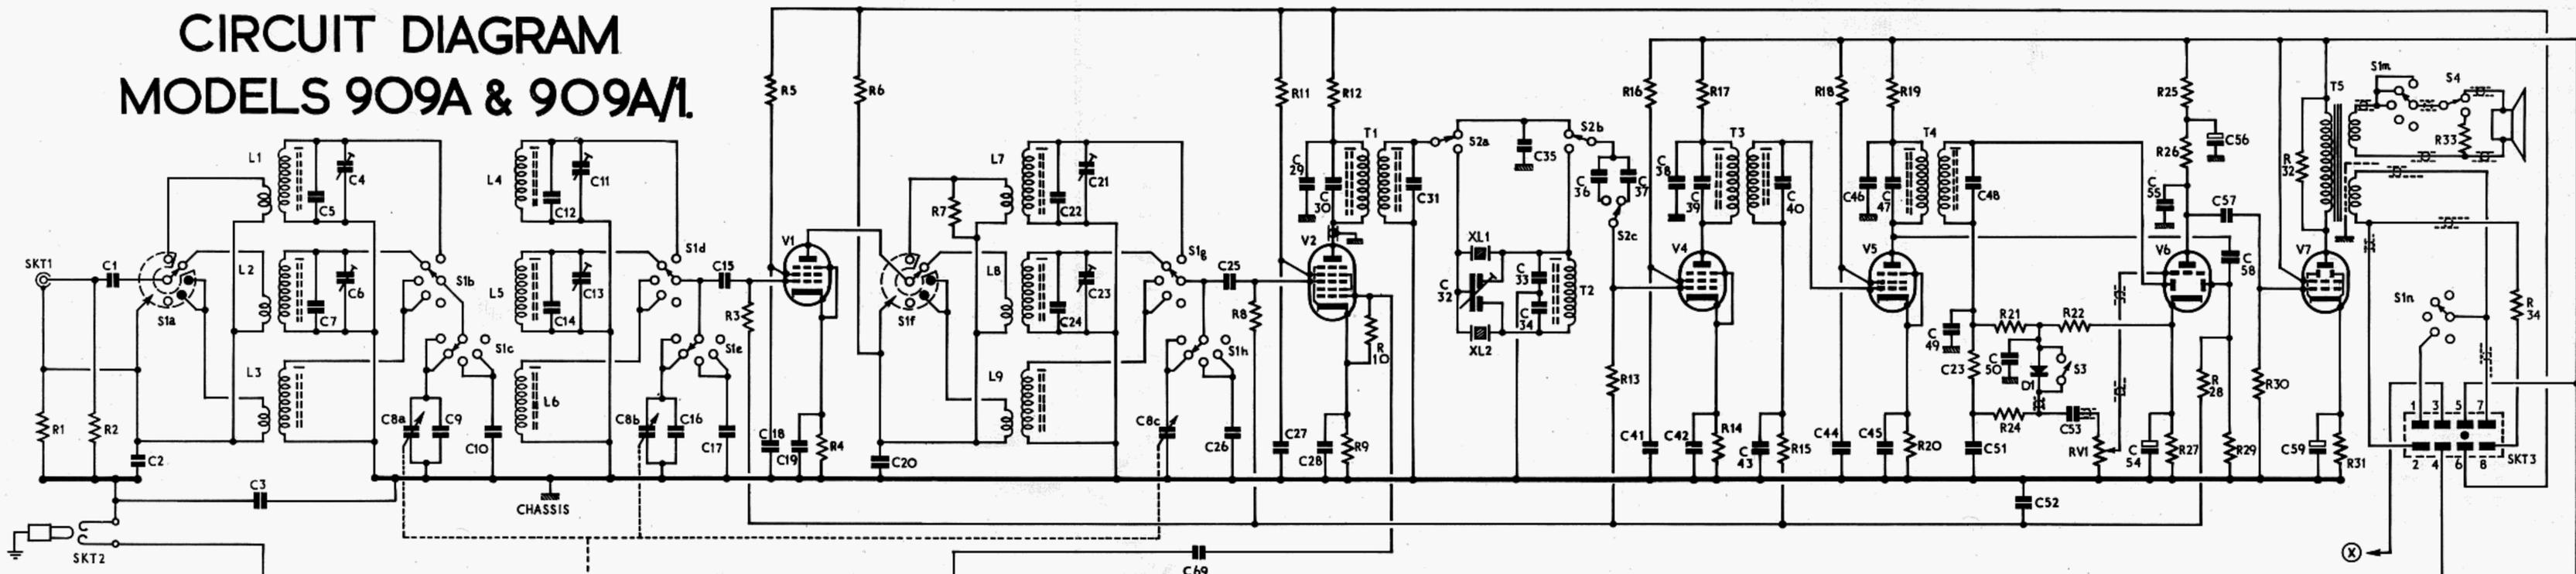

CONTROL FUNCTIONS

REF.	FUNCTION
S1	RANGE SWITCH
S2	CRYSTAL FILTER SWITCH
S3	NOISE LIMITER SWITCH
S4	INTERNAL SPEAKER SWITCH
C8	TUNING GANG
RV1	AF GAIN CONTROL.

SWITCH POSITIONS

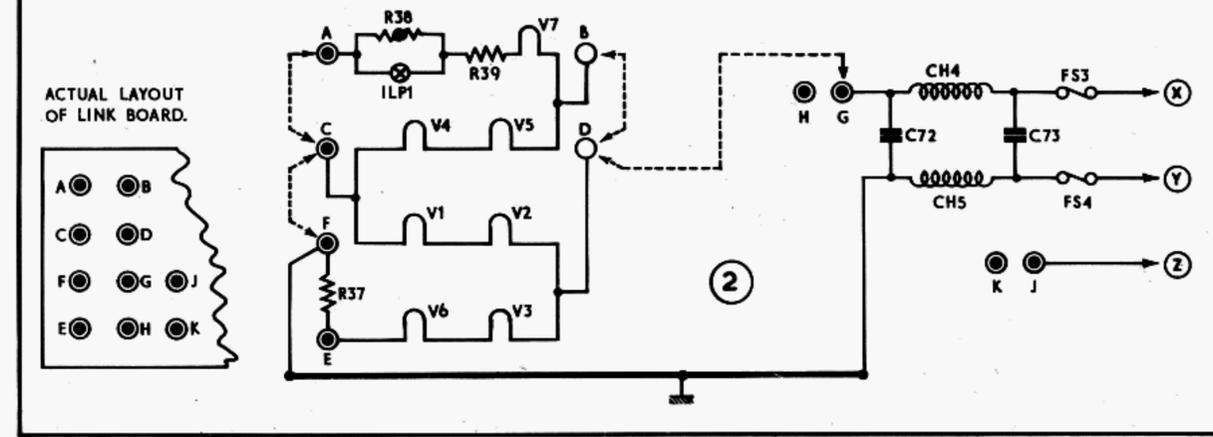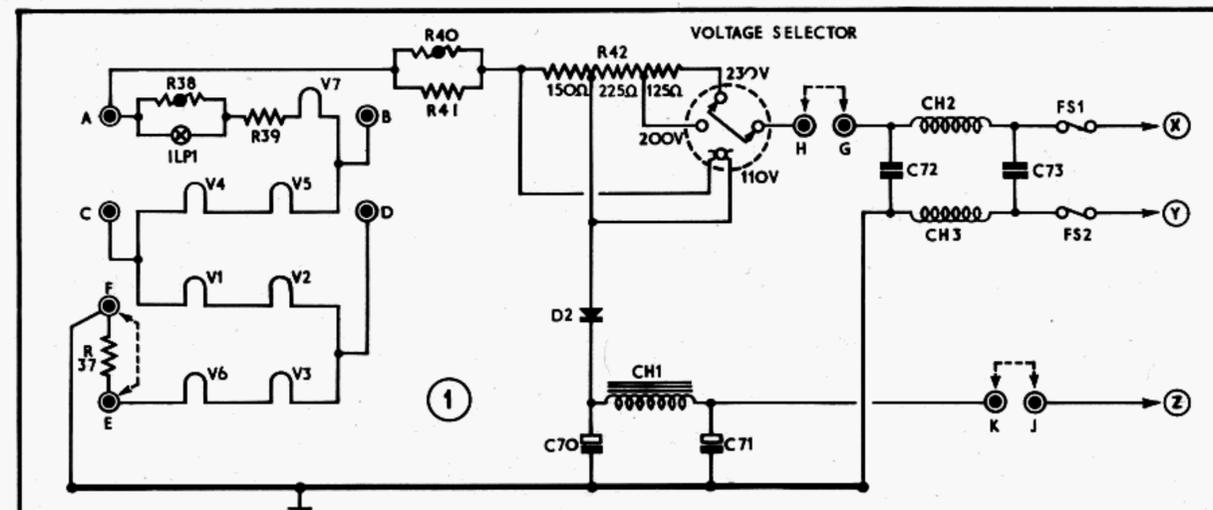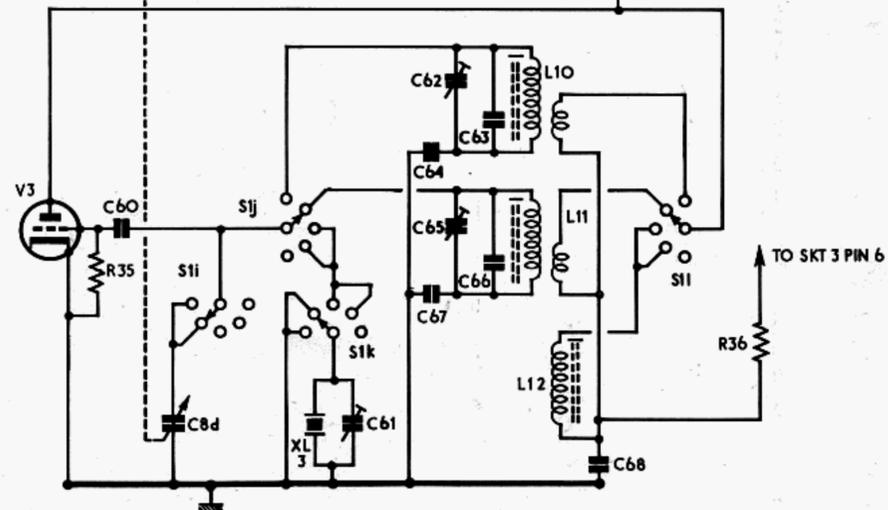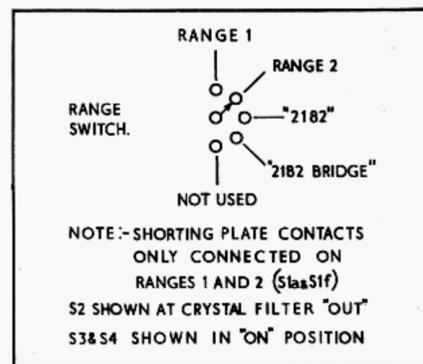

- POWER SUPPLY CIRCUIT, MODEL 909A. LINKS ARE SHOWN SET FOR MAINS OPERATION. FOR OPERATION FROM EXTERNAL HT AND LT SUPPLIES REMOVE EXISTING LINKS AND LINK A-C-F & B-D-G.
- POWER SUPPLY CIRCUIT, MODEL 909A/I. LINKS ARE PERMANENTLY CONNECTED AS SHOWN.
- ALPHA CONNECTOR WIRED FOR USE WITH MODEL 909A OPERATED FROM AC/DC MAINS SUPPLY.
- ALPHA CONNECTOR WIRED FOR USE WITH MODEL 909A/I OR MODEL 909A POWERED BY EXTERNAL HT & LT SUPPLIES.

