




ARX-6

6 METER RINGO

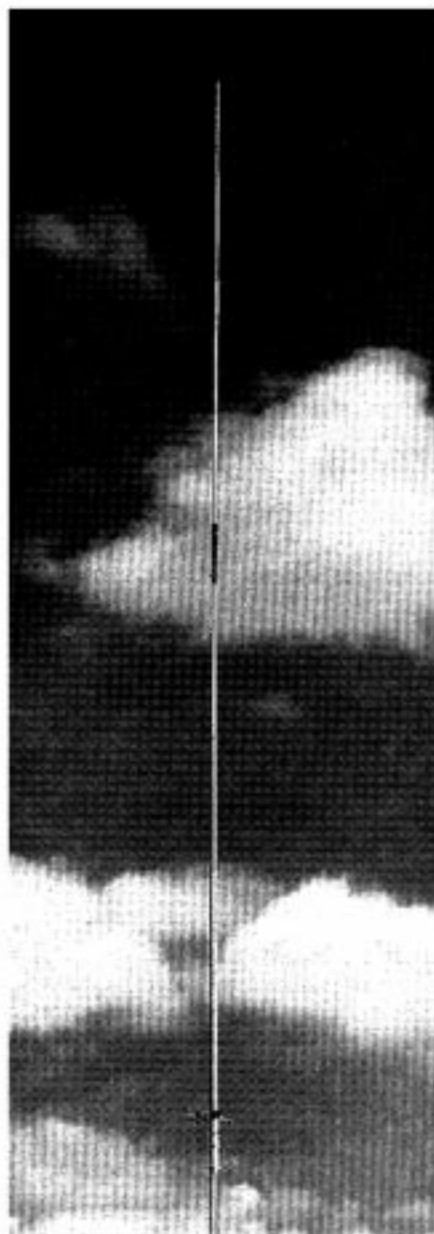

951455 (4/95)

WARNING

THIS ANTENNA IS AN ELECTRICAL CONDUCTOR. CONTACT WITH POWER LINES CAN RESULT IN DEATH, OR SERIOUS INJURY. DO NOT INSTALL THIS ANTENNA WHERE THERE IS ANY POSSIBILITY OF CONTACT WITH OR HIGH VOLTAGE ARC-OVER FROM POWER CABLES OR SERVICE DROPS TO BUILDINGS. THE ANTENNA, SUPPORTING MAST AND/OR TOWER MUST NOT BE CLOSE TO ANY POWER LINES DURING INSTALLATION, REMOVAL OR IN THE EVENT PART OF THE SYSTEM SHOULD ACCIDENTALLY FALL. FOLLOW THE GUIDELINES FOR ANTENNA INSTALLATIONS RECOMMENDED BY THE U.S. CONSUMER PRODUCT SAFETY COMMISSION AND LISTED IN THE ENCLOSED PAMPHLET.

Your Cushcraft ARX-6 vertical antenna is designed and manufactured to give trouble free service. This antenna will perform as specified if the instructions and suggestions in this manual are followed and care is used in the assembly and installation. When checking the components received in your antenna package use the parts listed beside each diagram. There is a master parts list on page 2. **IMPORTANT:** Save the weight label from the outside of the carton. Each antenna is weighed at the factory to verify the parts count. If you claim a missing part, you will be asked for the weight verification label.

PLANNING

Plan your installation carefully. If you use volunteer helpers be sure that they are qualified to assist you. Make certain that everyone involved understands that you are in charge and that they must follow your instructions. If you have any doubts at all, employ a professional antenna installation company to install your antenna.

LOCATION

Location of the antenna is very important. Surrounding objects such as buildings, trees, powerlines, towers, other antennas, etc. will seriously reduce efficiency. To minimize the effects of surrounding objects, mount the antenna as high and in the clear as possible. If metal guy wires are used, they should be broken with strain insulators.

EXTREME CARE MUST BE USED FOR YOUR SAFETY. YOU MUST INSURE THAT WHILE THE ARX-6 IS IN OPERATION NEITHER PEOPLE OR PETS CAN COME IN CONTACT WITH ANY PORTION OF YOUR ANTENNA INCLUDING THE GROUND RADIALS. DEADLY VOLTAGES AND CURRENTS MAY EXIST. ALSO, SINCE THE EFFECTS OF EXPOSURE TO RF ARE NOT FULLY UNDERSTOOD, LONG TERM EXPOSURE TO INTENSE RF FIELDS IS NOT RECOMMENDED. THERE IS A WARNING STICKER PROVIDED THAT IS TO BE ATTACHED TO THE BASE OF THE ARX-6.

MOUNTING

The ARX-6 will take a 1.5" (3.8 cm) to 1-3/4" (5.1 cm) OD mast. For all installations the antenna must be mounted on the top 6 inches (15 cm) of a mast. It should be mounted above horizontally polarized beam antennas. If you side mount this antenna on a tower it will require a short mast, secured at two points.

SYSTEM GROUNDING

Direct grounding of the antenna mast is very important. This serves as protection from lightning strikes and static buildup, and from high voltages which may be present in the equipment attached to the antenna. A good electrical connection should be made to one or more ground rods directly at the base of the antenna using a least #10 AWG ground wire and non-corrosive hardware. For details and safety standards, consult the National Electrical Code. You should also use a coaxial lightning arrestor. Cushcraft offers several different models, such as the LAC-1, LAC-2 or the LAC-4 series.

ASSEMBLY

Assemble your ARX-6 by following steps 1 through 5. After assembling the antenna, verify all dimensions for accuracy and then return to the tuning section below for final adjustment.

TUNING

Use a good quality 50 Ohm coaxial cable with PL-259 connector. Run the cable from your transmitter to the area in which the antenna is going to be tested. The length of this cable or your feedline is not critical. Connect a short length of cable [10 ft. (3m) or less] from the VSWR bridge to the antenna. Set the transmitter to your center operating frequency. When you read VSWR, be sure to move far enough away from the antenna so that your body does not affect the reading.

After dimensions A and B have been set according to Figure 3, the initial tune-up may be done at ground level clear of metallic objects. Adjust the transmitter and bridge for maximum forward power. Check the VSWR (reflected power with the bridge in the reverse position). If the VSWR is high, loosen the tuning rod clamp and adjust the rod slightly in either direction. If the VSWR increased, move the rod back to its original position and adjust in the opposite direction. If the VSWR dropped, repeat adjustment until there is little or no reflected power indicated on the bridge and you will have matched your antenna to 50 Ohms. Tape feedline to the boom.

MASTER PARTS LIST

KEY	PART #	DESCRIPTION	QTY	KEY	PART #	DESCRIPTION	QTY
9	010009	8-32 X 5/8" (1.6 cm) stainless steel machine screw	1	409	030409	7/8" (2.2 cm) stainless steel worm clamp	2
11	010011	8-32 stainless steel hex nut	5	410	030410	1" (2.5 cm) stainless steel clamp	2
41	011941	#8 stainless steel split lock washer	4	411	030411	1-1/4" (3.2 cm) stainless steel worm clamp	1
53	060053	1/2" (1.3 cm) black plastic cap	1	412	030412	1-1/2" (3.8 cm) stainless steel worm clamp	1
70	082070	3/16" (.5 cm) aluminum tuning rod	1	941	360941	1/4" (.6 cm) flat washer	3
83	010083	1/4" x 20" x 1-1/4" (3.2 cm) ss machine screws	4	BA		Base assembly	1
84	010084	1/4" x 20" stainless steel lock washers	4	BB		1-1/8" x 48" (2.9 x 121.9) aluminum tube	1
85	010085	1/4" x 20" stainless steel hex nut	4	BC		1" x 48" (2.5 x 121.9) aluminum tube	1
93	200093	Tuning rod clamp	1	BD		55-1/2" (143.5 cm) phase assembly	1
96	010096	8-32 x 3/8" (1 cm) stainless steel machine screw	3	BE		3/4" x 36" (1.9 x 91.4) aluminum tube	1
110	203110	Mast mount rings	2	BF		5/8" x 48" (1.6 x 121.9) aluminum tube	1
115	050115	Vinyl boot connector	1	BG		1/2" x 36" (1.3 x 91.4) aluminum tube	1
116	240116	Silicone grease packet	1				
326	290326	Danger label	1				

#1 - ASSEMBLE TUNING RING

Mount one half ring (RS) to the bottom side of the lower bracket on the base assembly (BA) using hardware shown in Figure 1. Mount the other half ring to the top of the upper bracket. Connect the two half rings to form a circle around the base assembly.

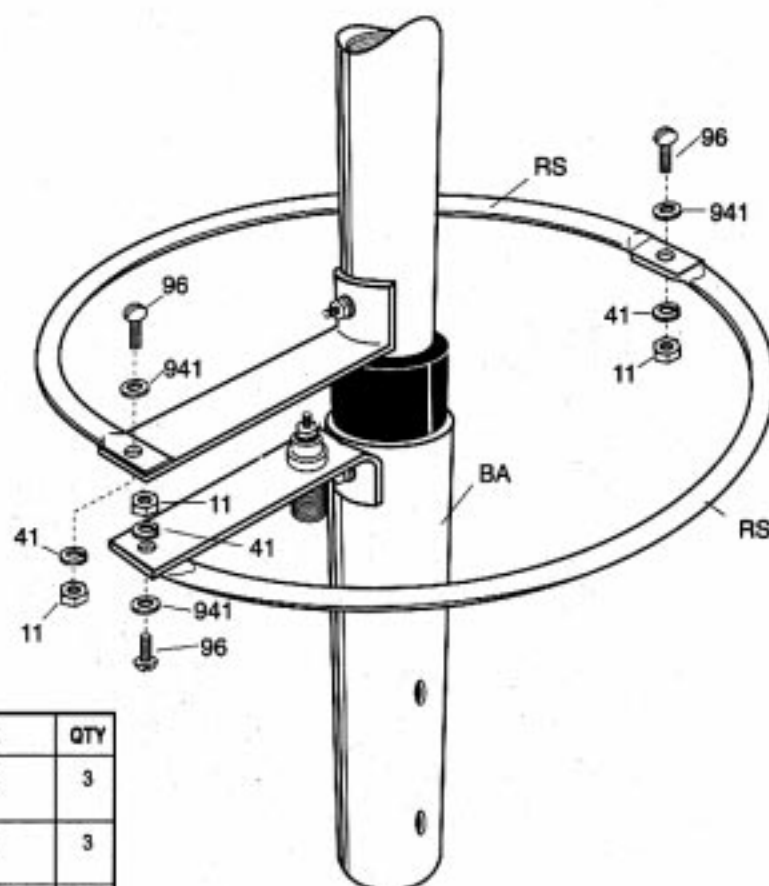



FIGURE 1

KEY	PART #		DESCRIPTION	SIZE	QTY
11	010011		Stainless Steel Hex Nut	8-32	3
41	011941		Stainless Steel Split Lock Washer	#8	3
96	010096		Stainless Steel Machine Screw	8-32 x 3/8" (.9 cm)	3
941	360941		Stainless Steel Flat Washer	1/4" (.6 cm)	3
BA			Base Assembly		1
RS			Ring Sections		2

#2 - ASSEMBLE BASE

Assemble the tuning rod clamp (93) using machine screw (9) and hex nut (11) per figure 2-A. Slide the clamp (93) over the ring (RS) and insert the tuning rod (70) through the holes in clamp (93). Attach the flattened end of the tuning rod to the threaded stud of the coax fitting with hardware (41 & 11) figure 2-B. The exact position of the tuning rod will be determined during the tuning procedure after assembly. Attach the two mast mount rings (110) to the base using the holes provided. Assemble the locking screws (83) along with nut (85) and washer (84). Loosely attach the mast rings to the base. Affix the danger labels (326) to the base assembly as shown in figure 2.

KEY	PART #		DESCRIPTION	SIZE	QTY
9	010009		Stainless Steel Machine Screw	8-32 x 5/8" (1.6 cm)	1
11	010011		Stainless Steel Hex Nut	8-32	2
41	011041		Stainless St. Split Lock Washer	#8	1
70	082070		Aluminum Tuning Rod	3/16" (.5 cm)	1
83	010083		Stainless Steel Machine Screw	1/4-20 x 1-1/4" (3.2 cm)	4
84	010084		Stainless Steel Lock Washer	1/4-20	4
85	010085		1/4-20 SS Hex Nut		4
93	200093		Tuning Rod Clamp		1
110	203110		Mast Mount Ring		2
326	290326		Danger Label		1

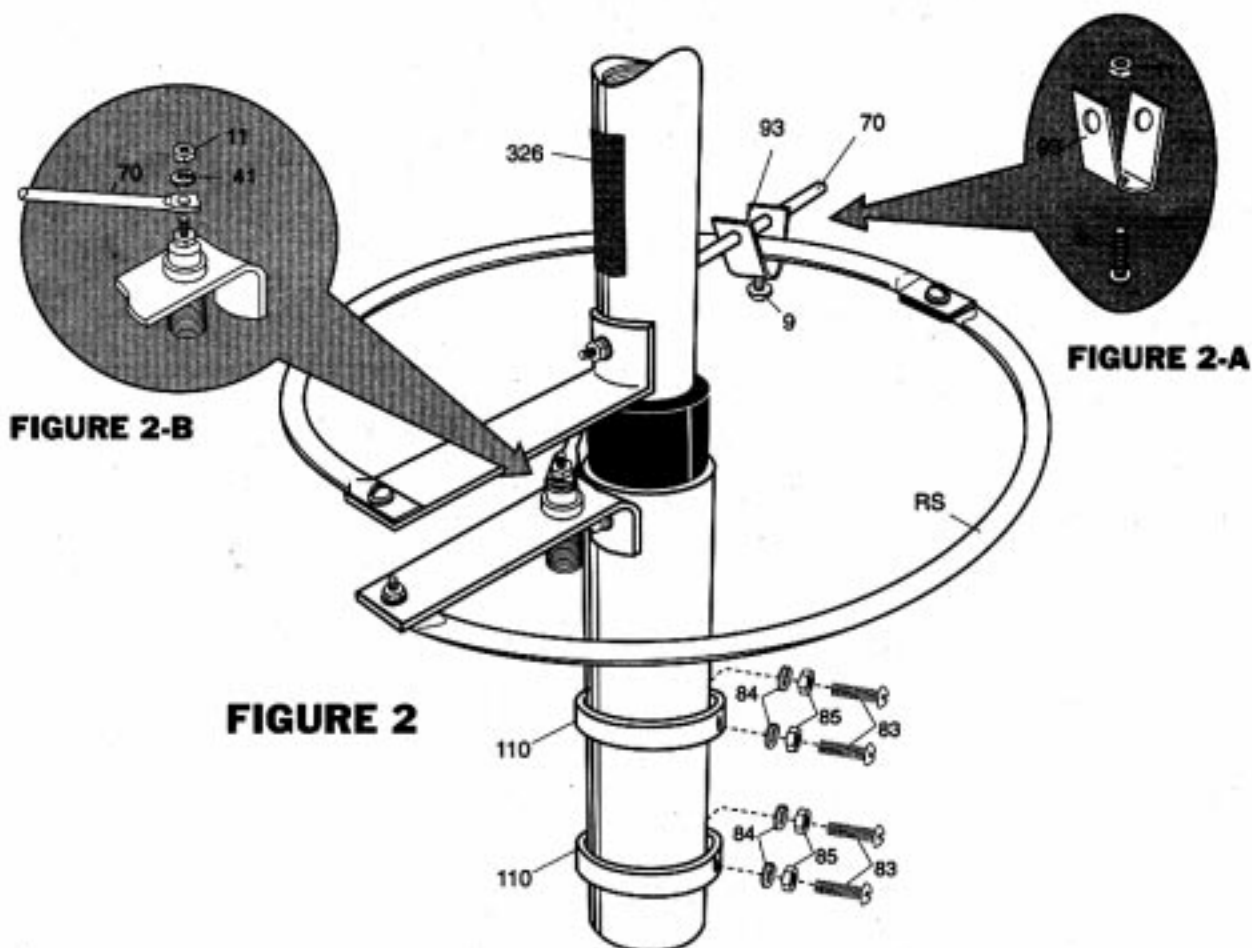

#3 - ASSEMBLE RADIATOR

Slide clamp (412) over slotted end of base and insert non-slotted end of tube BB at least 4" (10.1 cm). Using the same procedure, assemble the remaining sections using the appropriate worm clamps. Set dimensions A and B while referring to Cart 1. Tighten all worm clamps and place cap (53) on the top of the radiator.






KEY	PN		DESC.	SIZE	QTY
53	050053		Black Plastic Cap	1/2" (1.3 cm)	1
409	030409		Stainless Steel Worm Clamp	7/8" (2.2 cm)	2
410	030410		Stainless Steel Worm Clamp	1" (2.5 cm)	2
411	030411		Stainless Steel Worm Clamp	1-1/4" (3.2 cm)	1
412	030412		Stainless Steel Worm Clamp	1-1/2" (3.8 cm)	1
BB			Aluminum Tube	1-1/8" x 48" (2.9 x 121.9 cm)	1
BC			Aluminum Tube	1" x 48" (2.5 x 121.9 cm)	1
BD			Phase Section	56-1/2" (143.5 cm)	1
BE			Aluminum Tube	3/4" x 36" (1.9 x 91.4 cm)	1
BF			Aluminum Tube	5/8" x 48" (1.6 x 121.9 cm)	1
BG			Aluminum Tube	1/2" x 36" (1.3 x 91.4 cm)	1

FIGURE 3

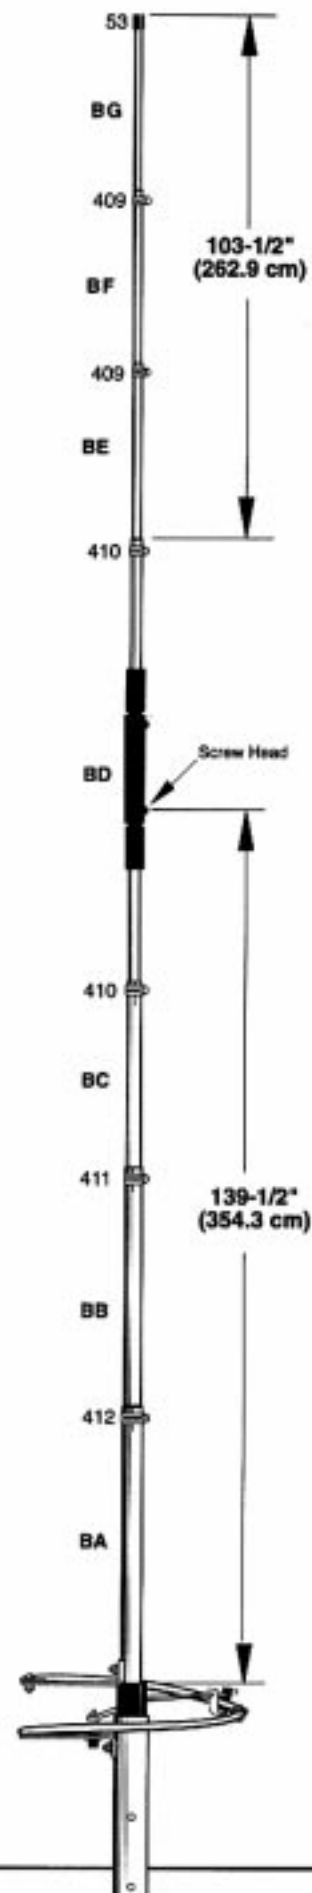

#4 - MOUNT ON MAST

The ARX-6 can be mounted on a mast with an outside diameter of 1-1/2" to 1-3/4" (3.8-5.1 cm). Slide the antenna over the mast as far as it will go and secure by tightening locking screws and nuts (figure 4).

#5 - FEEDLINE

The ARX-6 is designed for use with 50 Ohm coaxial cable terminated with a PL-259 connector. Any length of cable can be used with your ARX-6. The shortest length of cable will have the least loss. A connector boot is included for use with your new antenna (figure 4). Slide the boot over the cable before attaching your PL-259. Coat only the outside connector threads and shell with silicone grease. Do not coat the center pin or receptacle. After the PL-259 is firmly screwed onto the antenna connector, slide the vinyl boot over the connector and against the connector bracket for a good weather-tight connection. After the antenna is on the mast, tape the feedline to the mast. For final tuning see page 1.

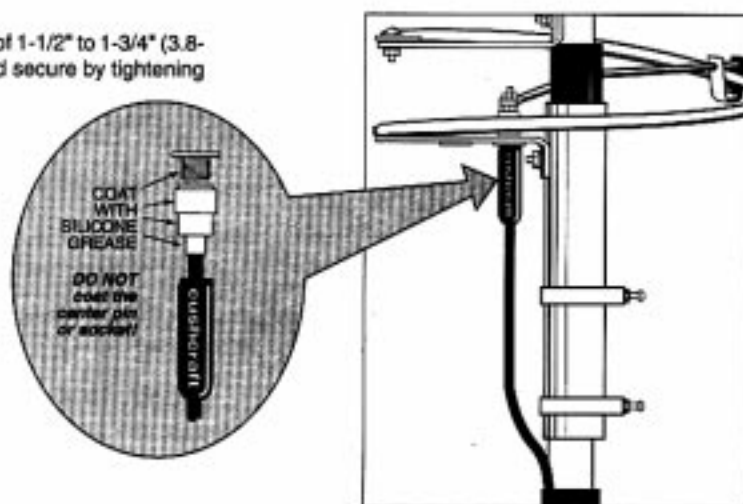


FIGURE 4

KEY	PN		DESC.	SIZE	QTY
115	050115		Connector Boot		1
116	240115		Silicone Grease		1

SPECIFICATIONS

MODEL	ARX-6	MODEL	ARX-6
Frequency, MHz	50-54	Ring Diameter, in (cm)	13 (33)
SWR 1.2:1 Typical		Base Dia, in (cm)	2 (5.1)
2:1 Bandwidth, MHz	>4	Height, ft, (m)	24 (7.3)
Gain, dB	5.5	Mast Range, in (cm)	1.5-1.75 (3.8-4.4)
Pwr Rating, Watts FM	1000	Wind Load, ft ² (m ²)	1.9 (.18)
Radiation Angle, Deg.	360	Weight, lb (kg)	7.5 (3.4)
Horizontal Radiation Pattern, Degrees	360		

LIMITED WARRANTY

Cushcraft Corporation, P.O. Box 4690, Manchester, New Hampshire 03106, warrants to the original consumer purchaser for one year from date of purchase that each Cushcraft antenna is free of defects in material or workmanship. If, in the judgement of Cushcraft, any such antenna is defective, then Cushcraft Corporation will, at its option, repair or replace the antenna at its expense within thirty days of the date the antenna is returned (at purchaser's expense) to Cushcraft or one of its authorized representatives. This warranty is in lieu of all other expressed warranties, any implied warranty is limited in duration to one year. Cushcraft Corporation shall not be liable for any incidental or consequential damages which may result from a defect. Some states do not allow limitations on how long an implied warranty lasts or exclusions or limitations of incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty does not extend to any products which have been subject to misuse, neglect, accident or improper installation. Any repairs or alterations outside of the Cushcraft factory will nullify this warranty.



48 PERIMETER ROAD, MANCHESTER, NH 03108 • 603-627-7877 / TELEX 4949472 / FAX 603-627-1764

E-mail: techsup@cushcraft.com

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE