


# AMERITRON RCS-12

## AUTOMATIC ANTENNA SWITCH

### INSTRUCTION MANUAL

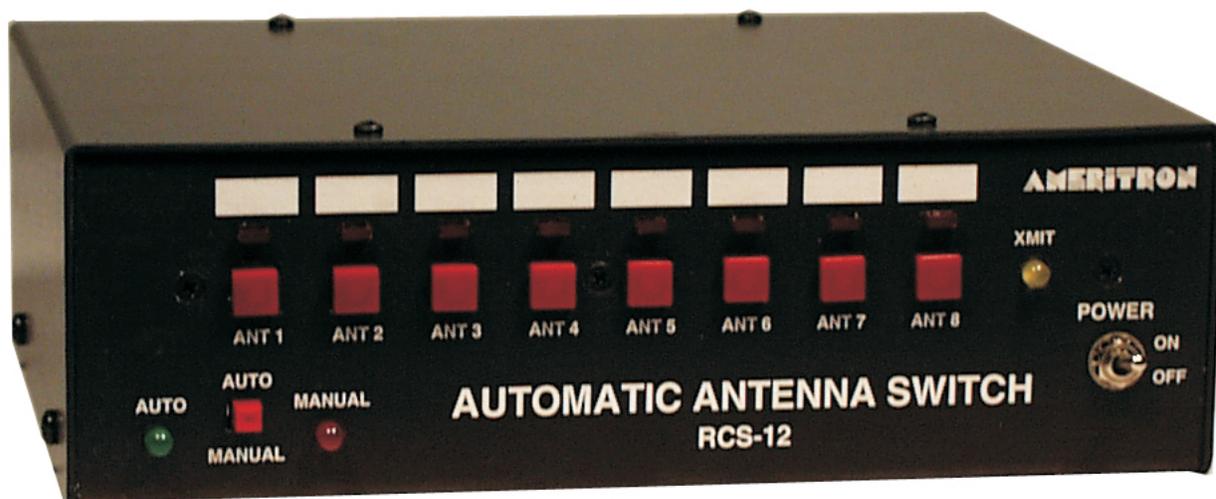

**PLEASE READ THIS MANUAL BEFORE OPERATING THIS EQUIPMENT !**

# **AMERITRON**

116 Willow Road  
Starkville, MS 39759 USA  
662-323-8211

# Contents

## THE BASICS

---

Introduction.....	1
Features.....	1
Specifications.....	1
Overview.....	2
Band Data Information .....	2
Hot Switch Protection.....	2
Front Panel.....	3
Rear Panel.....	3

## Installation

---

Powering the RCS-12 .....	4
Connection to Tower Mounted Relay Box .....	4
Using the RCS-10 Relay Box .....	4
Using Other Relay Boxes .....	4
Using Direct or Regulated Relay Voltage .....	5
Radio Interfacing .....	6
Icom.....	6
Yaesu .....	7
Kenwood.....	7
Auxiliary Input.....	8
Auxiliary Output.....	8
Radio Key In.....	9
Amp Key Out.....	9

## OPERATION

---

Manual Mode.....	10
Automatic Mode .....	10
Saving Antenna Selections .....	10
Erasing Antenna Selections .....	10

## APPENDICES

---

Setting Relay Switching Delay .....	11
Resetting the RCS-12.....	11
Troubleshooting .....	11
Technical Assistance.....	11
List of Accessories.....	11

## Introduction

Congratulations on your choice of the Ameritron RCS-12 Automatic Antenna Switch. The RCS-12 is specially designed to give you automatic antenna switching with hands free operation. This unit also has the flexibility to work with many different station configurations. Please read this manual thoroughly before operating your RCS-12.

## Features

**Easy to Operate:** The RCS-12 is straightforward and basic. Operate with ease in minutes!

**Easy to Program:** Automatic operation is easily accomplished, and is programmed much the same way as the presets on the AM/FM receiver in your vehicle.

**Compatibility:** This antenna switch has been designed to use the band data output, on your radio, to automatically switch antennas. This unit is compatible with most Icom, Yaesu, and Kenwood transceivers. Some other radios are also compatible.

**Versatile:** The RCS-12 will work with the 5 and 8 position tower-mounted relay boxes from Ameritron. However, the RCS-12 will work with any relays using up to 30VDC. Output formats can be 1 of 8, 3 line BCD, or 4 line BCD.

**Transmitter Protection:** The RCS-12 will not allow you to change antennas while you are transmitting. A user programmable delay is used to give the relays time to fully open, so that your transmitter will be completely protected against "Hot Switching."

## RCS-12 Specifications:

Input Voltage:	+13.8V – 30V DC
Output (Relay) Voltage:	+12V – 30V DC
Relay Output Format:	3 Line BCD, 4 Line BCD, or 1 of 8
Switchable Antennas:	Up to 8
Dimensions:	7.5" x 8.25" x 2.75"

## Overview

### Band Data Information

The RCS-12 will operate with simple push-button operation in Manual mode. In Automatic mode, the RCS-12 reads Band Output Data from the appropriate jack on the back of your transceiver(s). The RCS-12 is designed to work with most Icom, Yaesu, and Kenwood transceivers. There are separate inputs for each of these input types. Please read this manual carefully, because some older models of transceivers may have a different output format than newer ones.

**New Kenwoods:** This category is for new Kenwoods that have a DB-9 connector for computer control. Serial data is read from this port to get the band data.

**Icom:** Icom transceivers use a “step voltage” to output band data. A voltage from 0 - 8 Volts is output from the band data pin on the accessory jack.

**Yaesu, older Kenwoods, and others:** This category will cover most radios besides Icoms and newer Kenwoods. Yaesu outputs band data in a 4 line BCD format. Many other transceivers use this standard. The RCS-12 does not actually care what binary number the BCD data represents, it will match the “pattern” with whichever antenna you preset it to.

If your transceiver is not one of the above listed, please check in your instruction manual to see if it has a BCD output that is similar to that of Yaesu.


Also note that sometimes the same output will be used for more than 1 band. For example, Icom uses the same output for 15 and 17 meters, and 10 and 12 meters.

### Hot Switch Protection

The RCS-12 will fully protect your transmitter and antenna system from hot switching. This feature will prohibit you from switching antennas while your transmitter/amplifier is transmitting. Hot Switch protection is very useful during contesting, when antennas may need to be switched often. This feature also includes a user programmable delay that will allow sufficient switching time for the tower-mounted relays that you are using. This delay can be programmed from 10ms to 1s, default 50ms. See page 10 for more details. The hot switch protection sequence works as follows, assuming an antenna has already been selected.

Transmit, unkey → Delay 10ms → Select Antenna → Relay Switching Delay (10ms – 1s) → Transmit Again


**RCS-12 Front Panel**

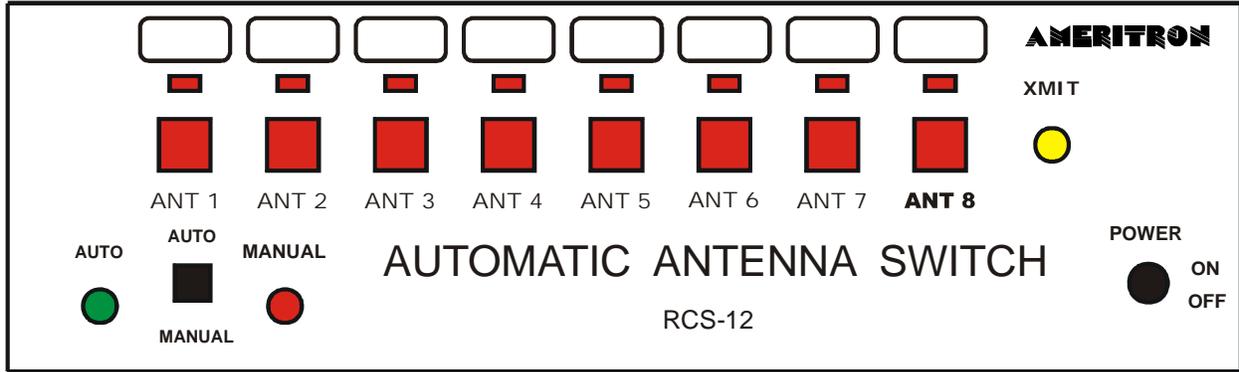

**Front Panel Description**

- 1. **Power Switch:** Unit Power Switch.
- 2. **Transmit Indicator:** Yellow LED Illuminates While Transmitting.
- 4. **Auto/Manual Switch:** Automatic (Green LED)/ Manual (Red LED).
- 5. **ANT 1 – ANT 8 Switches:** Selects Desired Antenna.
- 6. **ANT 1 – ANT 8 LED:** Illuminates Showing Selected Antenna and status

**RCS-12 Rear Panel**

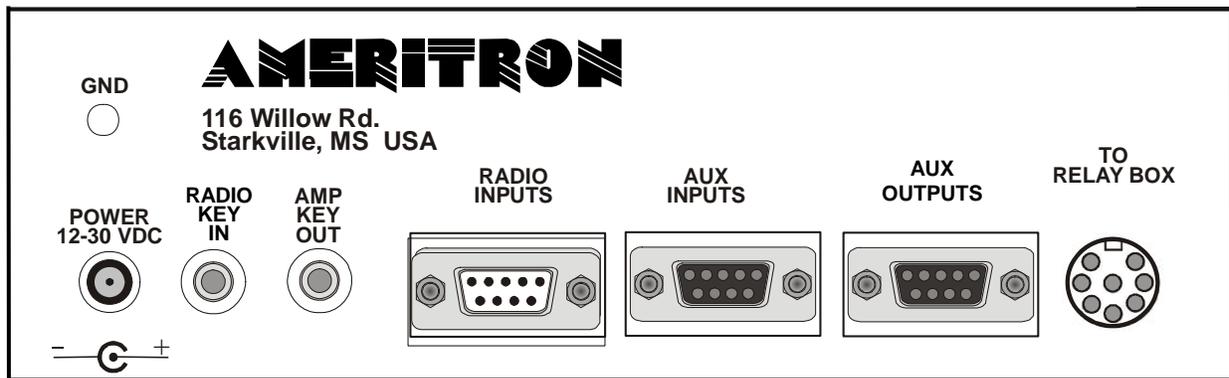

**Rear Panel Description**

- 1. **Power:** 2.5x5.5mm coaxial jack accepts +12V to +30V Volts DC
- 2. **Radio Key In:** Female Phono Jack, Radio Key Line from Radio
- 3. **Amp Key Out:** Female Phono Jack, Amp Key Line to Amp
- 4. **Radio Input:** DB-9 Male, Band Data Inputs/Radio Key from Transceiver
- 5. **Aux. Input:** DB-9 Female, Push-Button or Computer Control
- 6. **Aux. Output:** DB-9 Female, 1 of 8 Data Out and Transmit Flag
- 7. **Station Ground:** Ground Lug for Connection to Station Ground
- 8. **Relay Output:** 8-Pin Din Jack, Output to Tower-Mounted Relay Box

## Installation

### Powering the RCS-12

The RCS-12 accepts 2.5x5.5mm coaxial jack for power with a input voltage ranging from +12V to +30V DC. The input voltage is also used to provide the switching voltage needed for the Relay Box. The input voltage must be at least the voltage needed to control the Relay Box. If the relay's require +30VDC, then the input voltage into the RCS-12 must be +30VDC.

### Connecting the RCS-12 to the Tower- Mounted Relay Box

Locate the **Relay Output** jack on the rear left of the RCS-12. This 8-pin DIN jack provides the voltage to switch the relays in the tower-mounted switching box. The RCS-12 was designed to work with the RCS10/12 Relay Box and many other off the shelf relay boxes.

### Using the RCS-12 with the RCS-10 Relay Box

The RCS-10 Relay Box operates on 3-line BCD data; therefore, including ground, it requires a 4 conductor cable to connect it to the RCS-12. This cable should be fitted with an 8-pin DIN plug on the RCS-12 side and end-stripped on the relay box end so that it may be attached to the terminal strip on the RCS-10 (see the diagrams below and the RCS-10 manual). The RCS-12 may also be used with the RCS-8V if only 5 antennas are need with automatic selection, refer to the RCS-8V manual.

#### Wiring Pin Out and Relay Jack (Rear View)


- Pin 1 – BCD A
- Pin 2 – BCD B
- Pin 3 – BCD C



**NOTE: Ground is connected to the outer shell of the 8-pin din plug. Failure to connect ground to the outer shell will result in the relay box not operating correctly.**

### Using the RCS-12 with other brand relay boxes

The RCS-12 was designed to be compatible with most off the shelf relay boxes. The RCS-12 Control Head will work with any relay boxes using 3-line BCD, 4-line BCD, or 1 of 8 output; and require 12 – 30 VDC to switch the relays. The output format of the RCS-12 (BCD or 1 of 8) is changed by configuring J9, J10, and J11 on the PCB (see diagram below to configure the RCS-12). Position the jumper on the desired block to select the correct output needed for the relay box.

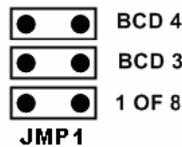


To connect the antenna switch to the relay box, the connections must be wired according to the output chosen. The following diagram shows the connections to the relay jack for each mode of output. Ground is provided using the outer shell of the plug.

3-line BCD	4-line BCD	1 of 8	Relay Connection Jack
<b>Pin 1</b> – BCD A <b>Pin 2</b> – BCD B <b>Pin 3</b> – BCD C	<b>Pin 1</b> – BCD A <b>Pin 2</b> – BCD B <b>Pin 3</b> – BCD C <b>Pin 4</b> – BCD D	<b>Pin 1</b> – Antenna 1 <b>Pin 2</b> – Antenna 2 <b>Pin 3</b> – Antenna 3 <b>Pin 4</b> – Antenna 4 <b>Pin 5</b> – Antenna 5 <b>Pin 6</b> – Antenna 6 <b>Pin 7</b> – Antenna 7 <b>Pin 8</b> – Antenna 8	 <p>(Rear View)</p>

### Selecting Direct or Regulated Relay Voltage

The RCS-12 provides two types of voltages for controlling the relays: Direct or Regulated. The default setting is Direct and uses the power supplied to the RCS-12 to drive the switching relays. The Regulated setting drives the relays using a 12V regulated supply. Selecting the correct modes is accomplished setting JMP 4 located towards the front of the RCS-12.


#### Relay Power (JMP 4)

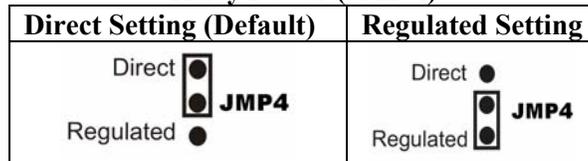

**WARNING: NEVER APPLY MORE THAN +30 VDC TO THE RCS-12 POWER JACK. The RCS-12 is compatible with relay boxes using up to 30 VDC.**

### Interfacing RCS-12 to Radio for Keying and Band Data


The RCS-12 is compatible with most Icom, Kenwood, and Yaesu radios for reading band data information and detecting transmitter keying. The Radio Input connection is a DB-9 female jack that has specific connections of each radio brand. The diagram below shows the pin-out of the Radio Input jack. See the specific section below for more information on interfacing to each particular radio brand.

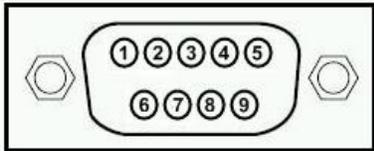Radio Input Port	Radio Input Pin-Out
 <p>(Rear View)</p>	<b>Pin 1</b> – Yaesu BCD B <b>Pin 2</b> – Yaesu BCD A <b>Pin 3</b> – Kenwood RX <b>Pin 4</b> – Kenwood TX <b>Pin 5</b> – Icom Band Data <b>Pin 6</b> – Ground <b>Pin 7</b> – Radio Key In <b>Pin 8</b> – Yaesu BCD D <b>Pin 9</b> – Yaesu BCD C

**NOTE: Multiple radios cannot be connected to the RCS-12 at the same time. The RCS-12 is designed to operate with only single radio.**

### Interfacing to Icom Radios


In order to retrieve band data from Icom radios, the RCS-12 must be connected to the band data voltage output. This can be found on the ACC jack on the back of the radio. This 13-pin jack has the band data voltage, amp key out (goes to ground when the radio is transmitting), and ground. The diagram below shows the connections required between an Icom radio and the RCS-12.

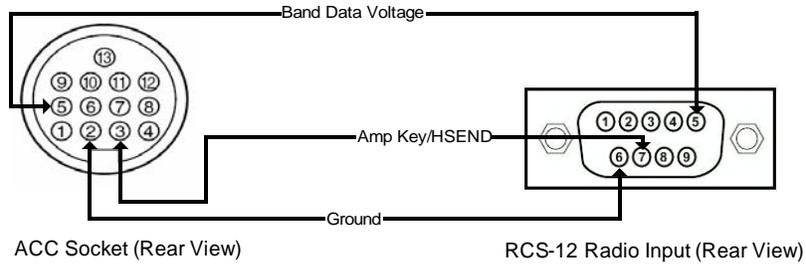

### Icom Interface to RCS-12


Connection	RCS-12 Radio Input	Icom ACC Socket
Band Data Voltage	Pin 5	Pin 5
Amp Key	Pin 7	Pin 3
Ground	Pin 6	Pin 2

### IC-746 / 735

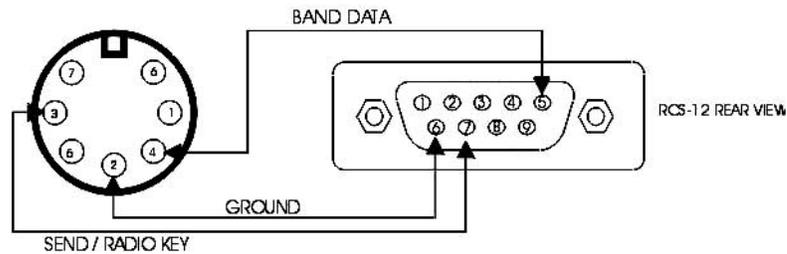

### Interfacing to Yaesu Radios


Yaesu radios output band information using a 4-line BCD format. The band data lines can be found on the Linear port on most Yaesu radios. Some radios share the CAT port with the Linear port. The radio must be configured so that the port is in Linear mode or the band data information will not be sent to the RCS-12. Check your radio's manual to determine proper configuration of the Linear port. The diagram below shows the connection to the RCS-12. Double check with your radio's manual to ensure the correct connections for the Band Data.

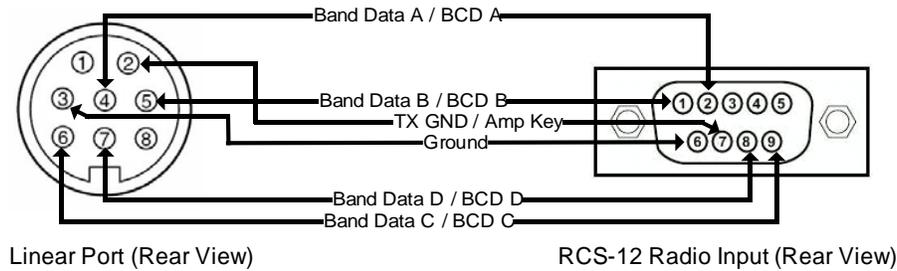

**Yaesu Interface to RCS-12**

### Interfacing to Kenwood Radios

The Computer port (CAT) is used to retrieve the frequency of the radio. When the RCS-12 is first turned on, the "Auto Information" (AI) command is sent to the radio. This command causes the Kenwood radio to output the state of the radio (frequency, mode, etc) anytime the state has changes. The RCS-12 then uses the frequency to determine the appropriate band and then selects the correct antenna. The diagram below shows how to connect a Kenwood radio with a DB-9 Com port to the RCS-12. Note that pin 7 and 8 (RTS, CTS) on the Kenwood port are connected together. This ensures that the Kenwood will send the status information to the RCS-12. The Remote port is also found on the back of the Kenwood which has the amp key line needed for the RCS-12. There is one second delay from when the status of the radio changes until it is sent out over the serial connection.

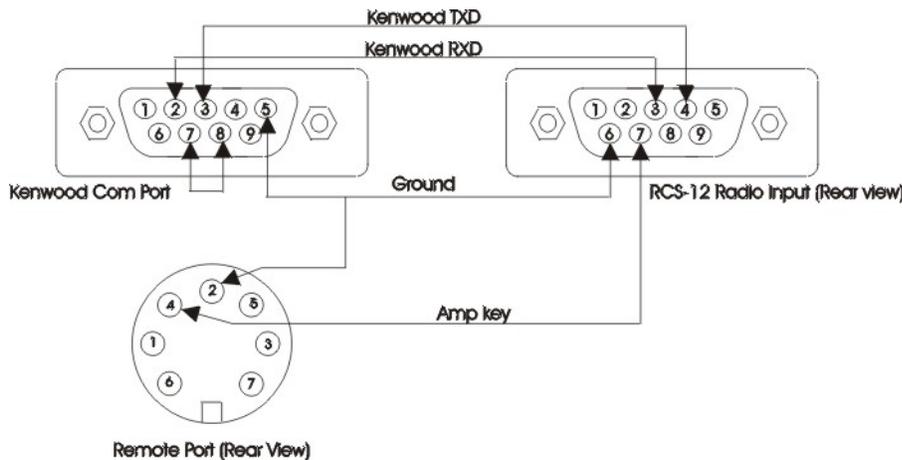

**Kenwood Interface to RCS-12**


#### Note About Kenwood Radios

Since the Radio Control Port is used to get the band information from the radio. The radio must be switched on first before powering up the RCS-12. Upon power up, the RCS-12 sends the Auto Information (AI) command to the Kenwood radio. This instructs the Kenwood to send the radio's status information anytime it changes. Failure to do this will result in the radio not receiving this command and the RCS-12 not detecting a properly connected radio.

Anytime the status of the radio changes, there is a one second delay before the new information is sent over the serial line to the RCS-12. This causes the switch to appear to respond slowly to the band changes. This is a result of the delay from the Kenwood radio, **NOT** the RCS-12.

## Auxiliary Input

The Auxiliary Input Port allows remote control of the antenna buttons on the antenna switch. The port is a female DB-9 connection with the pin-out shown below. Applying a ground to any of the Aux pins will select the appropriate antenna. Each pin is a +5Vdc with a 10K ohm resistor series circuit. When pulled low, it will deliver .5 ma.

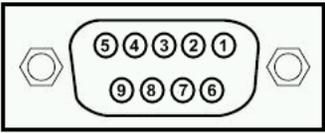
Auxiliary Input Port	Auxiliary Input Pin-Out
	<p><b>Pin 1</b> – Antenna 1  <b>Pin 2</b> – Antenna 2  <b>Pin 3</b> – Antenna 3  <b>Pin 4</b> – Antenna 4  <b>Pin 5</b> – Antenna 5  <b>Pin 6</b> – Antenna 6  <b>Pin 7</b> – Antenna 7  <b>Pin 8</b> – Antenna 8  <b>Pin 9</b> - Ground</p>

## Auxiliary Output

The Auxiliary Output Port has two functions depending on the setting of JMP3. The output can be either band data in 1 of 8 format or the current antenna selection. The default setting is band data.

Band Data	Antenna Out (1 of 8)
<p><b>JMP3</b></p>  <p><b>BAND 1 OF 8 DATA</b></p>	<p><b>JMP3</b></p>  <p><b>BAND 1 OF 8 DATA</b></p>

On the Band Data setting, the output is the transceiver’s band in 1 of 8 format for HF. UHF/VHF bands uses two pins. Pin 9 is also a TX line that goes to ground when the transmitter is keyed. This band data can be used to control another device that can accept data in 1 of 8 format. The diagram below shows the pin-out for each HF band.

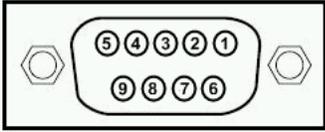
Auxiliary Output	Auxiliary Output (Band Data Setting)
	<p><b>Pin 1</b> – 160m  <b>Pin 2</b> – 80m  <b>Pin 3</b> – 40m  <b>Pin 4</b> – 30m  <b>Pin 5</b> – 20m  <b>Pin 6</b> – 17m  <b>Pin 7</b> – 15m  <b>Pin 8</b> – 12m/10m  <b>Pin 9</b> – TX Key</p>
<p><b>*Ground is on the shell of the DB-9 plug</b></p>	

When the transceiver or antenna is selected for a particular band. The pin on the Auxiliary Output jack will corresponding to the band will be 5V. When using UHF/VHF the output from the Auxiliary Output port will be as follows:

Band	Pins
6m	1 & 8
Sub 2m	1 & 7
2m	1 & 6
70cm	1 & 5
33cm	1 & 4
23cm	1 & 3

**NOTE: Some radios output the same band data for two bands such as the Icom (15m& 17m, 12m & 10m). Even though the radio has changed bands, it may not be reflected in the band data output of the radio.**

When the Auxiliary Output Port has been configured for Antenna Out. The output will correspond to the currently selected antenna. Pin 9 is a TX line that goes to ground when the transmitter is keyed. The diagram below shows the pin-out of the jack. The currently selected antenna’s pin on the Auxiliary Out will be +5V while the remaining pins will be 0V.

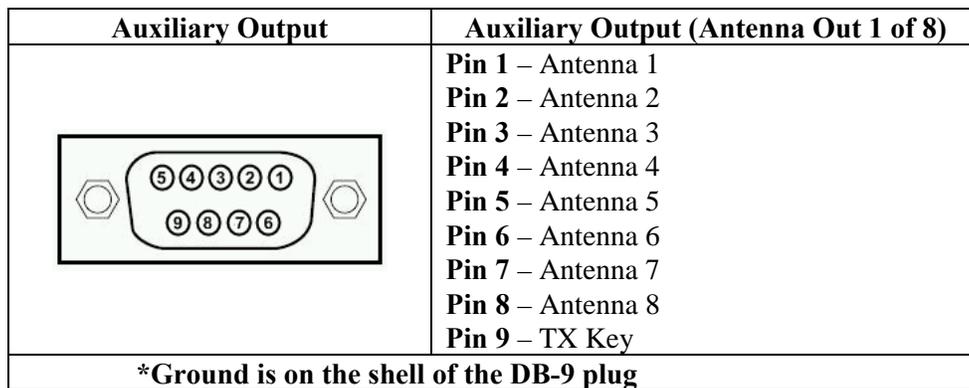

### Radio Key In

The Radio Key In jack, when pulled to ground, will prevent the RCS-12 from switching antennas. The Radio Key In jack is +5V open collector and will deliver 1mA when pulled to ground. This jack should be connected to the transceiver’s relay control line that goes to ground on transmit. This line is normally used for keying an amplifier.

The Radio Key In jack and Pin 7 of the Radio Input Port are the same connection. Use only one of the two connections.

### Amp Key Out

The Amp Key Out jack will go to ground when the Radio Key In line is pulled to ground. This jack is used for keying an amplifier’s T/R relay control line. This line can accept up to 25VDC at 1A. The Amp Key Out jack and Pin 9 of the Aux Output Port is the same connection.

## Operation

### Manual Mode

*Manual* mode is achieved when the *MODE* switch, on the front panel of the RCS-12, is in the out position. In this mode the RCS-12 will operate with simple push-button operation. Connection of the RCS-12 to your *Amplifier Key Line* will protect your station against “hot switching”. *Manual* mode also provides the function of letting a new antenna be selected while transmitting. The new antenna will be switched after the transmitter is unkeyed, with a 10 ms delay to make sure a linear amplifier has time to switch off. Do not attempt to use this function unless the *Amplifier Key Line* is connected to the *Radio Key In* on the rear panel of the RCS-12, or else you will invoke severe damage to your station equipment due to “hot switching.” Make sure the *TRANSMIT* LED on the front panel of the RCS-12 is always illuminated when transmitting.

**WARNING: Severe damage to your station equipment could happen if the *Amp Key Line* of your transceiver is not connected to the *RADIO KEY IN* jack on the rear panel of the RCS-12 – due to “hot switching.” See pages 6 & 7 for transceiver connections.**

### Automatic Mode

*Automatic* mode is achieved with the *MODE* switch in the in position. This mode will allow automatic selection to a user programmable antenna . Only one antenna for each band may be selected. Automatic antenna selection is accomplished by reading band data from the accessory port of your transceiver.

#### Saving Antenna Selections

In order to save an antenna selection, the radio must be connected to the RCS-12 and powered up. Set the radio to the band you wish to set the antenna for. If an antenna has not been saved for a particular band, the RCS-12 will sequentially light each antenna LED. Press and hold the desired antenna button for approximately 2 seconds. The antenna’s LED will light, the antenna will be selected, and saved to memory.

Multiple antennas can be saved for the same band. Saving other antennas is as simple as pressing and holding the antenna to be selected. If there is more than one antenna saved for a particular band the LEDs for the antennas saved, but not selected will flash. The RCS-12 will save all selected antennas for each band plus the last active antenna that was used on that band.

After programming all the selections for the band information that the radio can output, the RCS-12 will automatically select the correct antenna for each band. No other action is required by the user.

#### Erasing Antenna Selections

To erase an antenna selection simply select the band on the radio. Press the selected antenna button for approximately 2 seconds. The antenna LED will extinguish and the antenna LEDs will being to light sequentially.

## Setting Relay Switching Delay

With the power switch off, hold the *ANT 1* button while switching the RCS-12 power on. This allows the setting of the relay switching delay. The delay is selected by pressing one of the eight antenna selection buttons. The delays associated with each button are shown below. The default setting is 50ms (ANT 3).

ANT 1	ANT 2	ANT 3	ANT 4	ANT 5	ANT 6	ANT 7	ANT 8
1 ms	25ms	50ms	100ms	250ms	500ms	750ms	1s

The currently selected delay will have its associated LED lit and the remaining LEDs will be flashing. Press the antenna button corresponding to the new delay desired. The selected antenna LED will light and all the LEDs will flash confirming and saving your selection. The RCS-12 will then continue with normal operation.

## Resetting the RCS-12

Resetting the RCS-12 will clear out any saved settings and set the factory defaults. All saved settings will be **LOST!!** To reset the RCS-12, switch the power off. While holding *ANT 8*, power up the RCS-12. All the antenna LEDs will light for approximately 5 seconds. They will then flash confirming the unit has been reset.

## Troubleshooting

Problem	Solution
All LEDs are flashing on front panel.	RCS-12 is in automatic mode with no radio connected Check connection from RCS-12 to radio.  Multiple radios have been connected to the RCS-12. Only one radio can be connected at a time. Remove all but one of the radios.
LEDs are flashing sequentially rapidly.	There is not a saved antenna for the current band. Save an antenna for the band.
RCS-12 with Kenwood radio changes antennas slowly.	There is a one second delay from when the status of the radio changes until the information is serially sent out to the switch. Because of this, the RCS-12 will not see a band change until the information has been sent by the radio. This causes the RCS-12 to change antennas slower with the Kenwood radios.
Remote Relay box not selecting or selecting incorrect antennas.	Ensure the Output Select (J9, J10, and J11) is set for the correct output for the relay box. Check to ensure the wiring is connected to the relay box in the correct order.
Transmit LED not lit during radio transmission	Ensure the Amp Key from the radio is connected to the <i>Radio Key In</i> on the back of the RCS-12 on the Radio Input Jack (Pin 7) or the RCA Jack.

## **Technical Assistance**

If you have any problem with this unit first check the appropriate section of this manual. If the manual does not reference your problem or your problem is not solved by reading the manual, you may call *Ameritron* at 662-323-8211. You will be best helped if you have your unit, manual and all information on your station handy so you can answer any questions the technicians may ask.

You can also send questions by mail to Ameritron, 116 Willow Road, Starkville, MS 39759; by facsimile (FAX) to 662-323-6551. Send a complete description of your problem, an explanation of exactly how you are using your unit, and a complete description of your station.



## DISCLAIMER

Information in this manual is designed for **user purposes only** and is *not* intended to supersede information contained in customer regulations, technical manuals/documents, positional handbooks, or other official publications. The copy of this manual provided to the customer will *not* be updated to reflect current data.

Customers using this manual should report errors or omissions, recommendations for improvements, or other comments to Ameritron 116 Willow Road, Starkville, MS 39759. Phone: (662) 323-8211; FAX: (662) 323-6551. Business hours: M-F 8-4:30 CST.

## AMERITRON

**116 Willow Road  
Starkville, MS 39759 USA  
662-323-8211**

### LIMITED WARRANTY

Ameritron warrants to the original purchaser that this product shall be free from defects in material or workmanship for one year from the date of original purchase. During the warranty period, Ameritron (or an authorized Ameritron service facility) will provide free of charge both parts and labor necessary to correct defects in material or workmanship.

To obtain such warranty service, the original purchaser must:

- (1) Complete and send in the Warranty Registration Card.
- (2) Notify Ameritron or its nearest authorized service facility, as soon as possible after discovery of a possible defect, of:
  - (a) the model number and serial number, if any;
  - (b) the identity of the seller and the approximate date of purchase;
  - (c) a detailed description of the problem, including details on the equipment.
- (3) Deliver the product to the Ameritron or the nearest authorized service facility, or ship the same in its original container or equivalent, fully insured and with shipping charges prepaid.

Correct maintenance, repair, and use are important to obtain proper performance from this product. Therefore, carefully read the Instruction Manual. This warranty does not apply to any defect that Ameritron determines is due to:

- (1) Improper maintenance or repair, including the installation of parts or accessories that do not conform to the quality and specifications of the original parts.
- (2) Misuse, abuse, neglect or improper installation.
- (3) Accidental or intentional damage.

**All implied warranties, if any, terminate one (1) year from the date of the original purchase.**

The foregoing constitutes Ameritron's entire obligation with respect to this product, and the original purchaser and any user or owner shall have no remedy and no claim for incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damage, so the above limitation and exclusion may not apply to you.

This warranty gives specific legal rights and you may also have other rights, which vary from state to state.